

 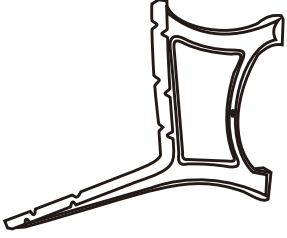


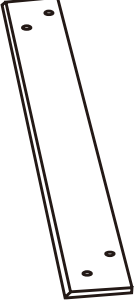




ASSEMBLY INSTRUCTION

109432 109433 109436_MGS-3350001 170CM

NO	PARTS	QTY
1		2 pcs
2		5 pcs
3		20 pcs
4		10 pcs
5		20 pcs
6		1 pc
7		1 pc

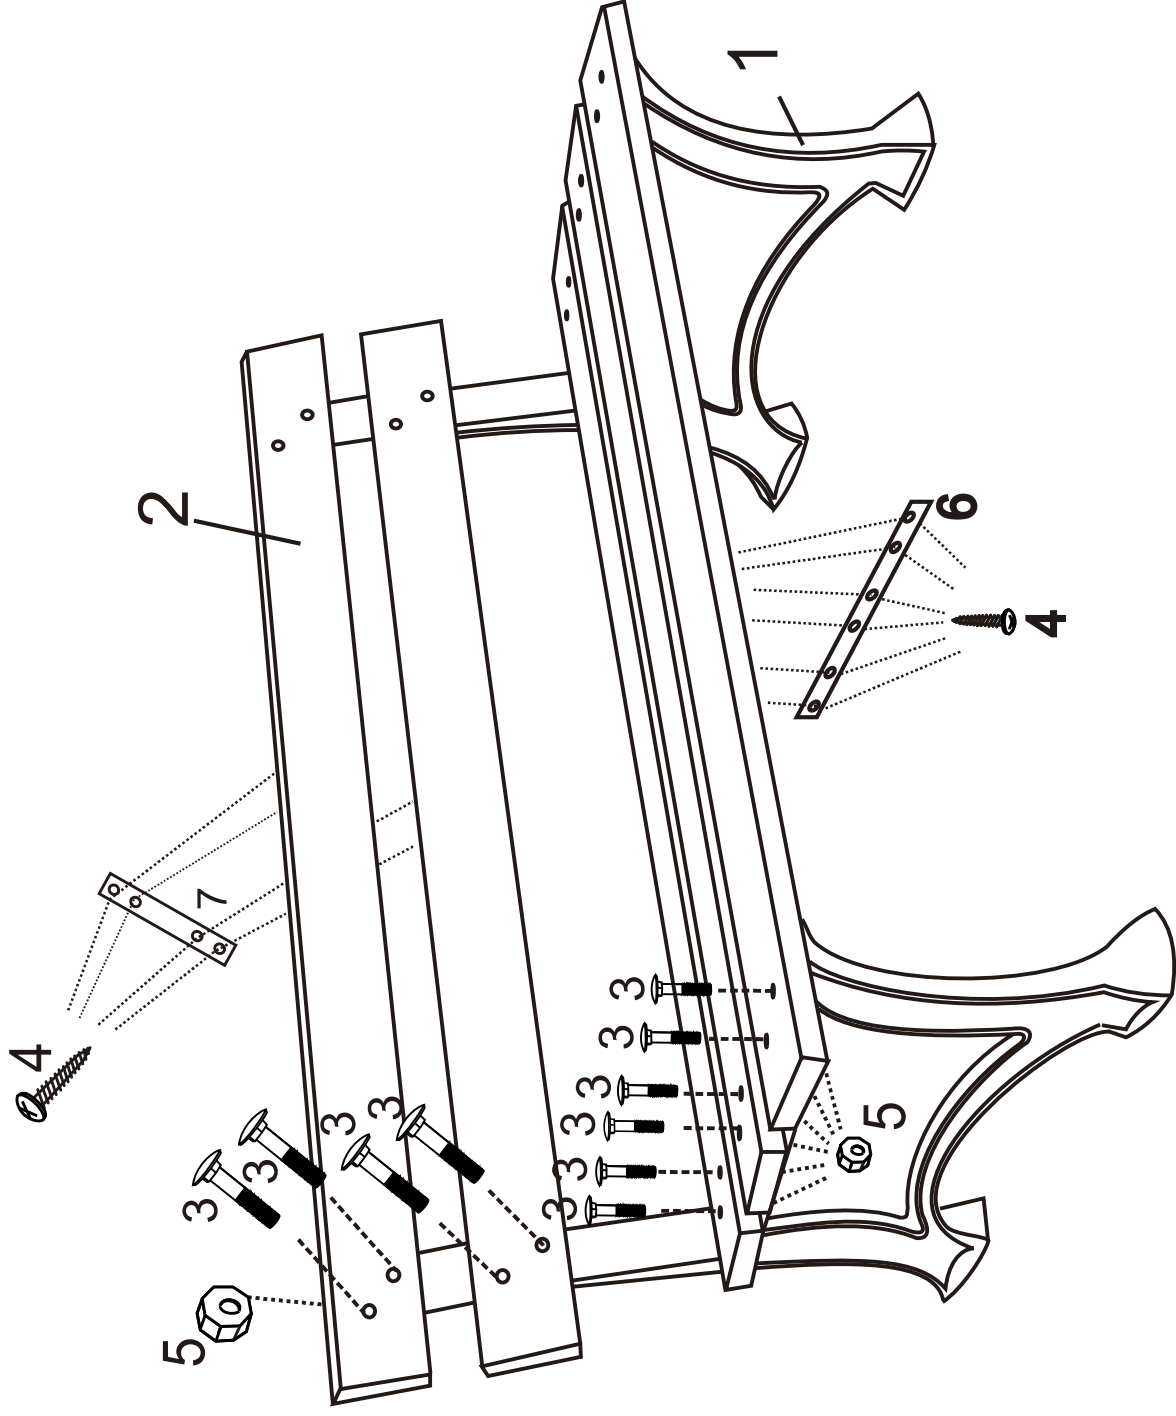

Please note /intended use

This outdoor furniture is intended for use in private living areas only. Use only as a seat. The seating is not suitable as a ladder replacement or gymnastic equipment for children. First screw in all screws only loosely and only tighten them when all screws are in the correct position.