



Electric Height Adjustable Desk
ASSEMBLY & USE INSTRUCTIONS

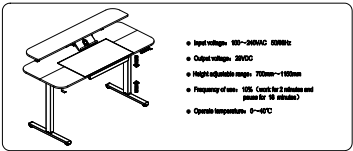


Packing List

NO.	Accessories	NO.	Accessories	NO.	Accessories	NO.	Accessories
1	X1	8	X1	16	X4	22	X2
2	X1	9	X1	17	X10	23	X2
3	X1	10	X1	18	X4	24	X1
4	X2	11	X1	19	X1	25	X1
5	X2	12	X1	20	X2	26	X1
6	X1	13	X1	21	X6	27	X1
7	X1	14	X1	28	X5	29	X2
Spare Parts							
	X1		X1		X1		X2

 
Step1:



 
Step2:



 
Step3:



 
Step4:



 
Step5:



 
Step6:



 Step7:



 Step8:



Step9:



Operating Instruction

S	Background the "W" button, and the display will show. Press the 1, 2, or 3 button to select the desired height setting to the button.
1	Press the "W" button, and the desk will move to the height that was previously set for that button.
2	Press the "W" button, and the desk will move to the height that was previously set for that button.
3	Press the "W" button, and the desk will move to the height that was previously set for that button.
▲	Press the "X" button to raise the desk continuously until it reaches the highest position of 1130mm (37.1") (1130mm) or the button is released.
▼	Press the "Y" button to lower the desk continuously until it reaches the lowest position of 710mm (23.0") (710mm) or the button is released.

Settings

Change Display Height Units	Press and hold the "W" button until a flashing "U" is displayed. Press "W" again, and "U" is displayed. Press "W" to select "U", press "A" or "Y" to switch between "W" (displaying) and "U" (displaying), and press "W" to save your choice.
Change Calibrate Detection Sensitivity	Press and hold the "W" button until a flashing "V" is displayed. Press "W" again, and "V" is displayed. Press "A" or "Y" to switch to "V" and press "A" or "Y" to switch between "V" (displaying) and "U" (displaying), and press "W" to save your choice.
Reset	Hold the "W" button for 10 seconds, and the desk will return to the default settings. Press "W" again, and the desk will return to the default settings.

Protection Mode Error Codes

H04	Overheating Protection: When the motor has been working continuously for 2 minutes, it will stop operating to prevent damage from overheating. Wait for at least 10 minutes before making any further height adjustment.
E10	Reverse Induction Warning: When working power and the direction are the same, power off, check the connection between the motor and controller, and power back on again.
E20	Overheating Warning: When the desk is assembled, if rotating the desk, into the steps of the desk and by again. If the direction is incorrect, follow the correct instructions before continuing use.
E02	Overheating Protection: Input voltage too high. If the correct AC adapter is being used, power off the desk, check the connection between power and the controller, and power on again.
E32	Underheating Protection: Input voltage too low. If the correct AC adapter is being used, power off the desk, check the connection between power and the controller, and power on again.
E31	Underheating Protection: Input voltage too low. If the correct AC adapter is being used, power off the desk, check the connection between power and the controller, and power on again.

