


Electric Height Adjustable Desk
ASSEMBLY & USE INSTRUCTIONS




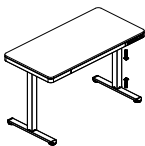


- Input voltage: 100~240VAC 50/60Hz
- Loading capacity: 70KG
- Height adjustable range: 710mm~1100mm
- Frequency of use: 10% (rest for 2 minutes and press for 10 minutes)
- Operate temperature: 0~40°C

Packing list

NO.	Accessories	NO.	Accessories	NO.	Accessories
①	X1	④	X2	⑦	X1
②	X1	⑤	X1	⑧	X1
③	X1	⑥	X8	⑨	X8
		⑩	X8	⑪	X2

Spare Parts
MB-18 X1
MB-20 X1

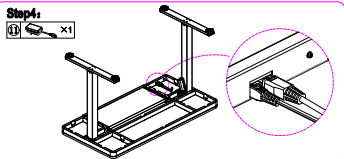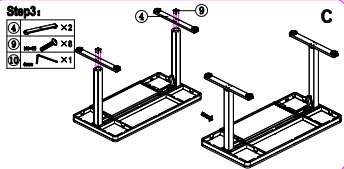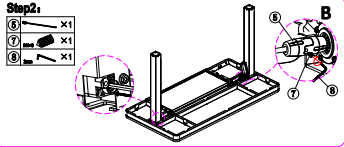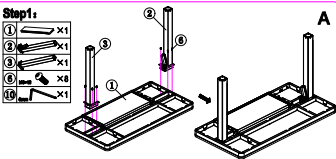

Operating Instruction

▲	Press the "▲" button to raise the desk continuously until it reaches the highest position of 1100mm (110cm) or the button is pressed.
▼	Press the "▼" button to lower the desk continuously until it reaches the lowest position of 710mm (71cm) or the button is released.
1	Press the "1" button, and the desk will move to the height that was previously set for that button.
2	Press the "2" button, and the desk will move to the height that was previously set for that button.
3	Press the "3" button, and the desk will move to the height that was previously set for that button.
S	Short press the "S" button, and the display will flash. Press the 1, 2, or 3 button to save the current height setting to that button.

Settings

Change Display Height Unit	Press and hold the "V" button until a beeping "V" is displayed. Press "V" again, and "m" is displayed. Press "V" to select it, press "▲" or "▼" to switch between "M" (Metric) and "I" (Imperial), and press "V" to save your choice.
Change Outline Detection Result	Press and hold the "V" button until a beeping "V" is displayed. Press "V" again, and "m" is displayed. Press "▲" or "▼" to switch to "OP" and press "V" to select it. Press "▲" or "▼" to switch between 0%, 5%, 10%, 15%, 20%, 25%, 30%, 35%, 40%, 45%, 50%, 55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, and 100%. Press "V" to save your choice.
Reset	Double pressing to the lowest level. Press and hold the "V" button for 5 seconds, and the screen will show "RST". Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes

Hot	Overheating Protection: When the motor has been working continuously for 2 minutes, it will stop operating to prevent damage from overheating. Wait for at least 10 minutes before making any further height adjustment.
E10	Encoder Malfunction Warning: Motor safety sensor can't be detected. Power off, check the connection between the motor and controller, and power back on again.
E20	Overheating Warning: Motor heat exceeded. If raising the desk, take the legs off the desk and let it cool. If lowering the desk, power off, take the legs off the desk, power back on, and let it cool.
E02	Operation Status Warning: The desk stops working if vibration, impact, or button are detected. If the detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the normal AC adapter is being used, power off the desk, check the connection between power and the controller, and power on again.
E31	Undervoltage Protection: Input voltage too low. If the normal AC adapter is being used, power off the desk, check the connection between power and the controller, and power on again.

