


Metall-Fahrradgarage HWC-H66 für zwei Räder

119200;119201;119202;
119203;119204;119205;
119206;119207;119208

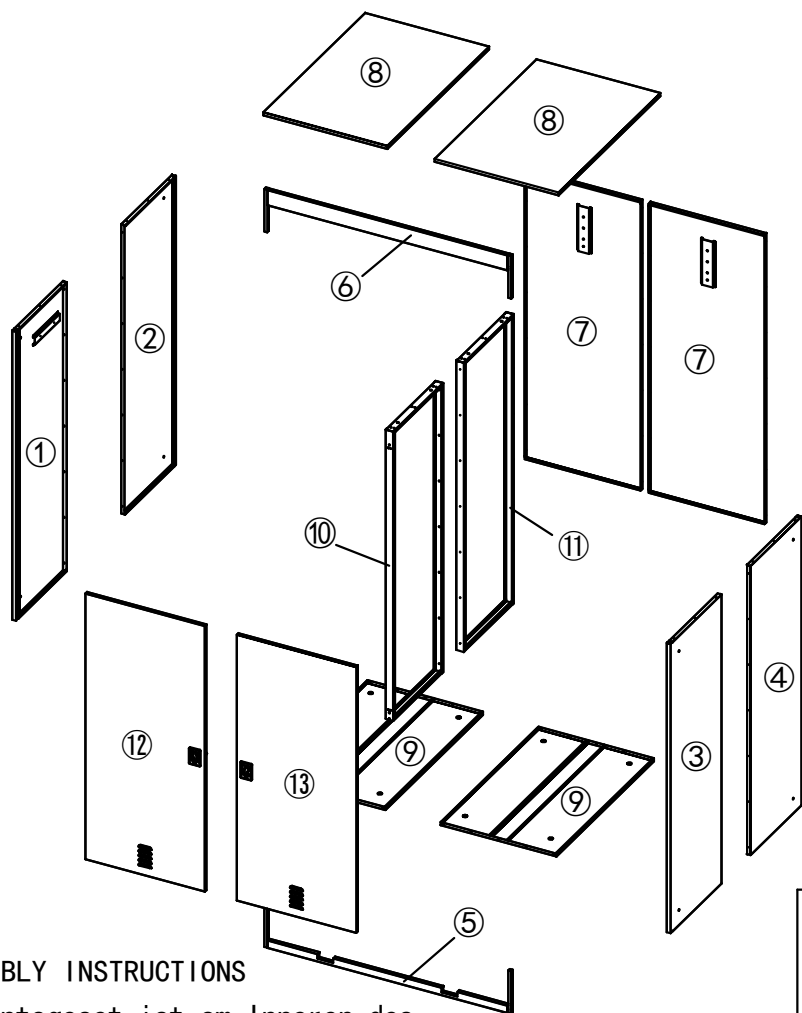

ASSEMBLY INSTRUCTIONS

Das Montageset ist am Inneren des Karton befestigt!

The assembly set is attached to the inside of the carton!


Le kit de montage est fixé à l'intérieur du carton!

Il materiale per il montaggio è posizionato all'interno della scatola fissato con il nastro adesivo!


El material de montaje se coloca dentro de la caja fijado con cinta adhesiva!

A M5x12 x144		
B M5x12 x8	C x2	D x2
E x2	F x4	G x8
H x4	I x4	J M5x80 x4


1.

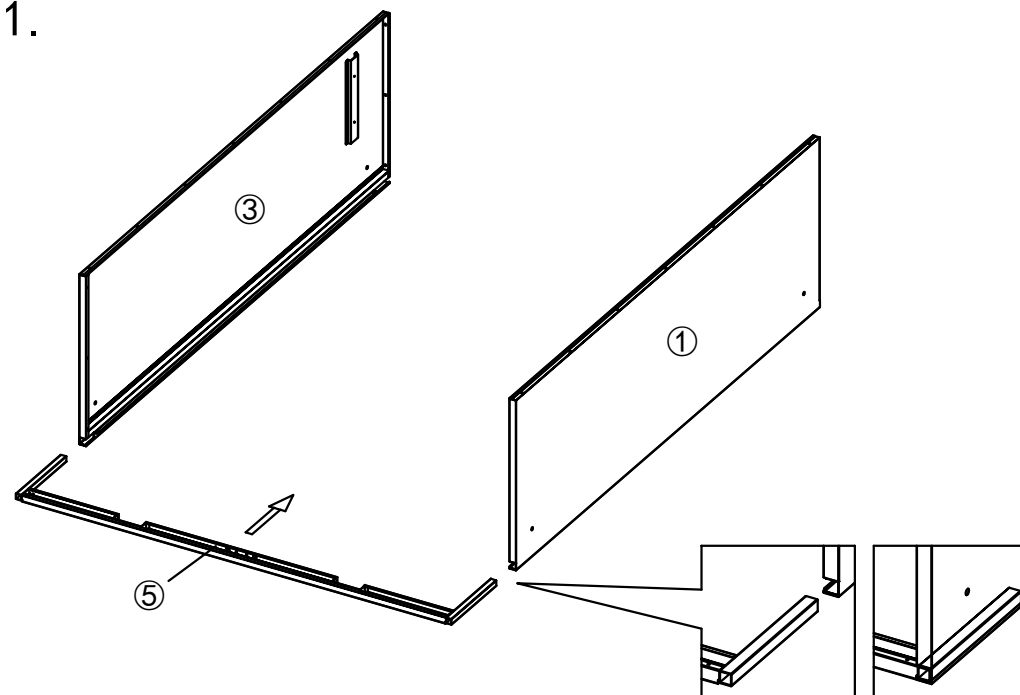


2.

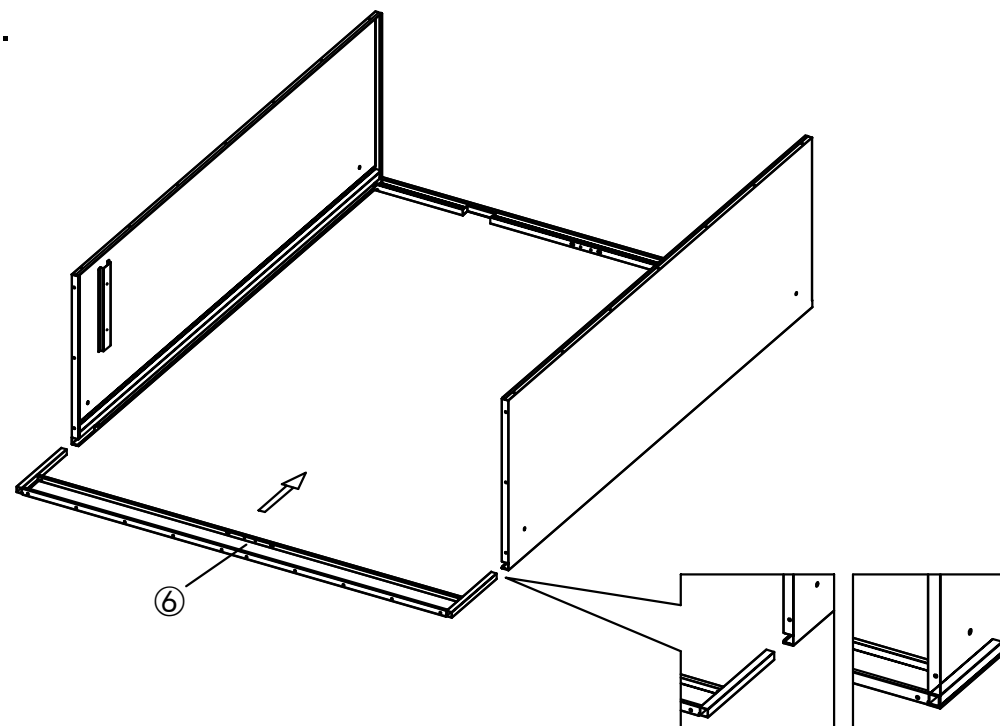


3.

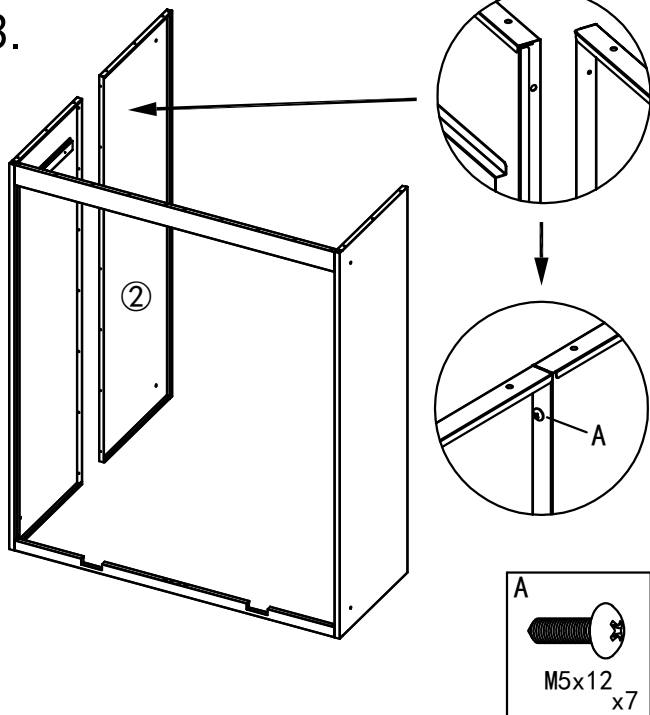


4.

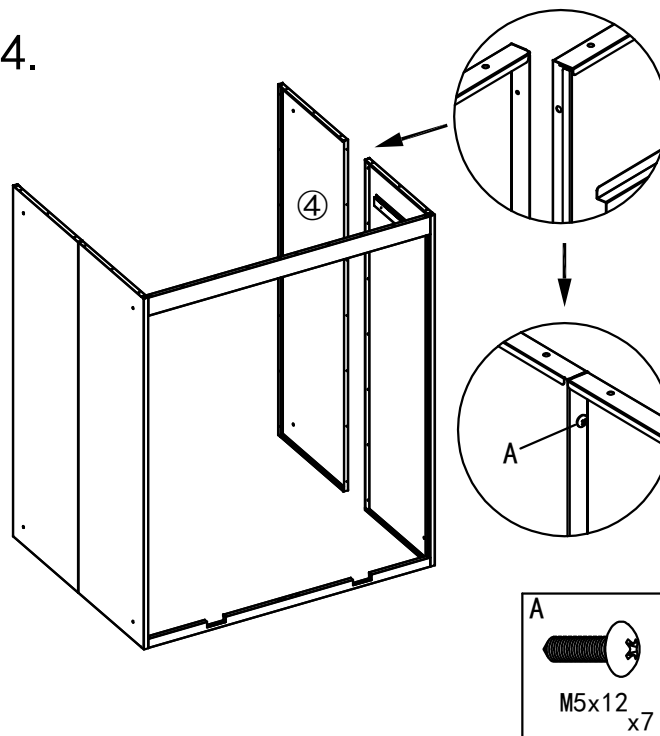


5.

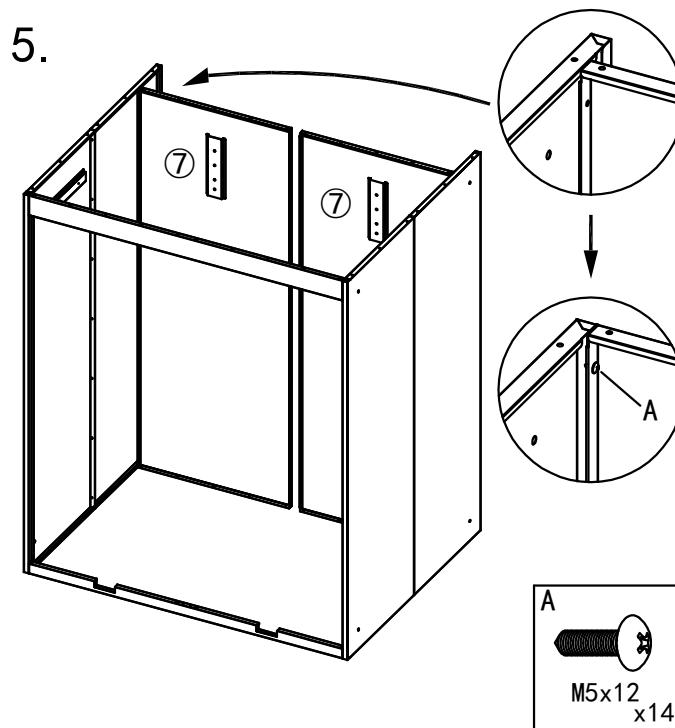


6.

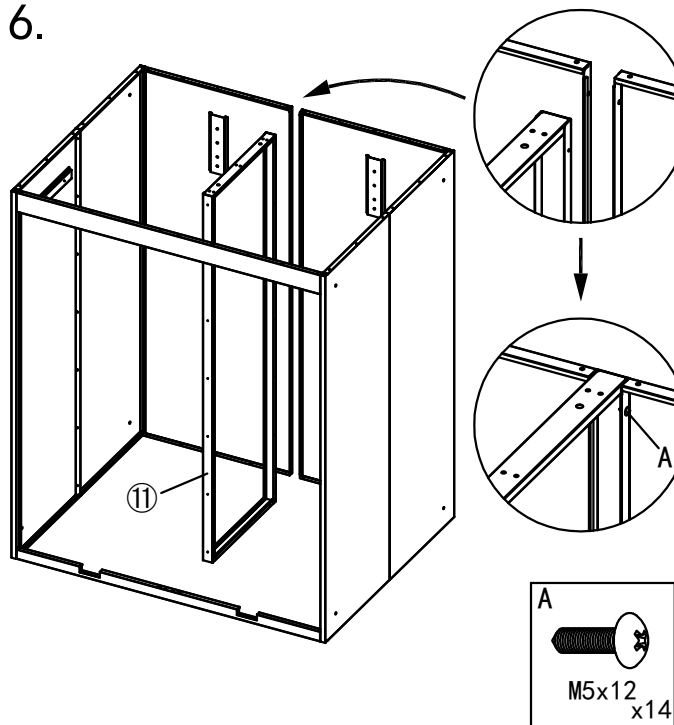





7.

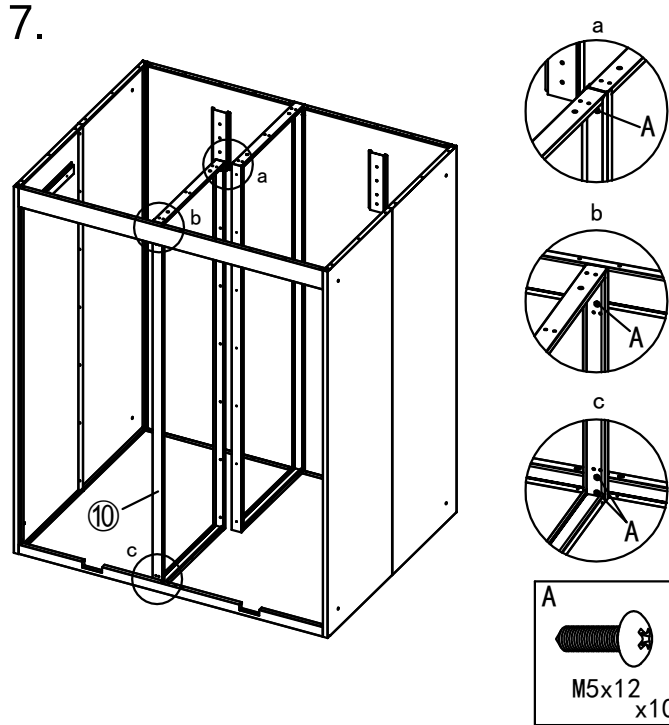





8.

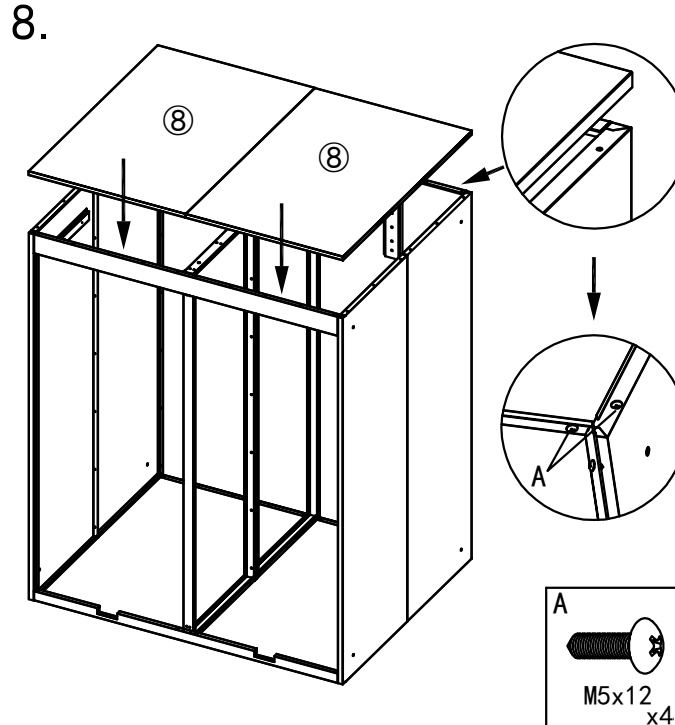




9.

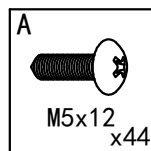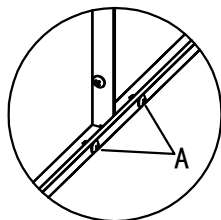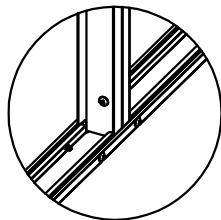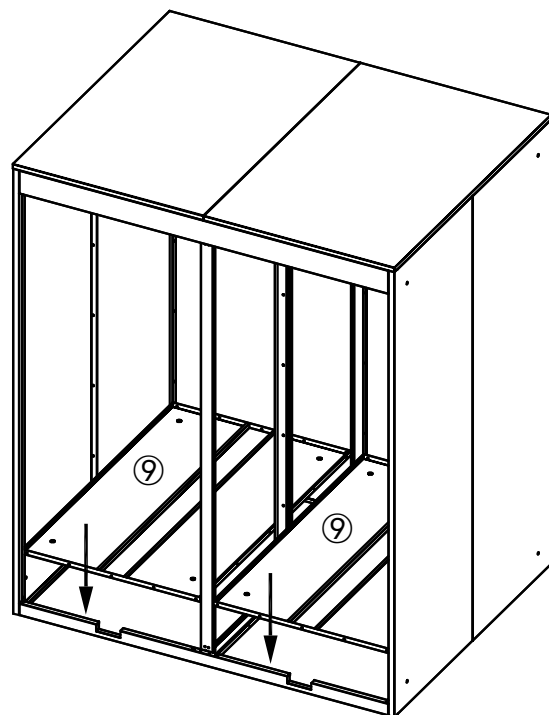

10.

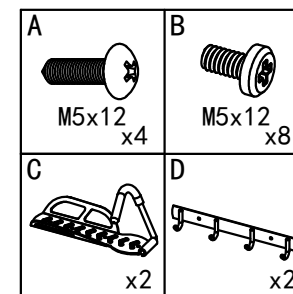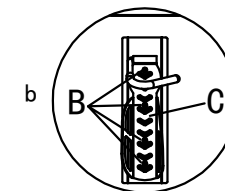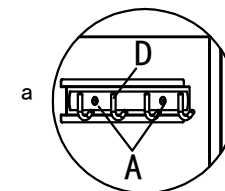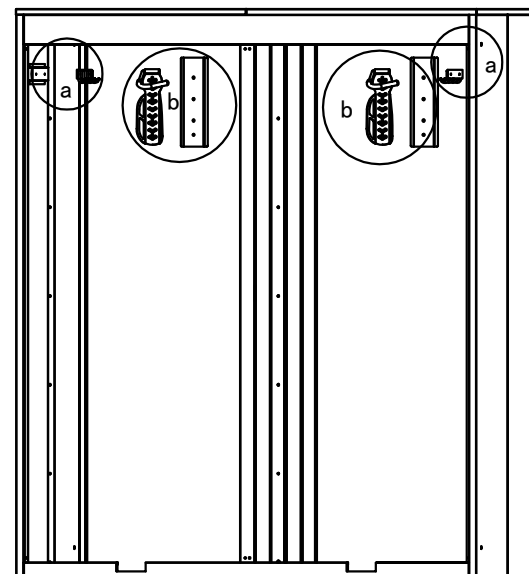

11.

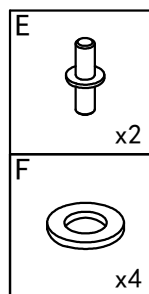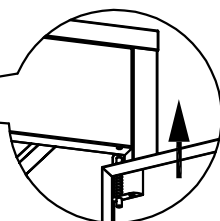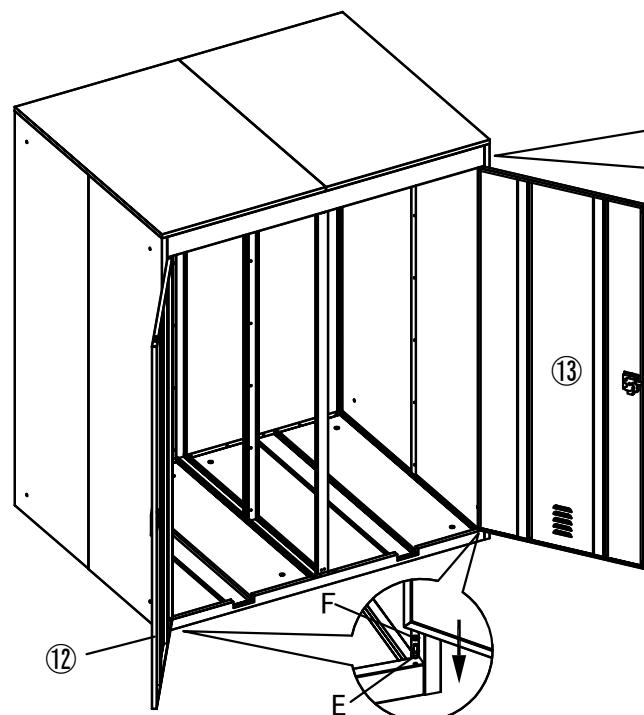

12.

