

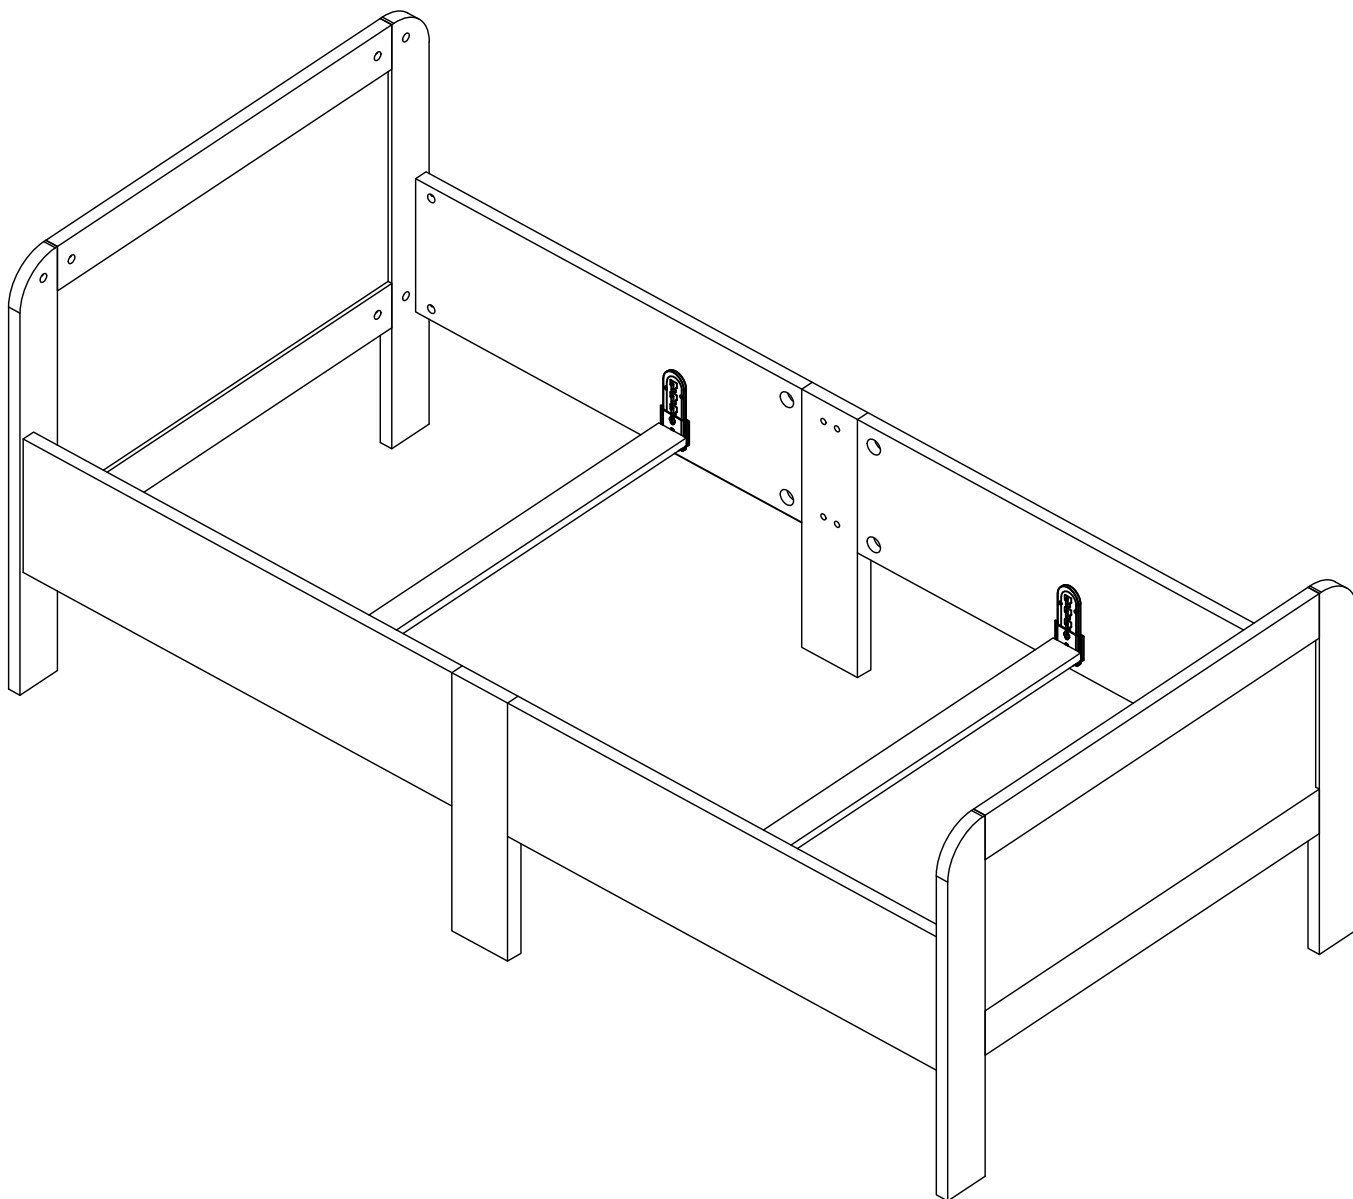





Hardware Box: carton no. 1/2

A		Φ10*30mm	24	I		Φ4*25mm	16
B		Φ10x80mm	8	J		M6	8
C		Φ16x20mm	24	K		21mm	24
D		M10x13mm	24	L			6
E		M8xΦ10x54	8	M		Φ3.5*14mm	8
F		140x46	4	N		45mm	8
G		80mm	8	O		Φ8*30mm	4
H		70x44	4	P			1

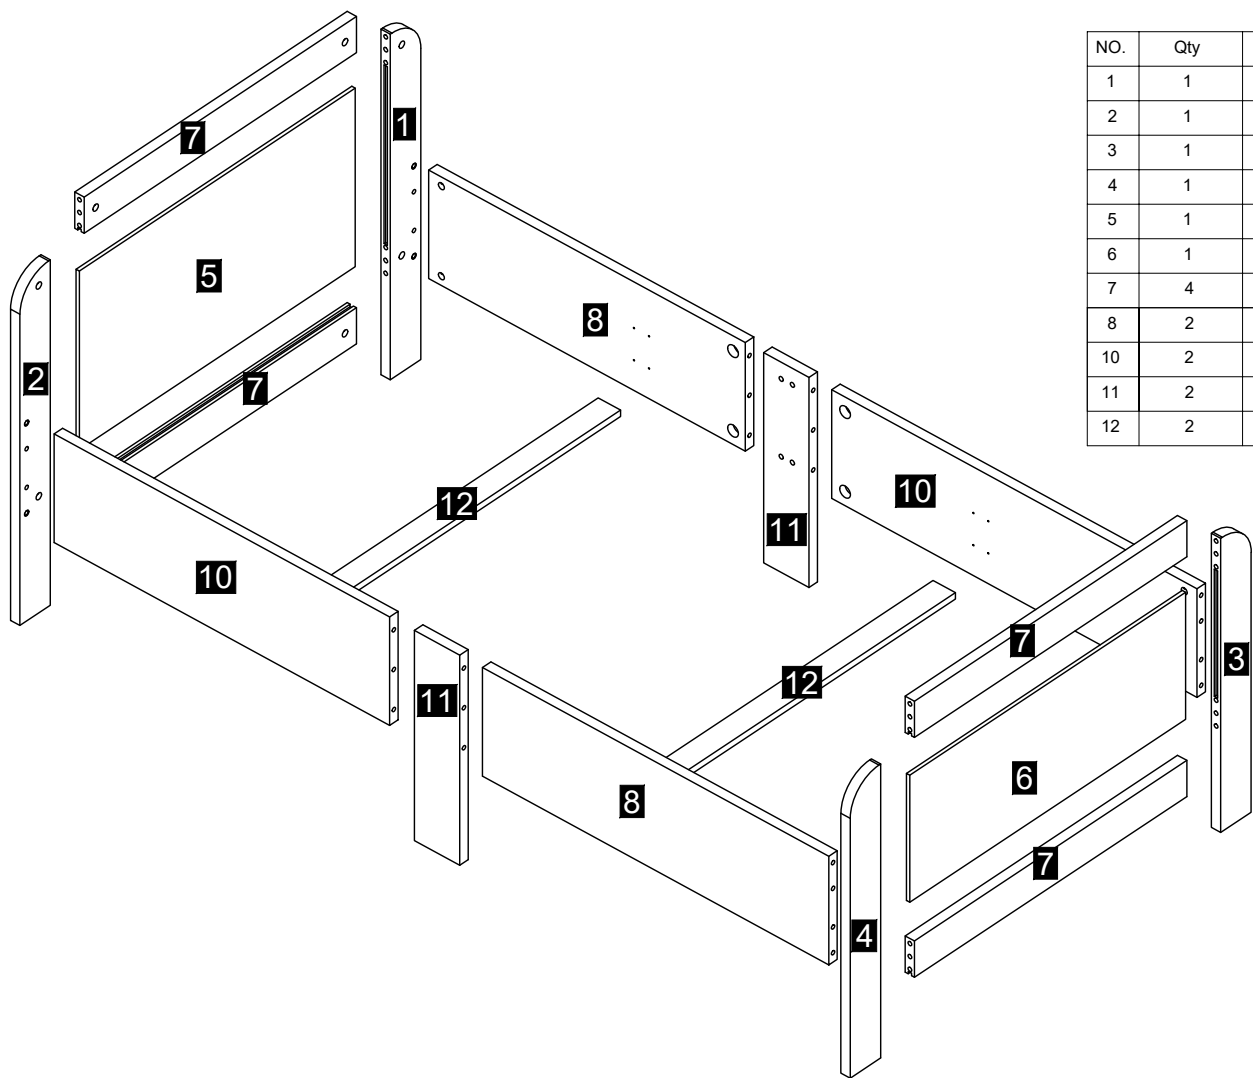

NO.	Qty	Ctn no
1	1	1/2
2	1	1/2
3	1	1/2
4	1	1/2
5	1	1/2
6	1	1/2
7	4	1/2
8	2	2/2
10	2	2/2
11	2	1/2
12	2	2/2

STEP:1





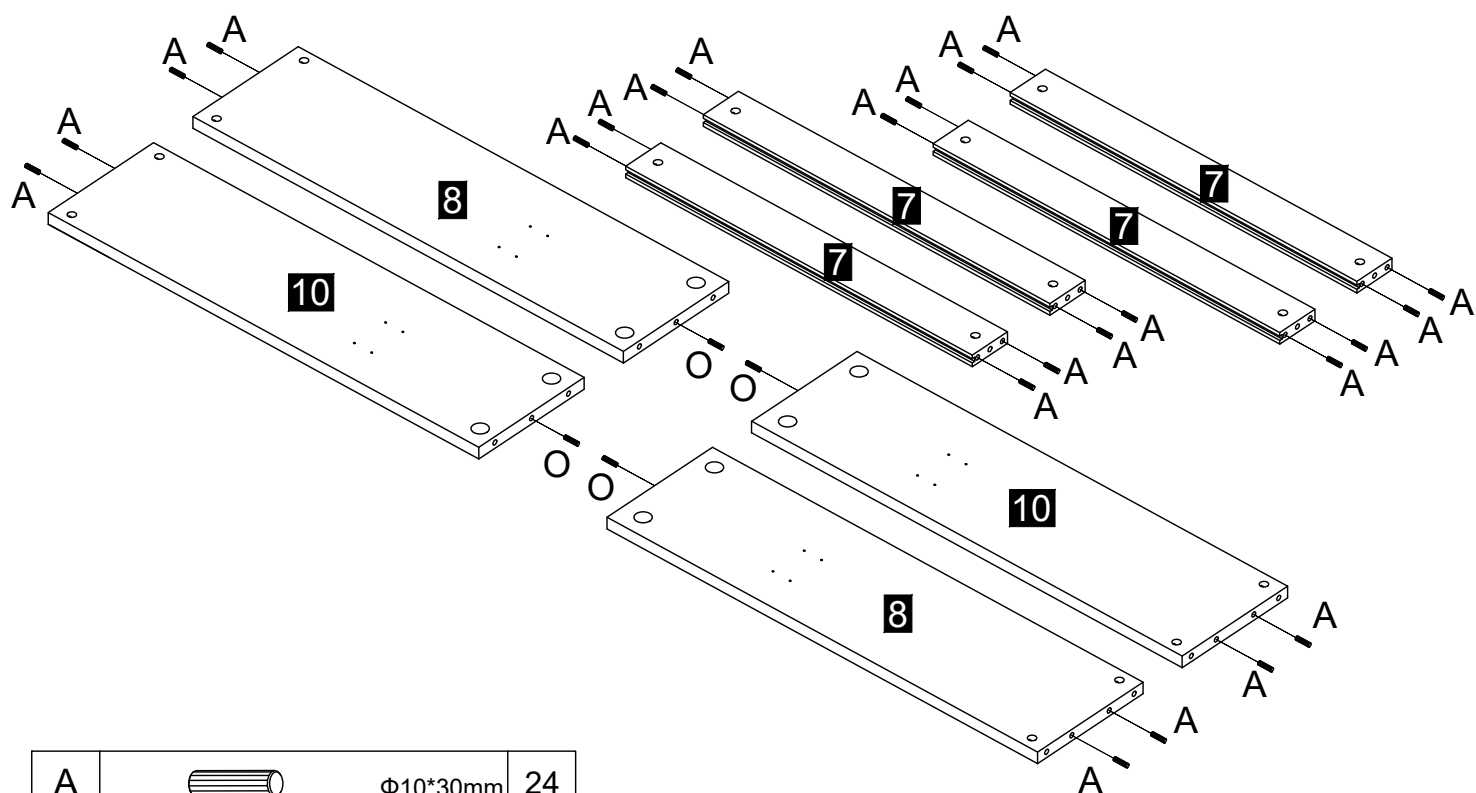


A		Φ10*30mm	24
O		Φ8x30mm	4

STEP:2


Achtung: Ziehen Sie die Schrauben beim ersten Zusammenbau von Kopf- und Fußteil nicht vollständig fest. Ziehen Sie sie erst dann zu 100 % an, wenn alle Holzteile flach und bündig ausgerichtet sind.

Warning: Do not tighten 100% screws when assemble headboard and footboard at first. Tighten 100% after all wooden parts are flat and aligned.

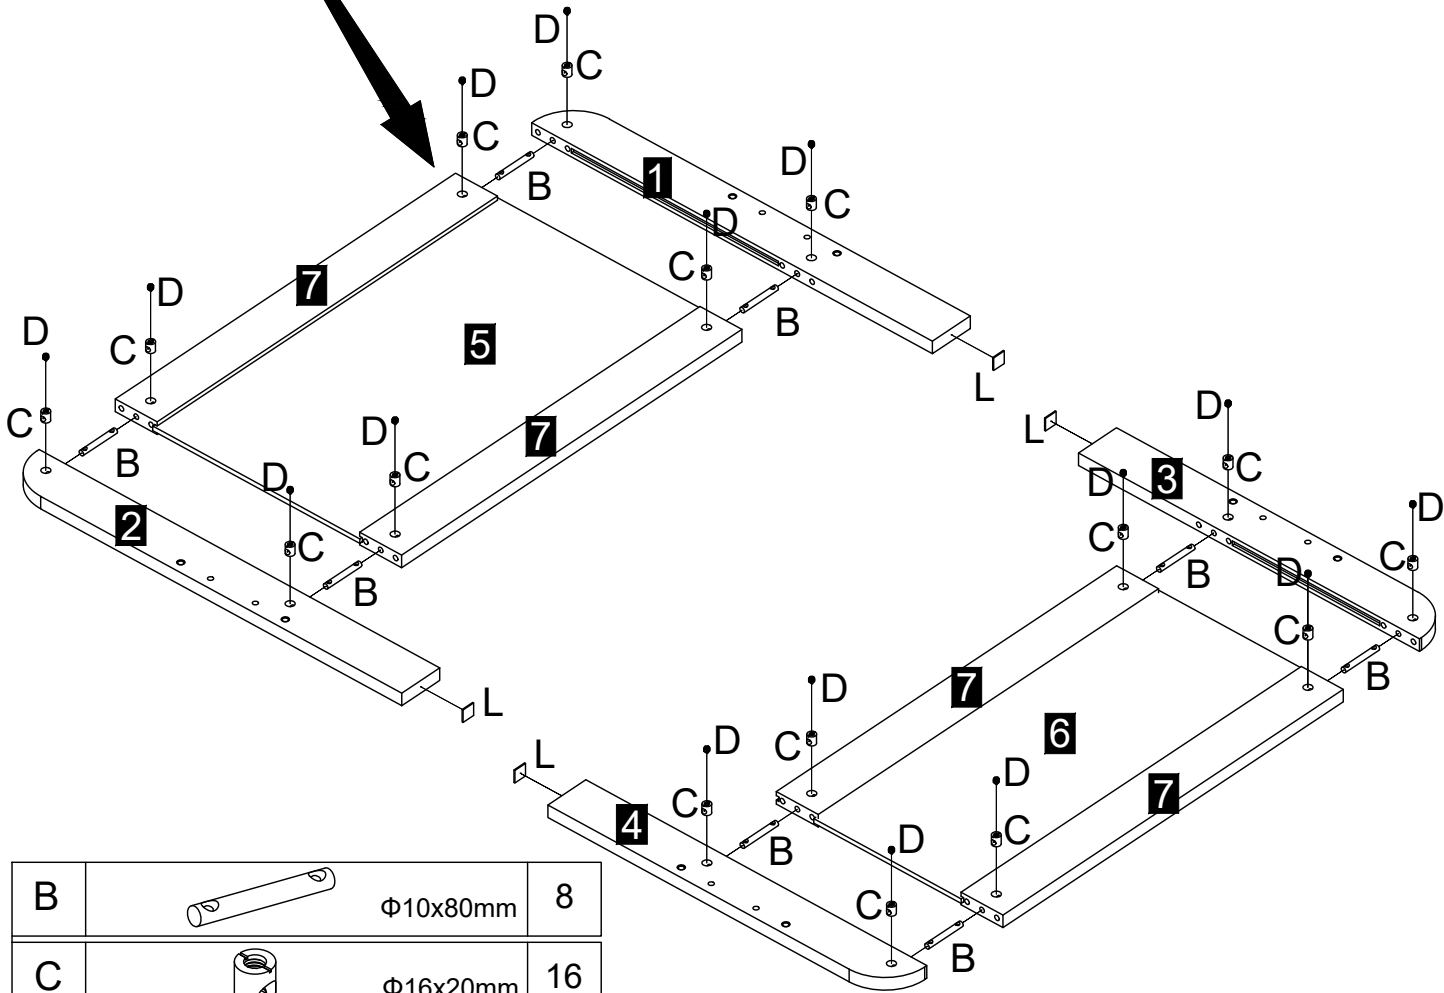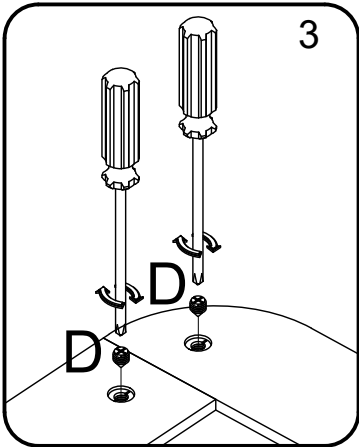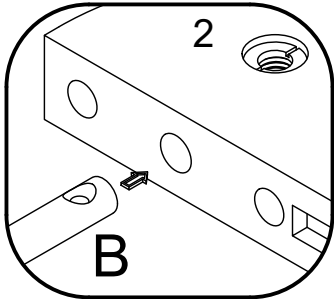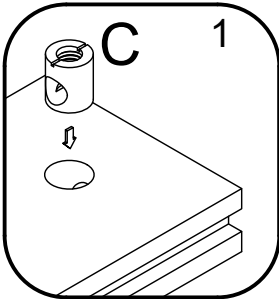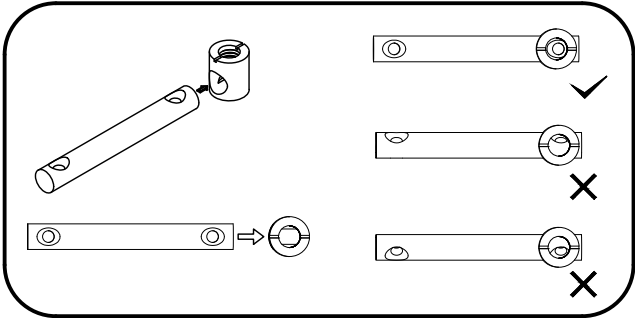


B		Φ10x80mm	8
C		Φ16x20mm	16
D		M10x13mm	16
L			4


STEP:3

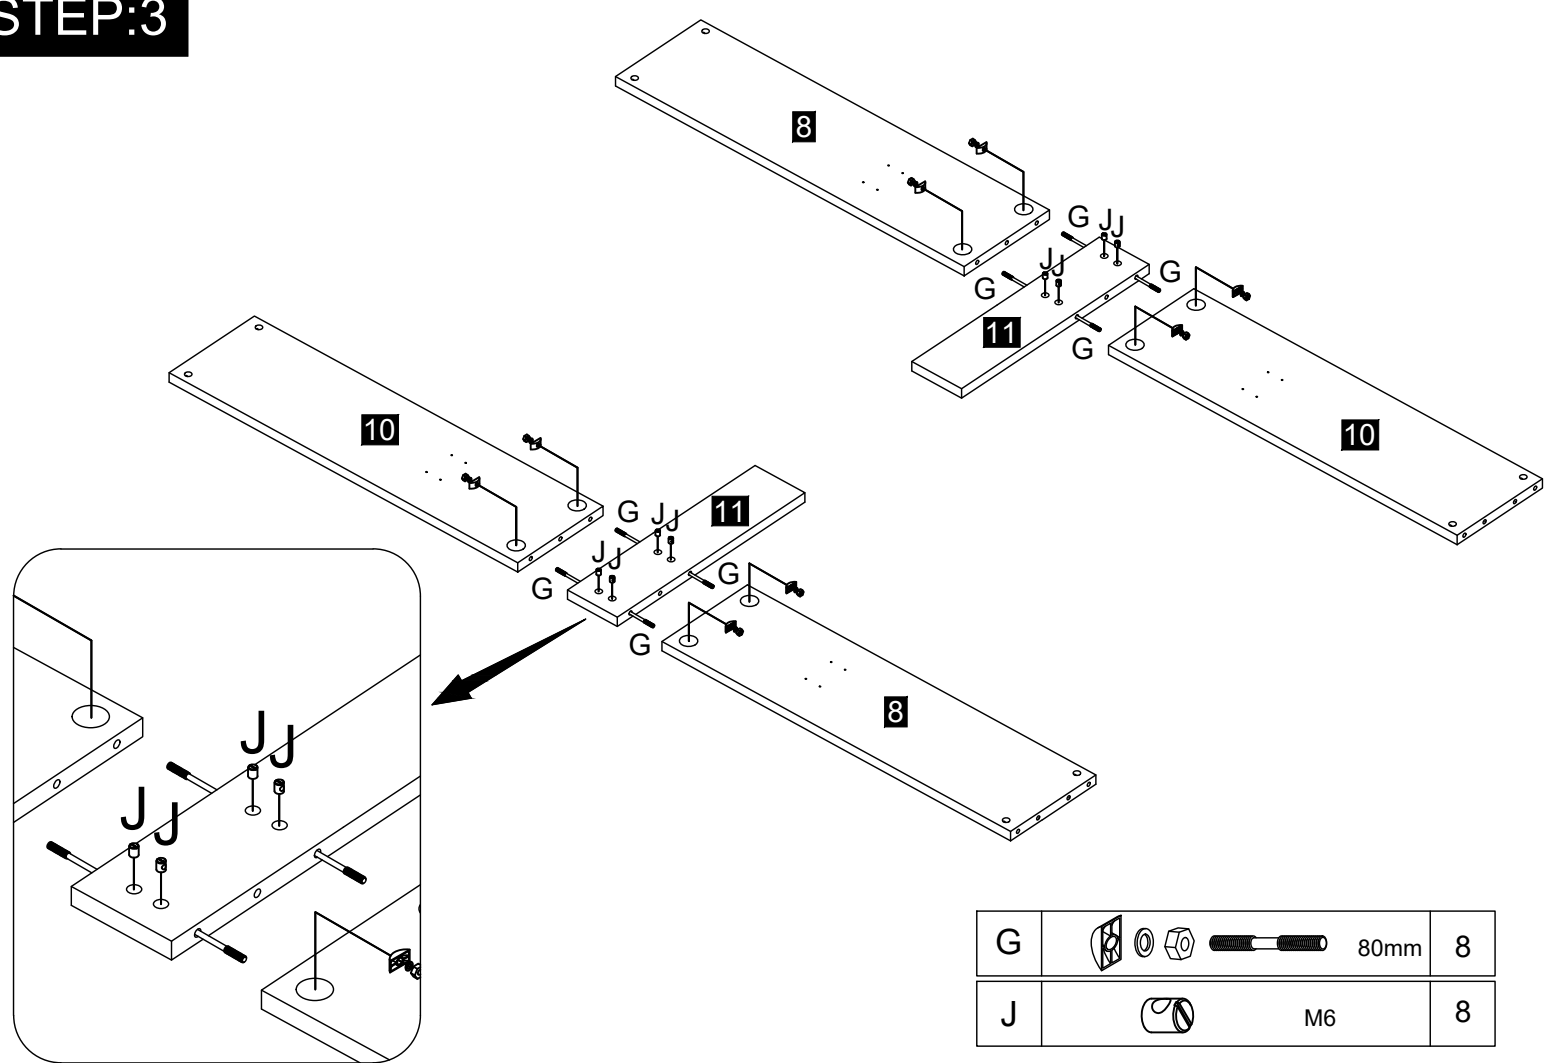


STEP:4

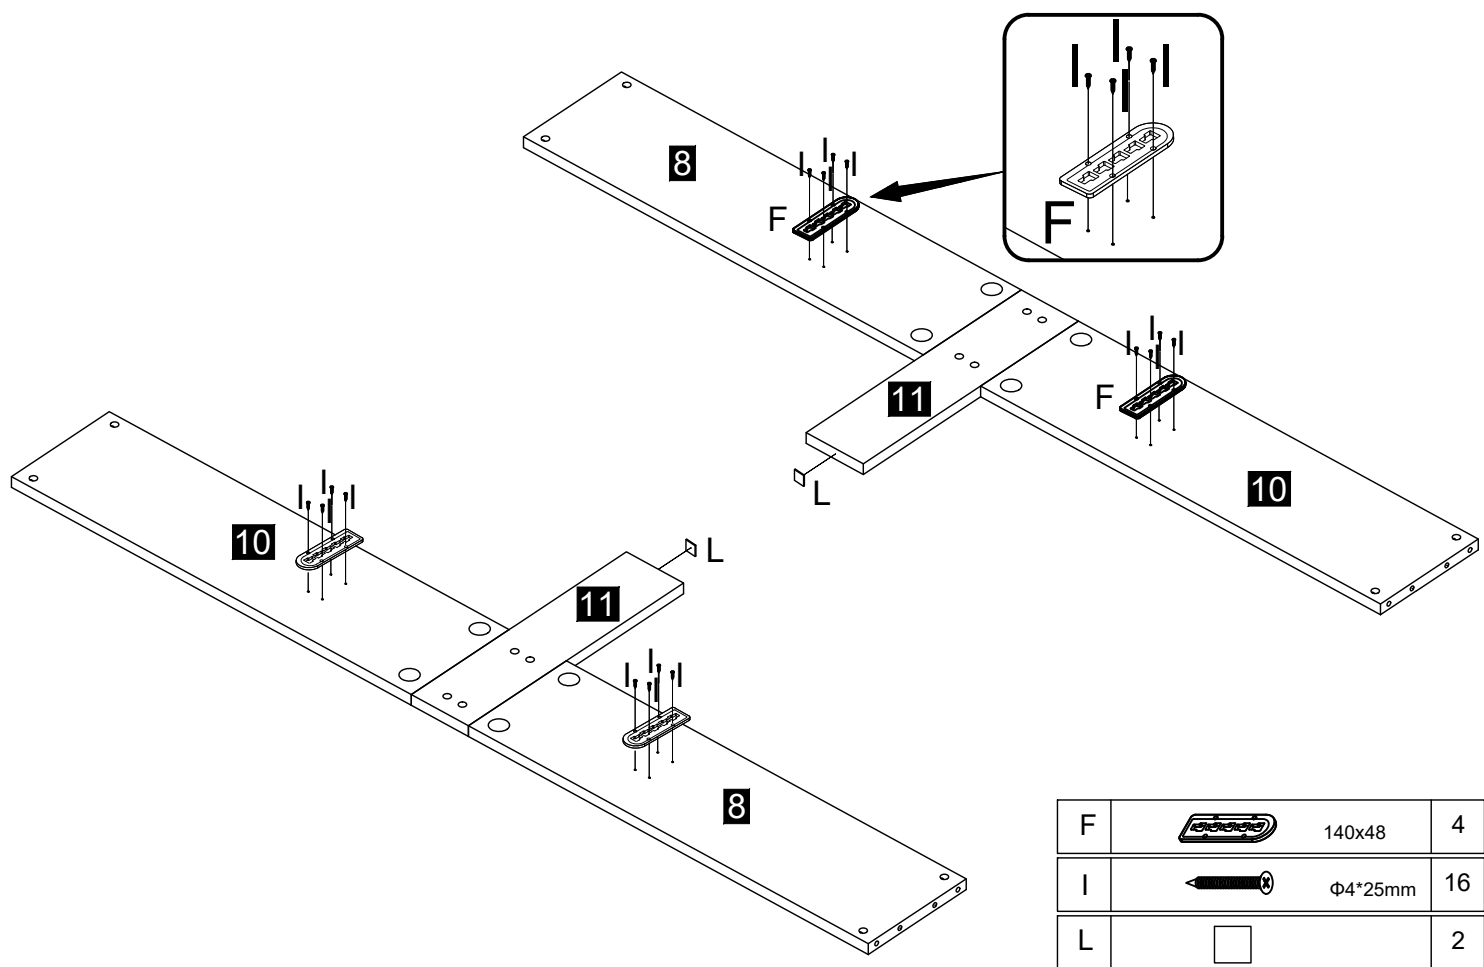


STEP:5

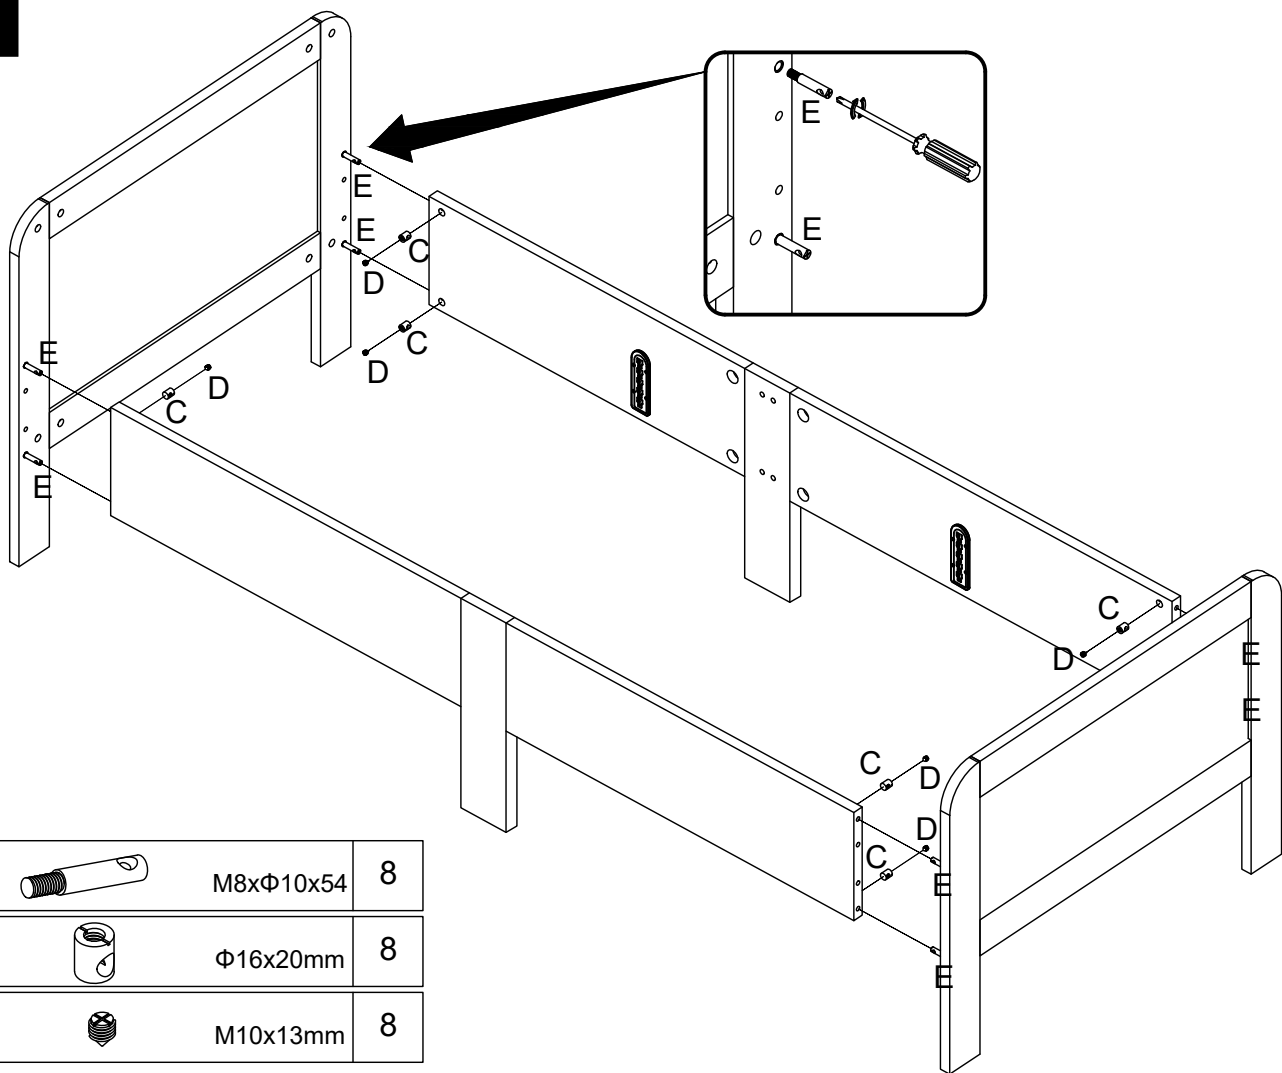


E		M8xΦ10x54	8
C		Φ16x20mm	8
D		M10x13mm	8

STEP:6

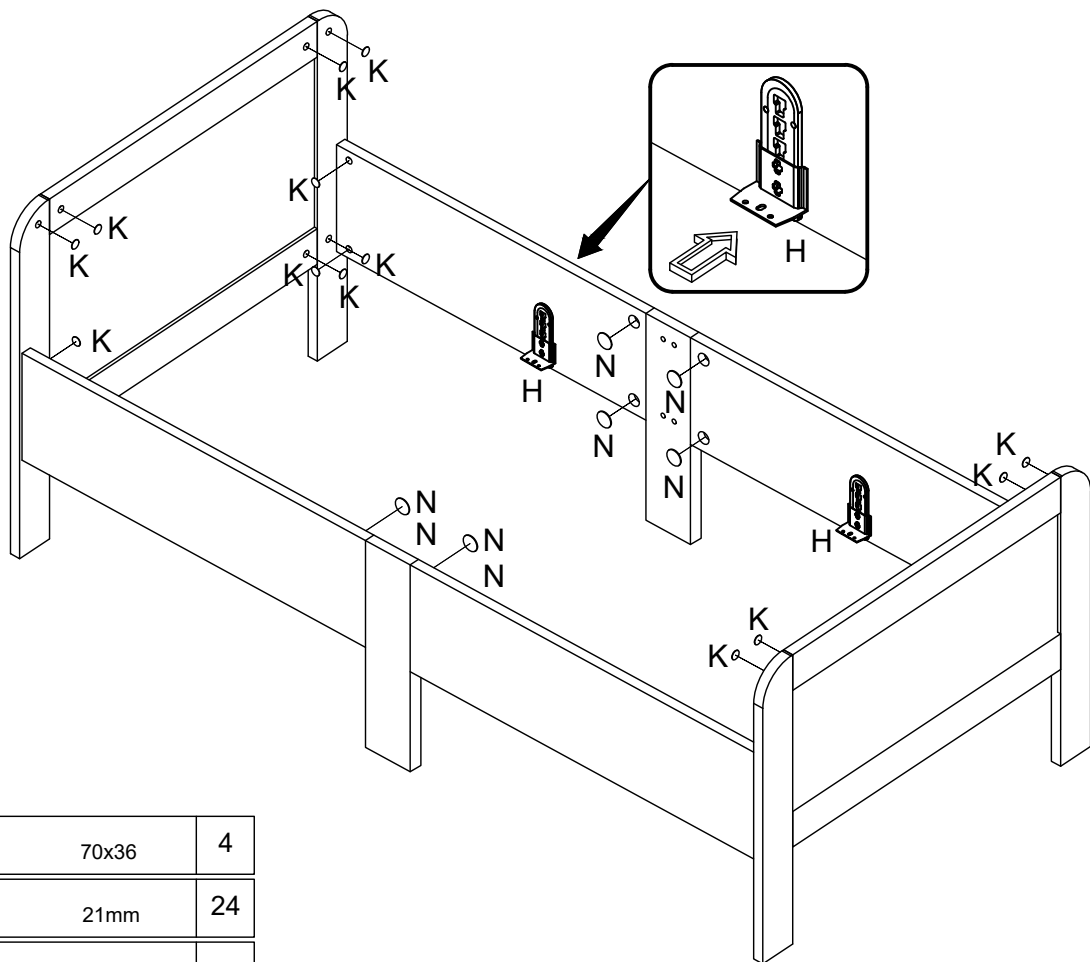

H		70x36	4
K		21mm	24
N		45mm	8

STEP:7

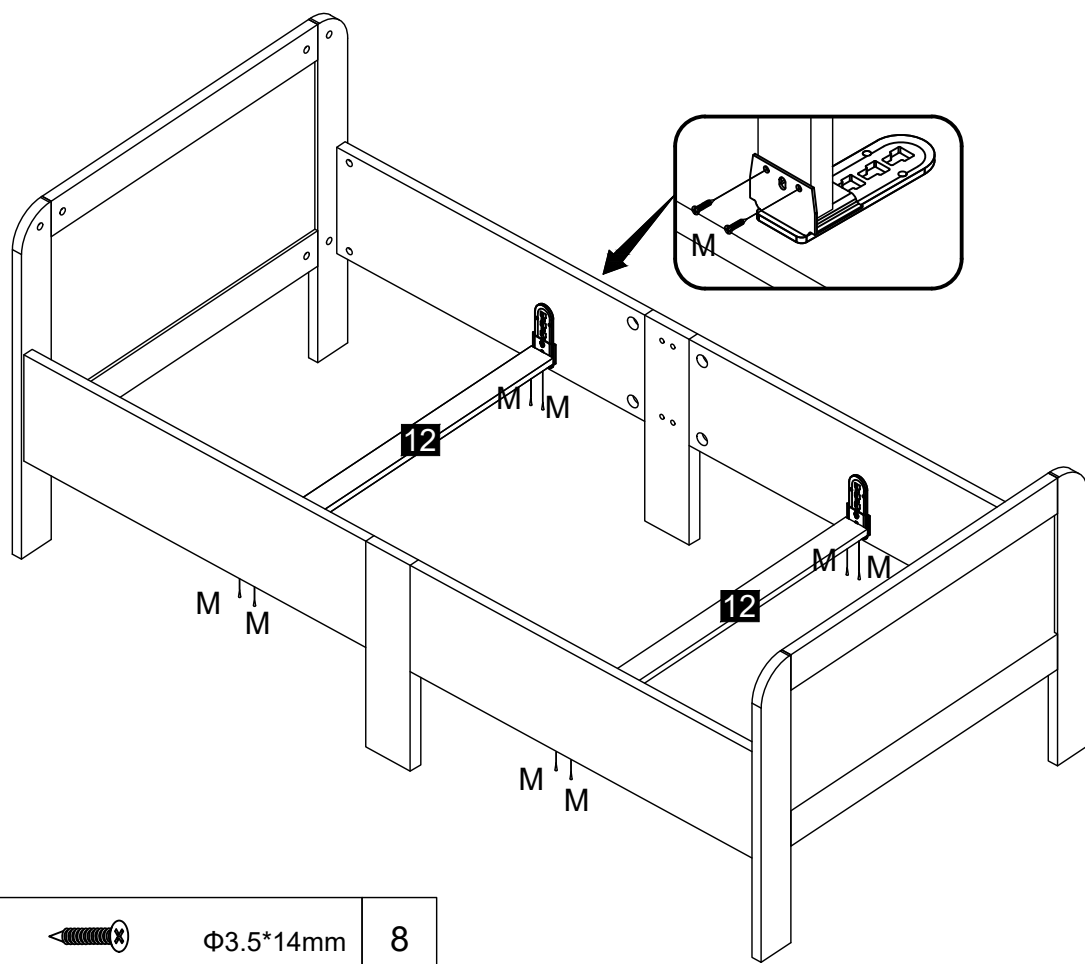

M		Φ3.5*14mm	8
---	---	-----------	---