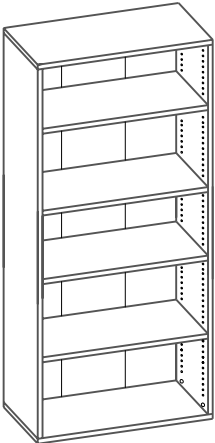

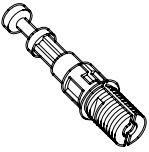






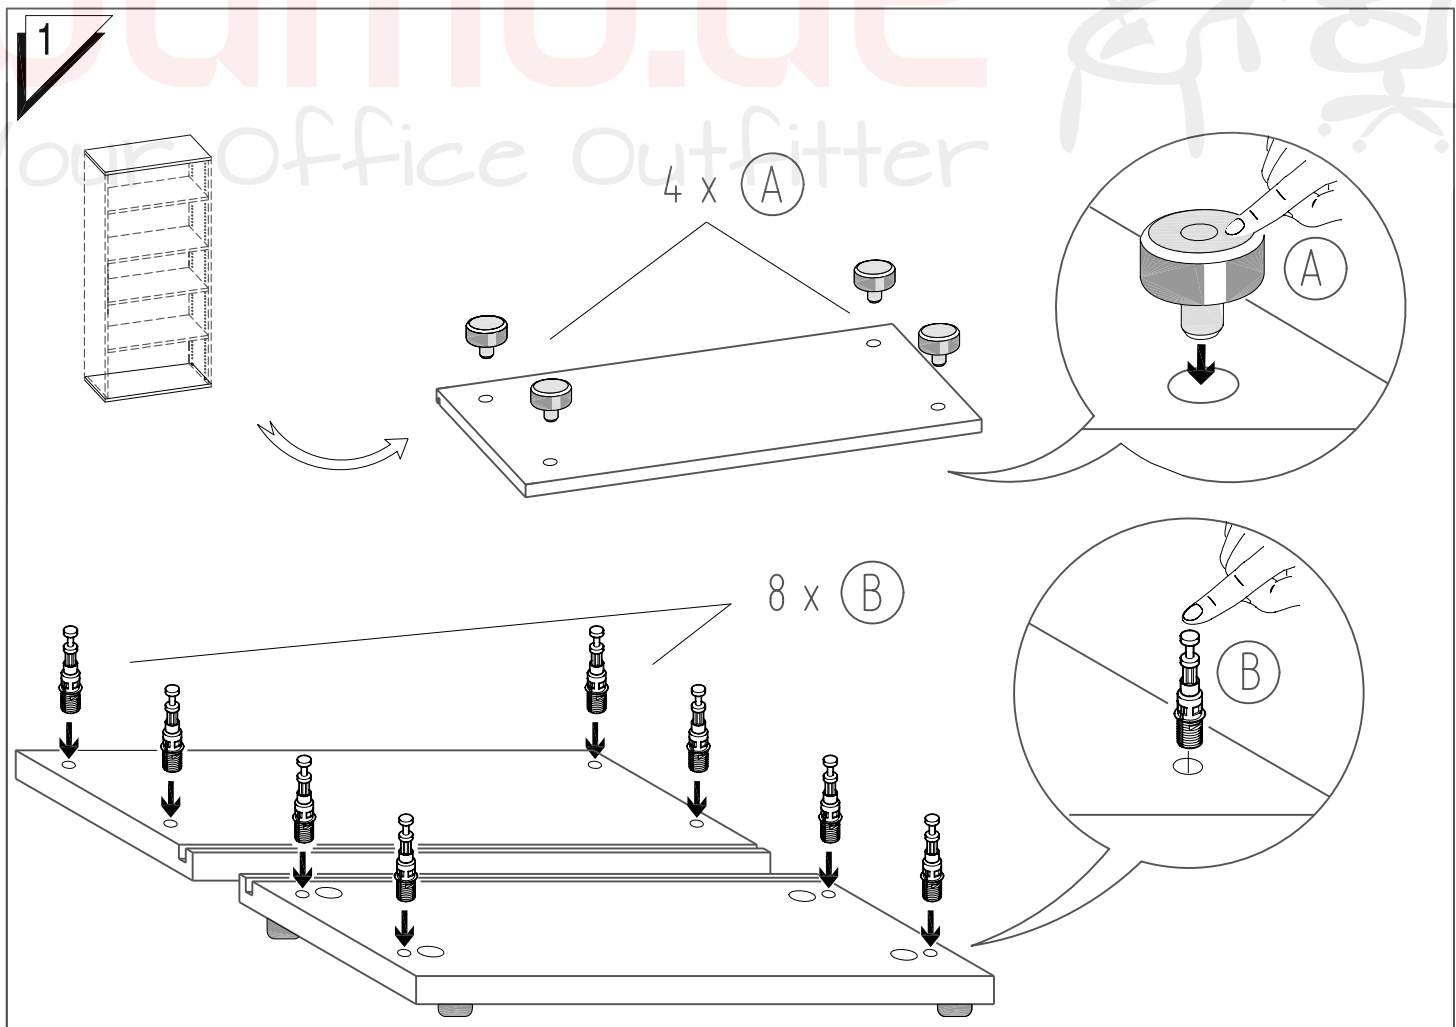
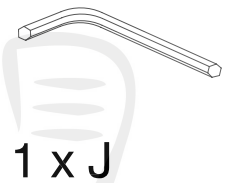
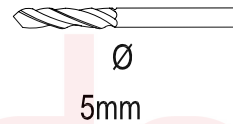
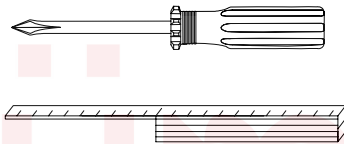


Montageanleitung : 400K


Assembly instruction : 400K

	 4 x A	 8 x B	 8 x C	 4 x D
	 6 x E	 12 x F	 4 x G	 4 x H




• Sie benötigen dieses Werkzeug / tool :

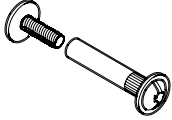


2






8 x C

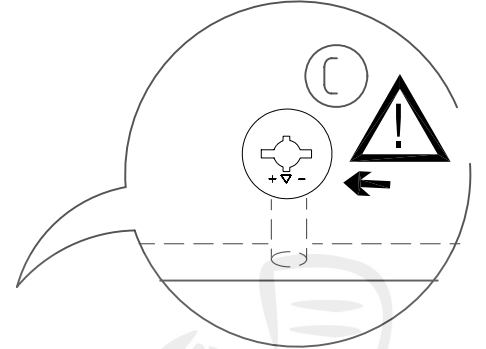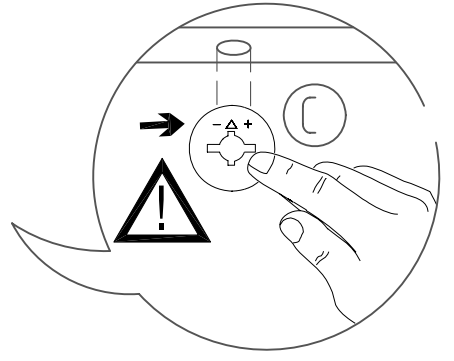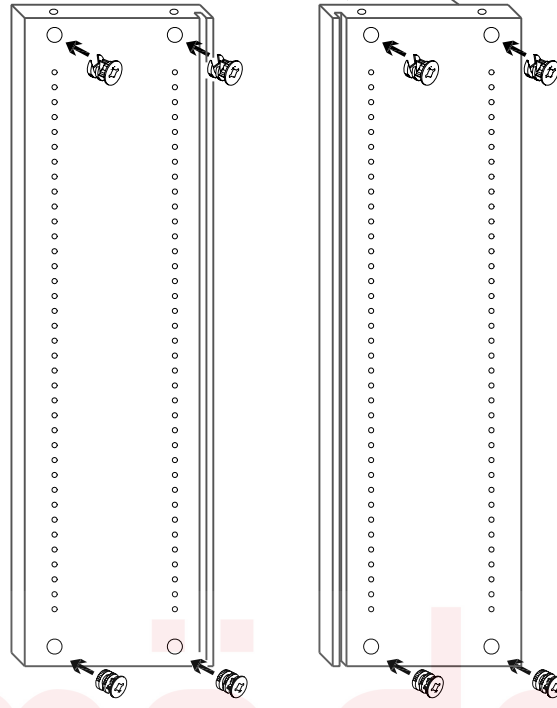

3







4 x H

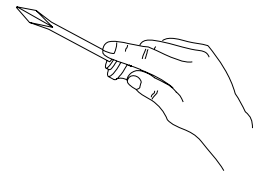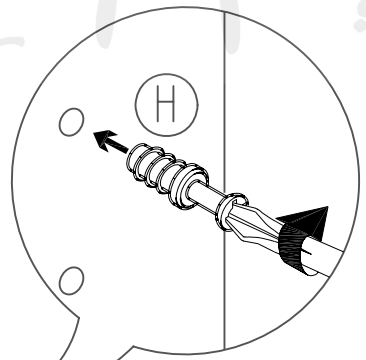
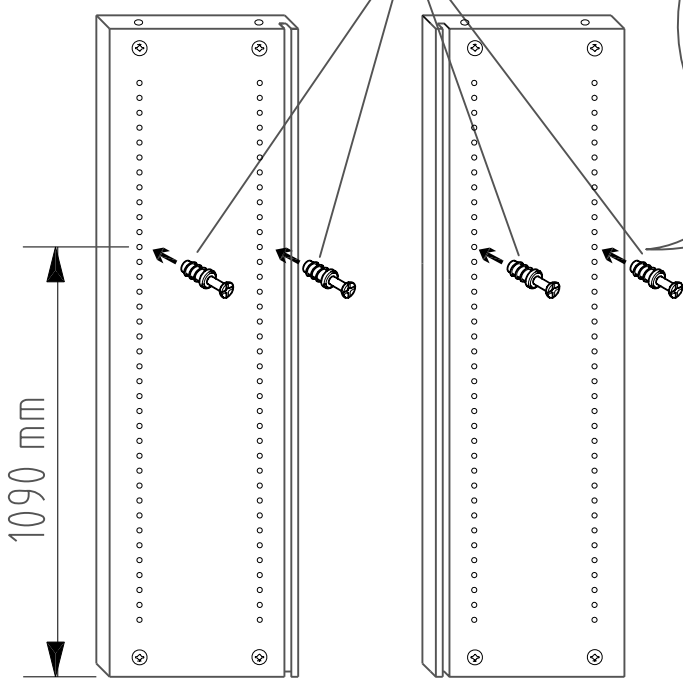


1090 mm



4

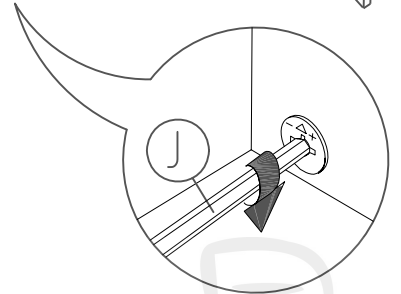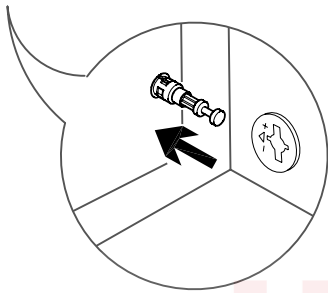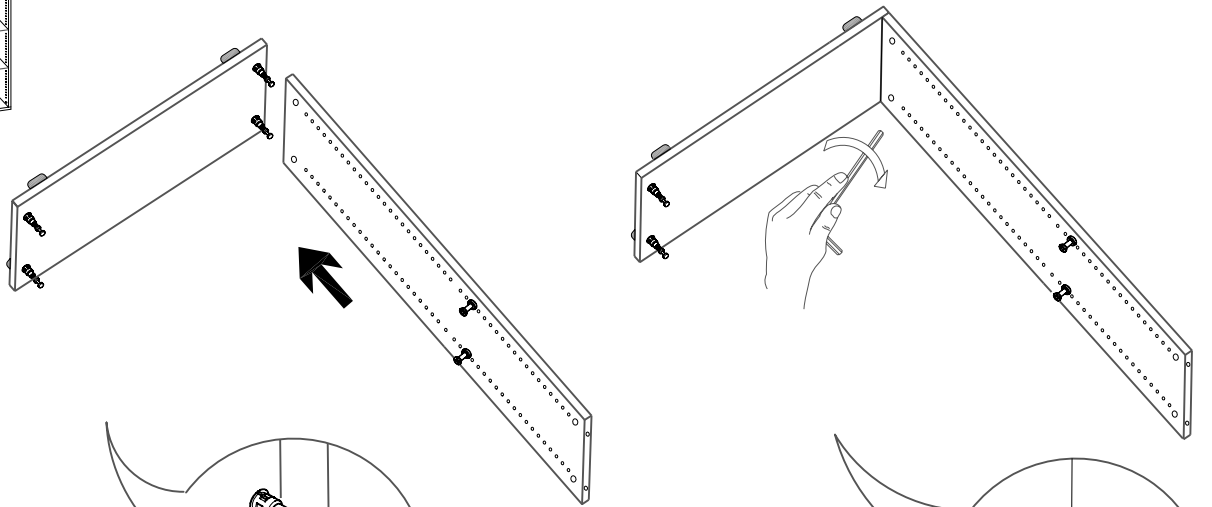




5

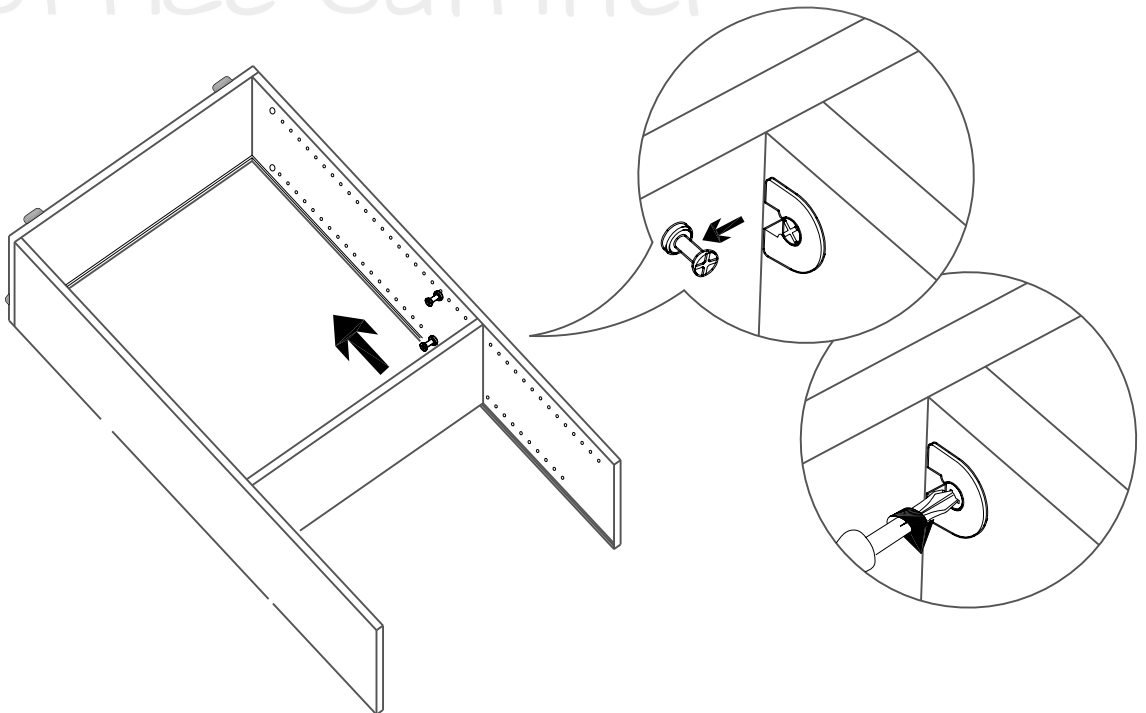






6

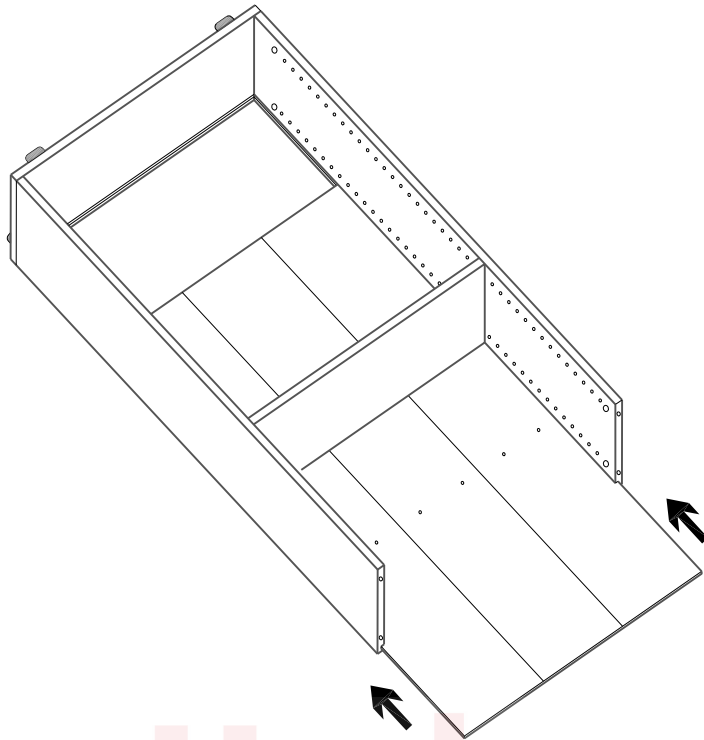




7

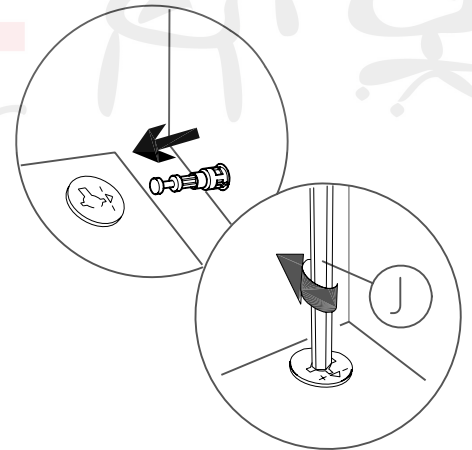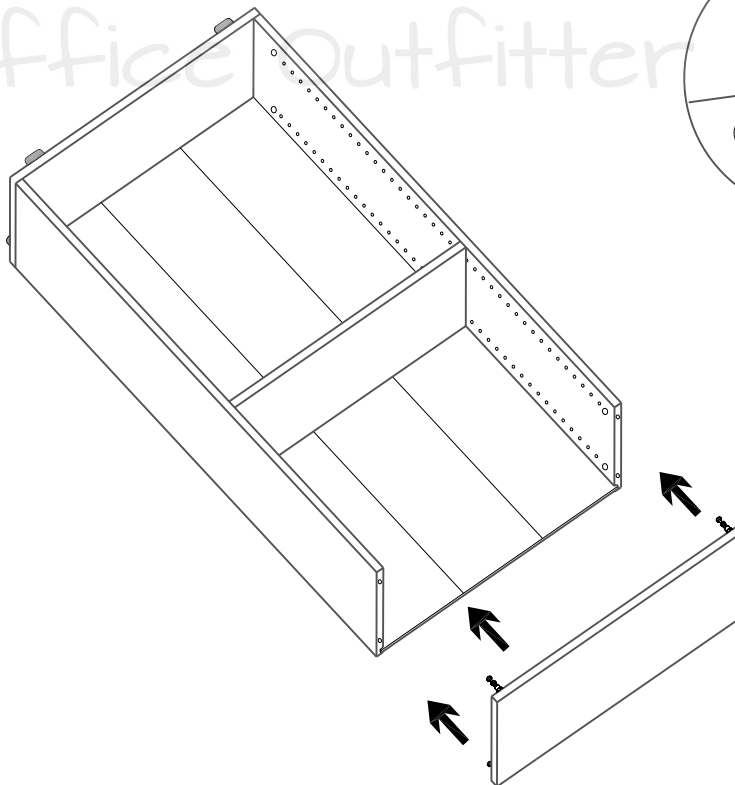





8

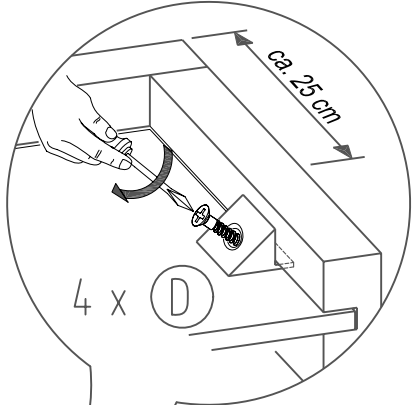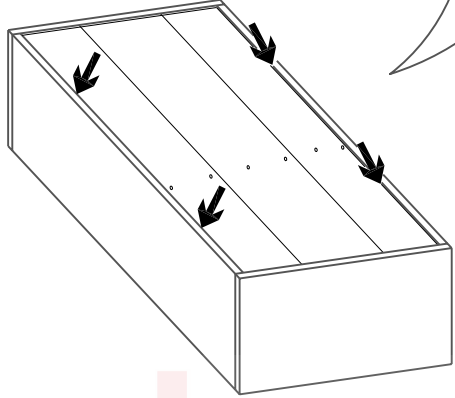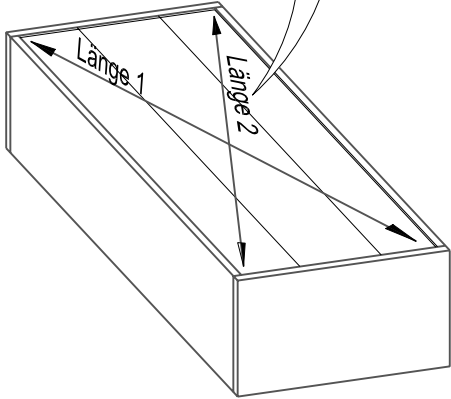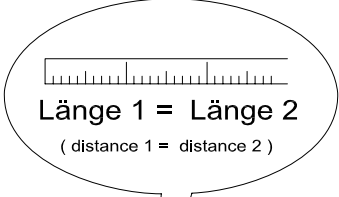

9

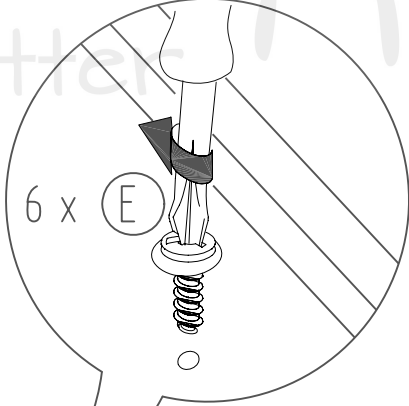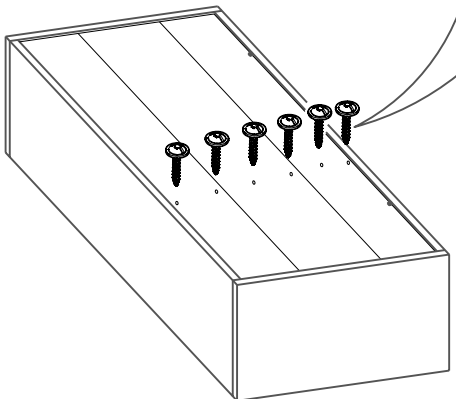

10

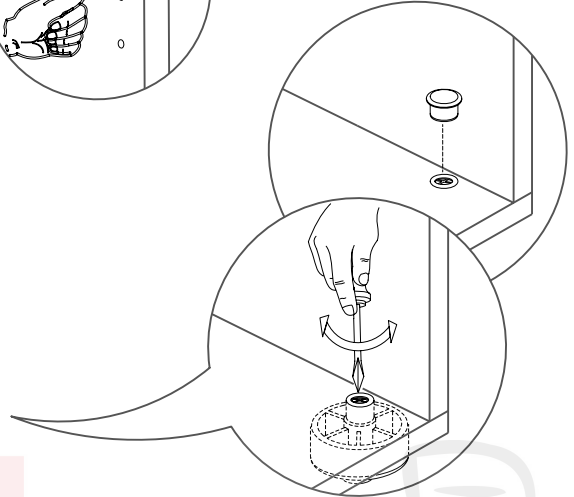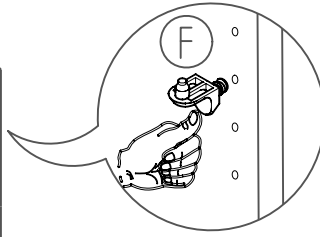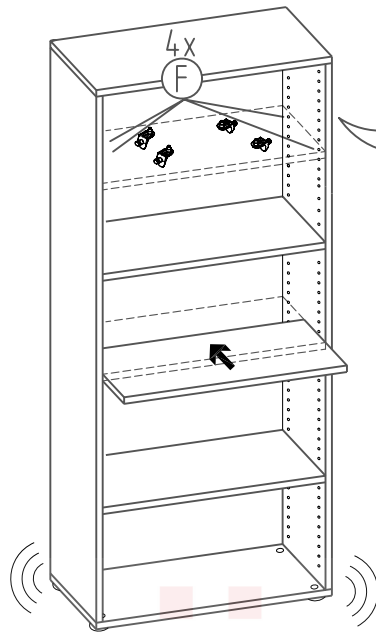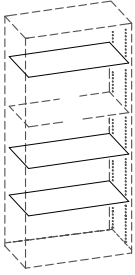

11

