
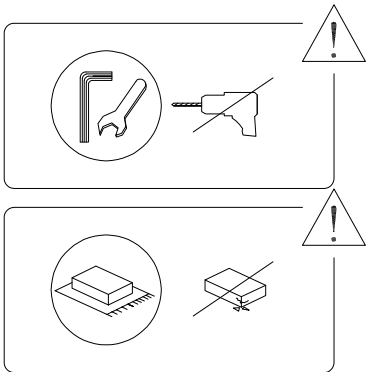
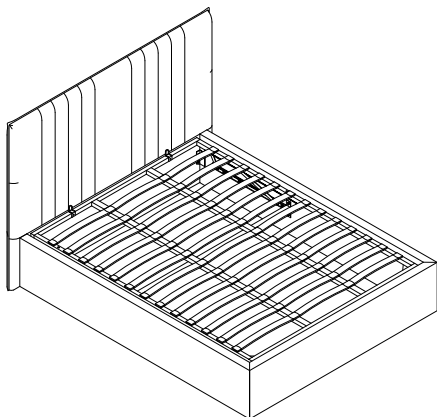








ASSEMBLY DIAGRAM



1/7

Parts List


1:  1PC	2:  1PC	3:  2PCS	4:  1SET
5:  39PCS	6:  2PCS	7:  2PCS	8:  2PCS
9:  2PCS	10:  2PCS	11:  1PC	12:  2PCS
13:  1PC	14:  2PCS	15:  10PCS	16:  26PCS
17:  26PCS	18:  4PCS		

Hardware List

A:  M8*45mm 18PCS	B:  M8*30mm 8PCS	C:  M6*25mm 22PCS	D:  M6*40mm 8PCS	E:  M6*50mm 4PCS	F:  M8*14mm 18PCS
G:  M8 26PCS	H:  M8*19mm 26PCS	I:  M6*16 34PCS	J:  M8 1PC	K:  M6 1PC	L:  M8 1PC
M:  6PCS	N:  1PC				



2/7

STEP 1

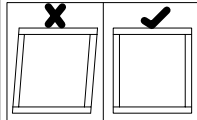

Note: Ensure that headboard, footboard and side rails are square.

	B x 8PCS
	H x 8PCS
	G x 8PCS
	J x 1PC
	18 x 4PCS

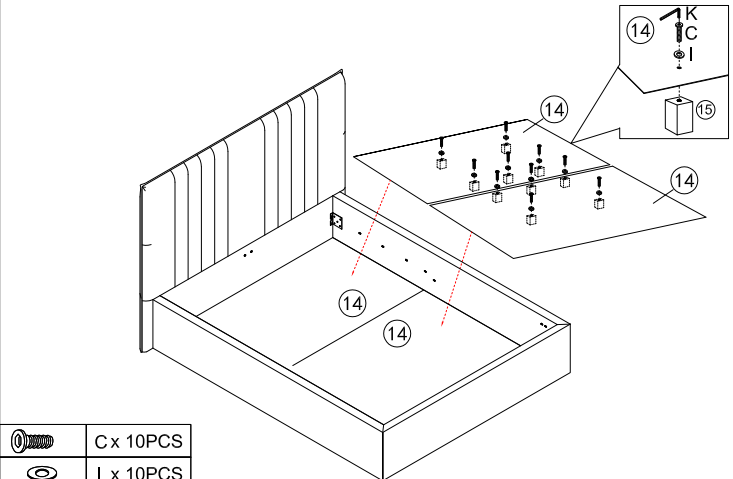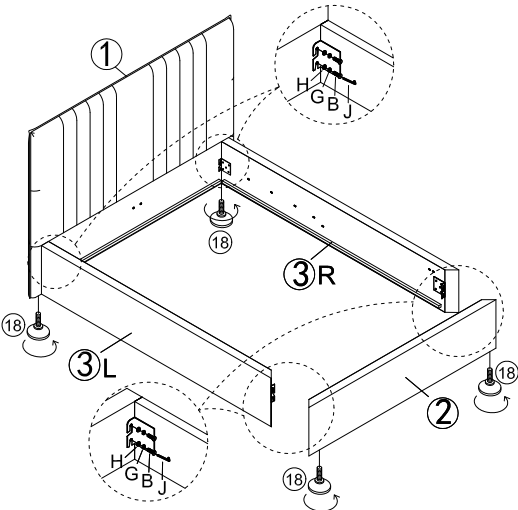


	C x 10PCS
	I x 10PCS
	15 x 10PCS

3/7


STEP 3

	E x 4PCS
	I x 4PCS
	K x 1PC
	9 x 2PCS

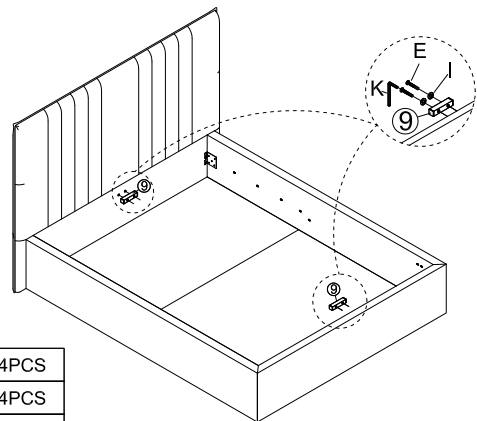


STEP 4

	C x 12PCS
	I x 12PCS
	K x 1PC
	6 x 2PCS

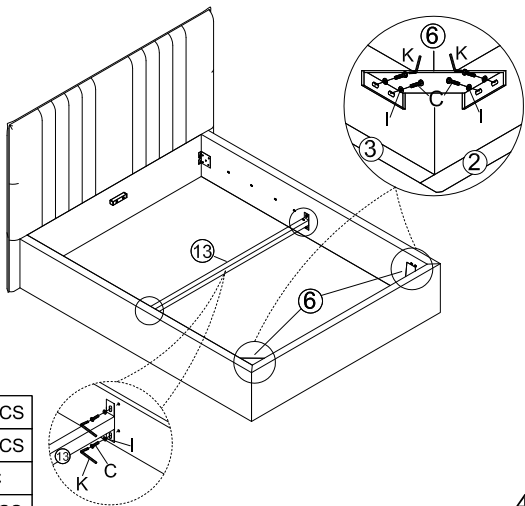


4/7


STEP 5

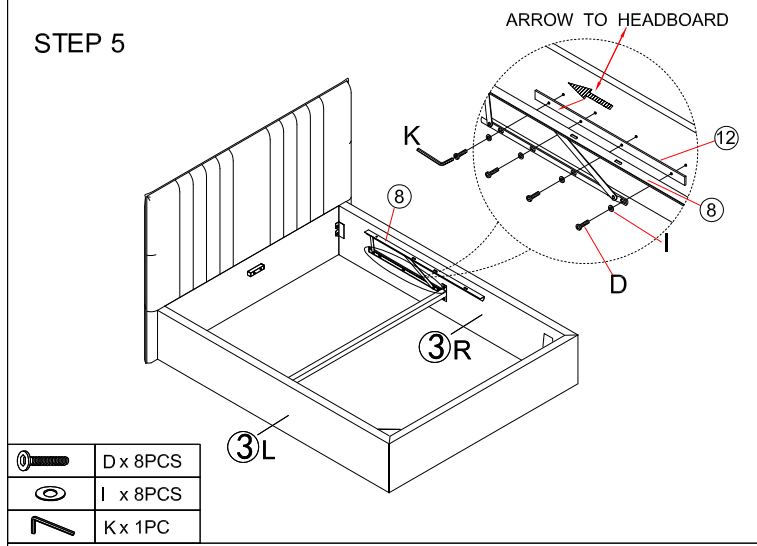


STEP 7

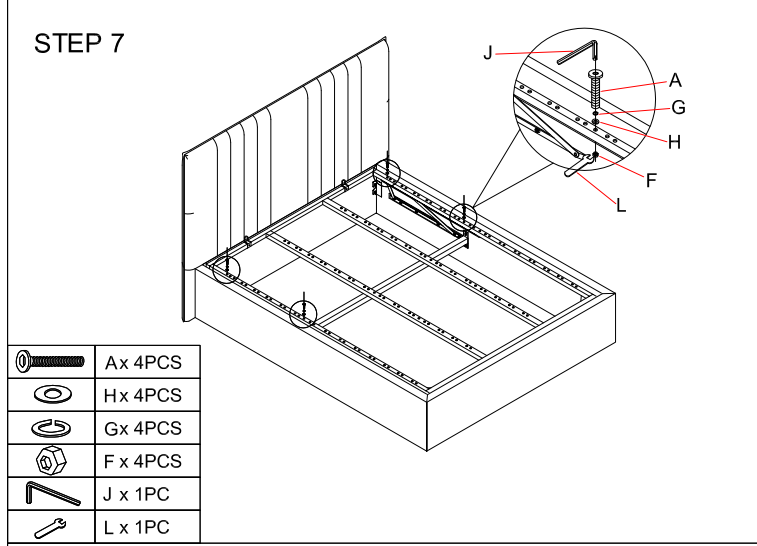

STEP 6

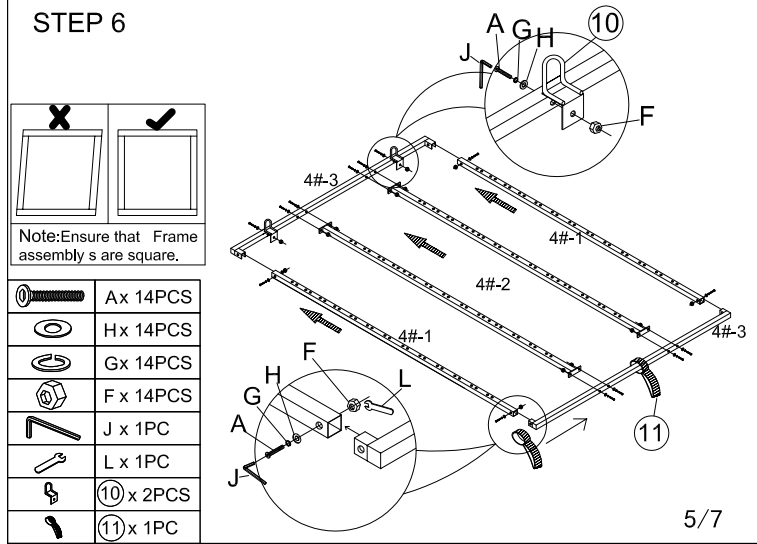


STEP 8

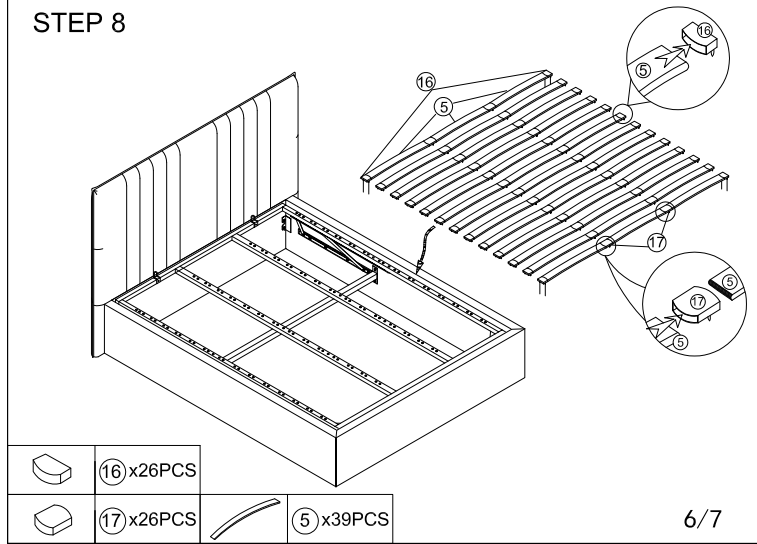

STEP 9

Assembly Instructions
Please ensure the pneumatic arm is the correct orientation. The thinner section should be attached to the side rail, and the thicker part is connected to the slat frame. secure the pneumatic lifting mechanisms on the side rails place by using flange nuts as shown. Do not overtighten the nuts.

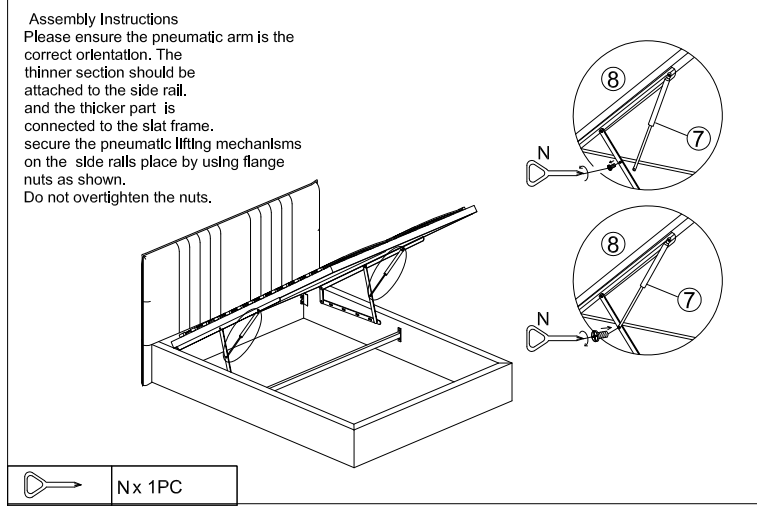

STEP 10

Assembly Instructions
Please note: Before lowering the slat frame into position, place the mattress on the slat frame. The weight of the mattress will help with the lowering of the frame. Mattress weight limit: 50kgs. Assembly is completed.

