











ASSEMBLY INSTRUCTIONS

MODEL : BD334B-FS

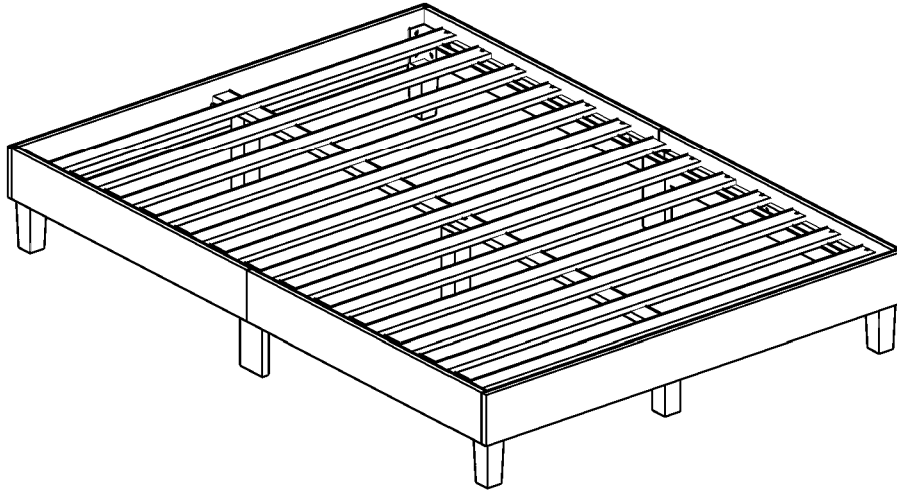






ITEM CODE : 1981/1982/1925/1983



COMPONENT


| | | | | | | | |
|---|---|---|---|---|--|--|---|
| <p>Headboard/ Footboard - 2 pcs.</p>  <p>①</p> | <p>Side Rail (Left) - 2 pcs.</p>  <p>②L</p> | <p>Side Rail (Right)- 2 pcs.</p>  <p>②R</p> | <p>Side Rail Leg - 2 pcs.</p>  <p>③</p> | <p>Bed Leg - 4 pcs.</p>  <p>④</p> | <p>Center Leg - 2 pcs.</p>  <p>⑤</p> | <p>Center Leg (Middle) - 1 pc.</p>  <p>⑥</p> | <p>Center Rail - 2 pcs.</p>  <p>⑦</p> |
| <p>Slats - 13 pcs.(1set)</p>  <p>⑧</p> | | | | | | | |

HARDWARE


| | | | | | | |
|---|--|---|--|---|---|--|
| <p>Allen Key M4 - 1 pc.</p>  <p>Ⓐ</p> | <p>Allen Key M5 - 1 pc.</p>  <p>Ⓑ</p> | <p>JCBB Bolt M8 x 16mm - 16 pcs.</p>  <p>Ⓒ</p> | <p>JCBC Bolt M6 x 40mm - 4 pcs.</p>  <p>Ⓓ</p> | <p>JCBC Bolt M6 x 35mm - 10 pcs.</p>  <p>Ⓔ</p> | <p>Wood Screw M3.5 x 16mm - 2 pcs.</p>  <p>Ⓕ</p> | <p>Wood Screw M4 x 25mm - 24 pcs.</p>  <p>Ⓖ</p> |
|---|--|---|--|---|---|--|

ASSEMBLY INSTRUCTIONS

STEP 1 :

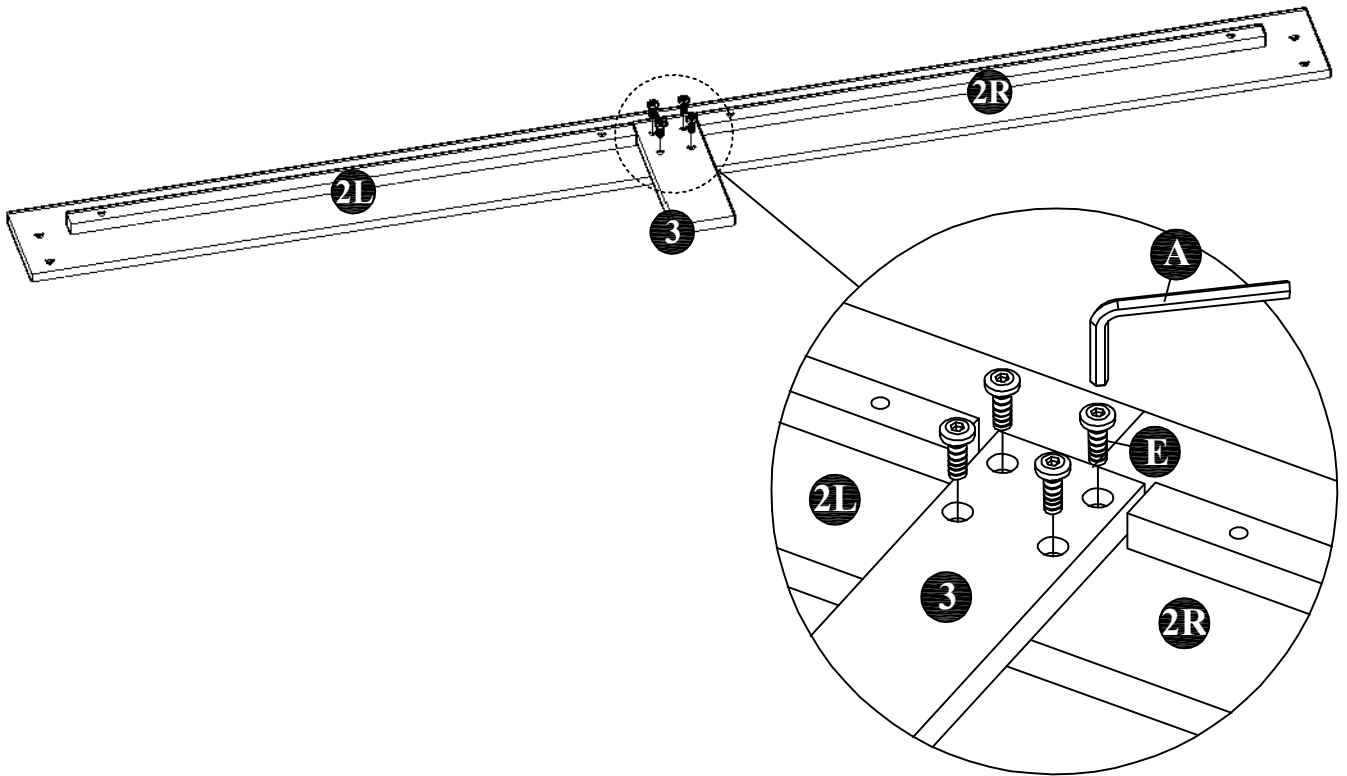


STEP 2 :

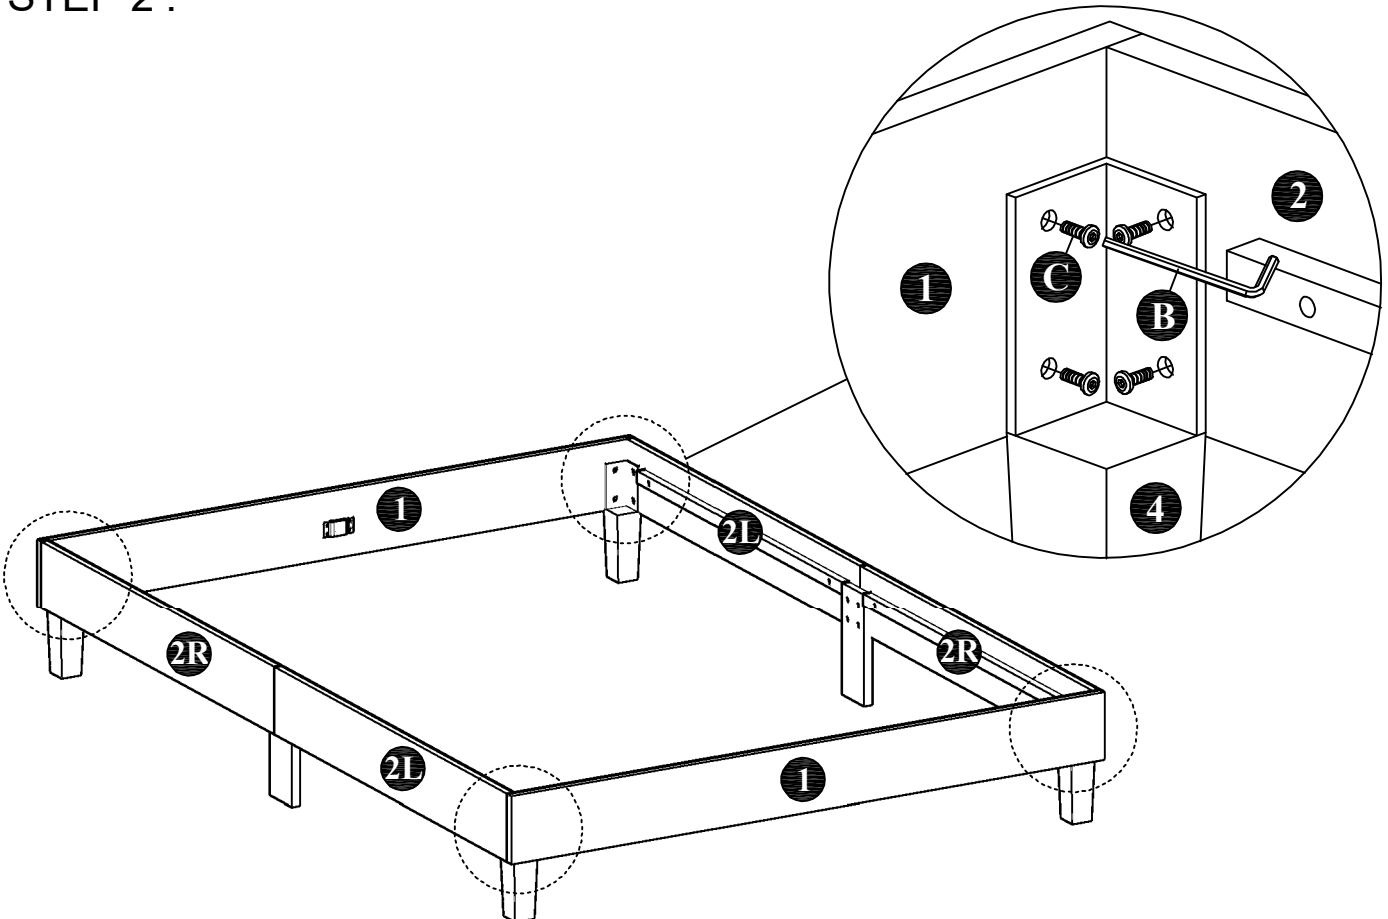


ASSEMBLY INSTRUCTIONS

STEP 3 :

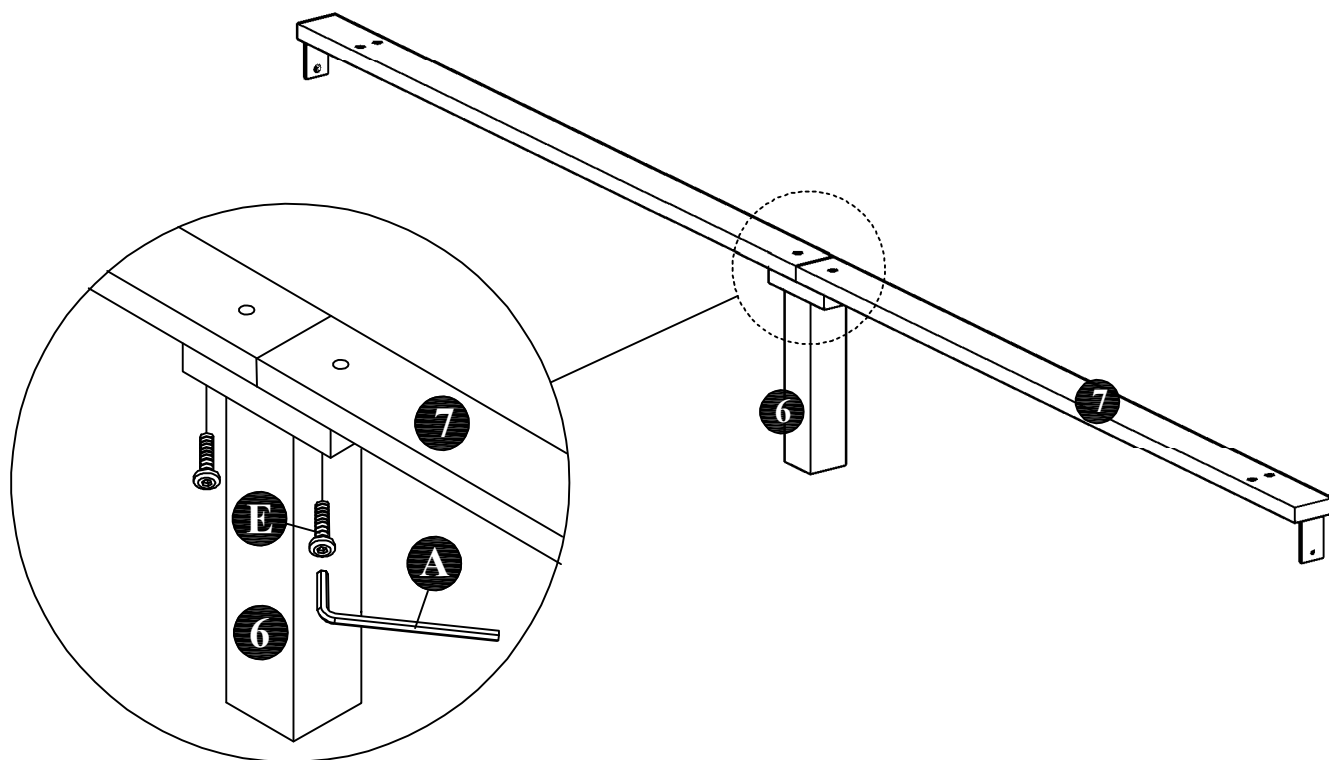


STEP 4 :

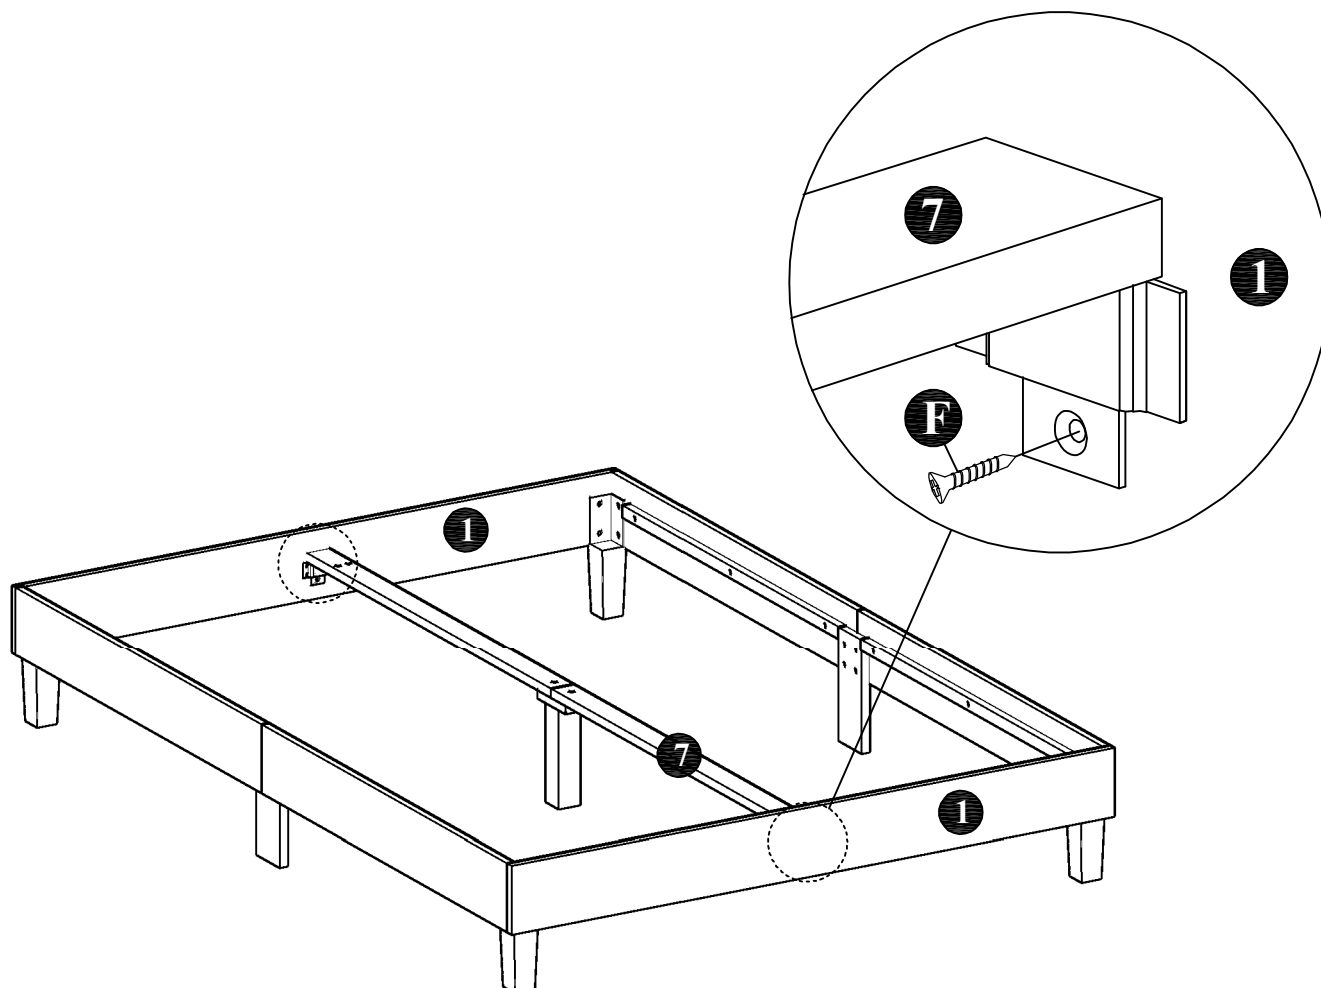


ASSEMBLY INSTRUCTIONS

STEP 5 :

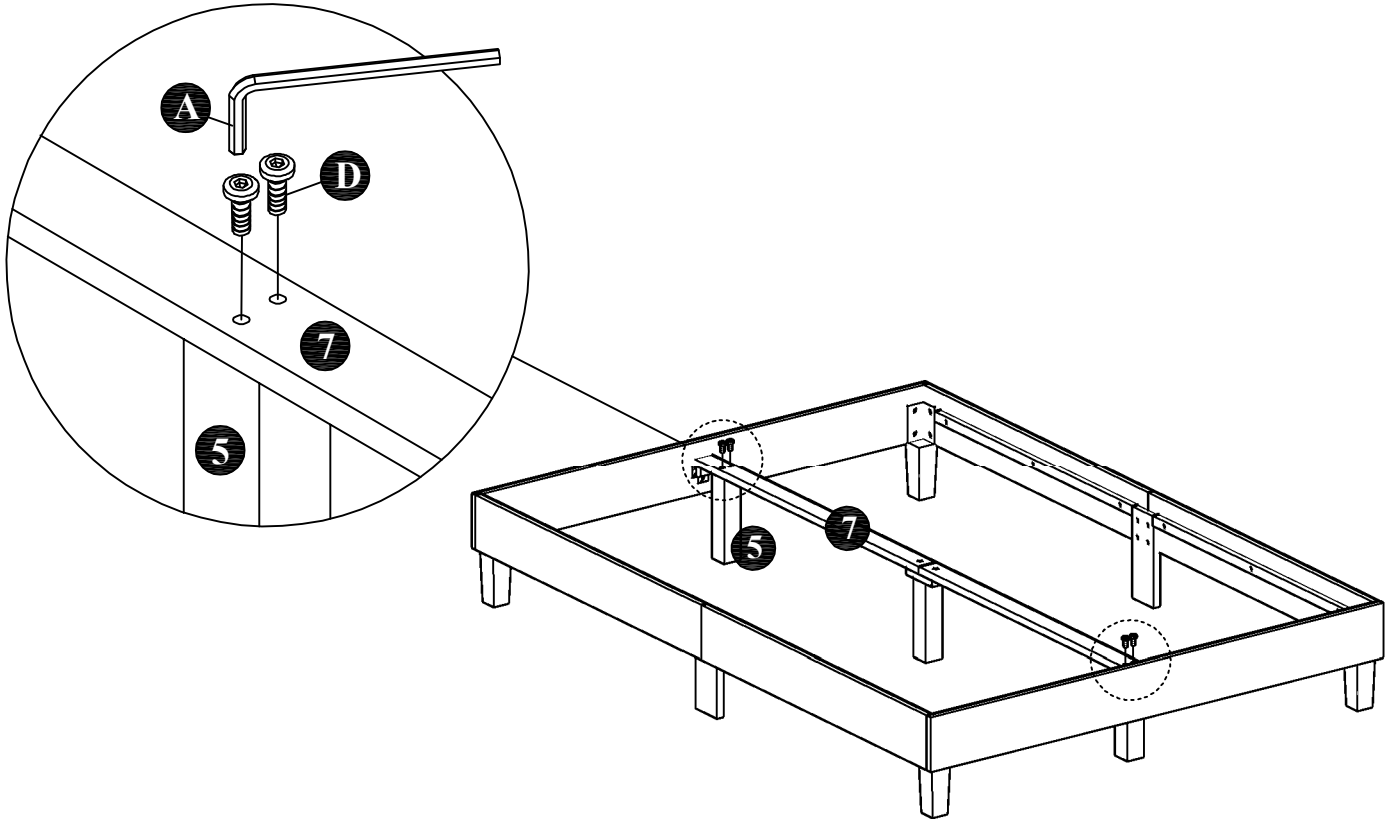

STEP 6 :

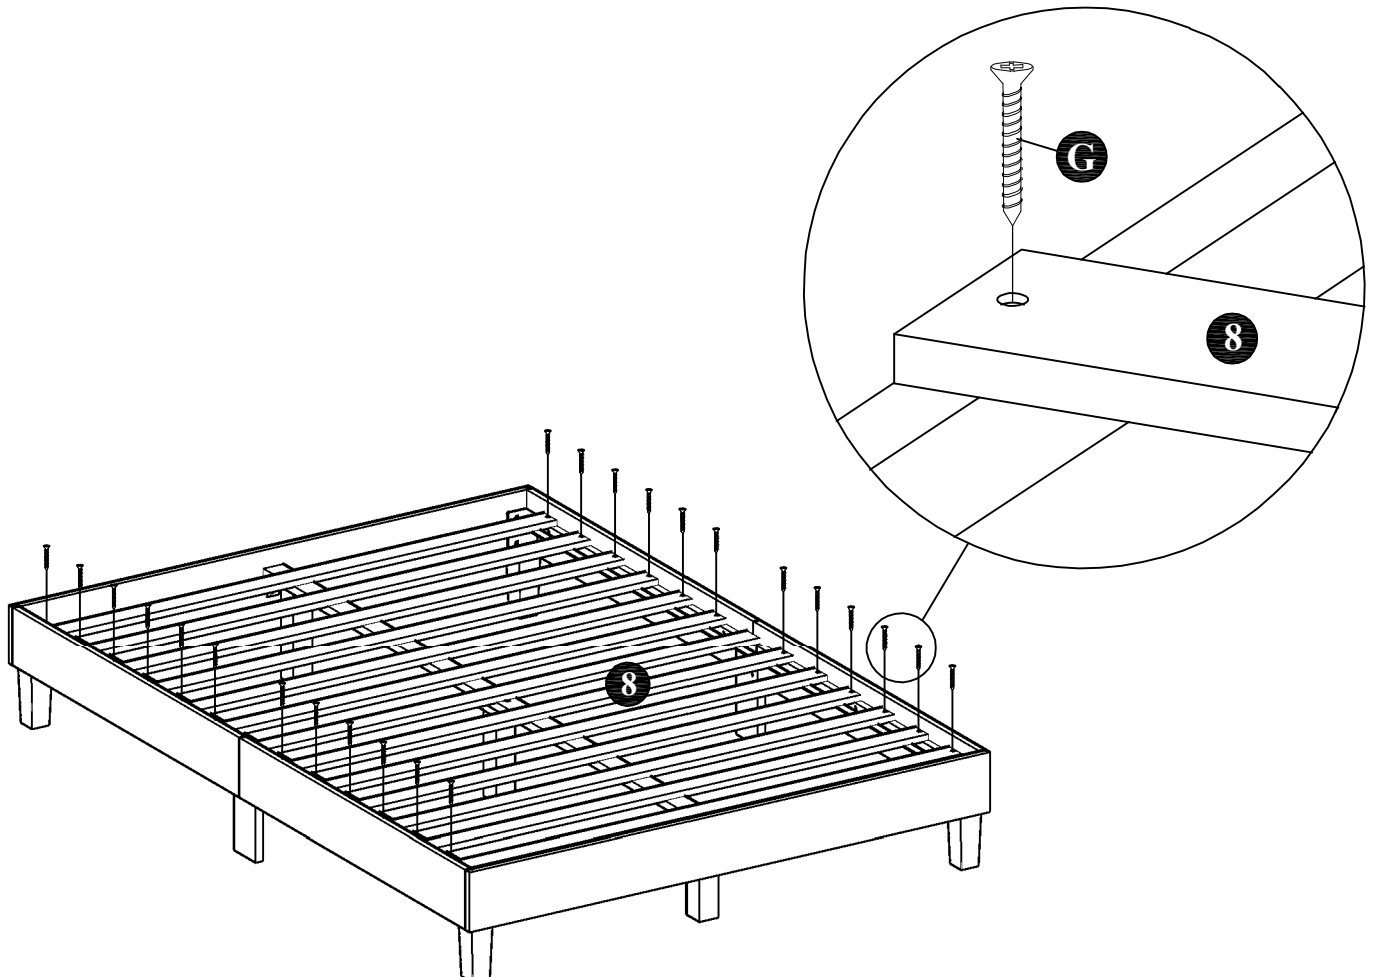

ASSEMBLY INSTRUCTIONS

COMPLETE VIEW

IMPORTANT

Please lift up the bed to move
with 2 or more people.

DO NOT DRAG THE BED!

