

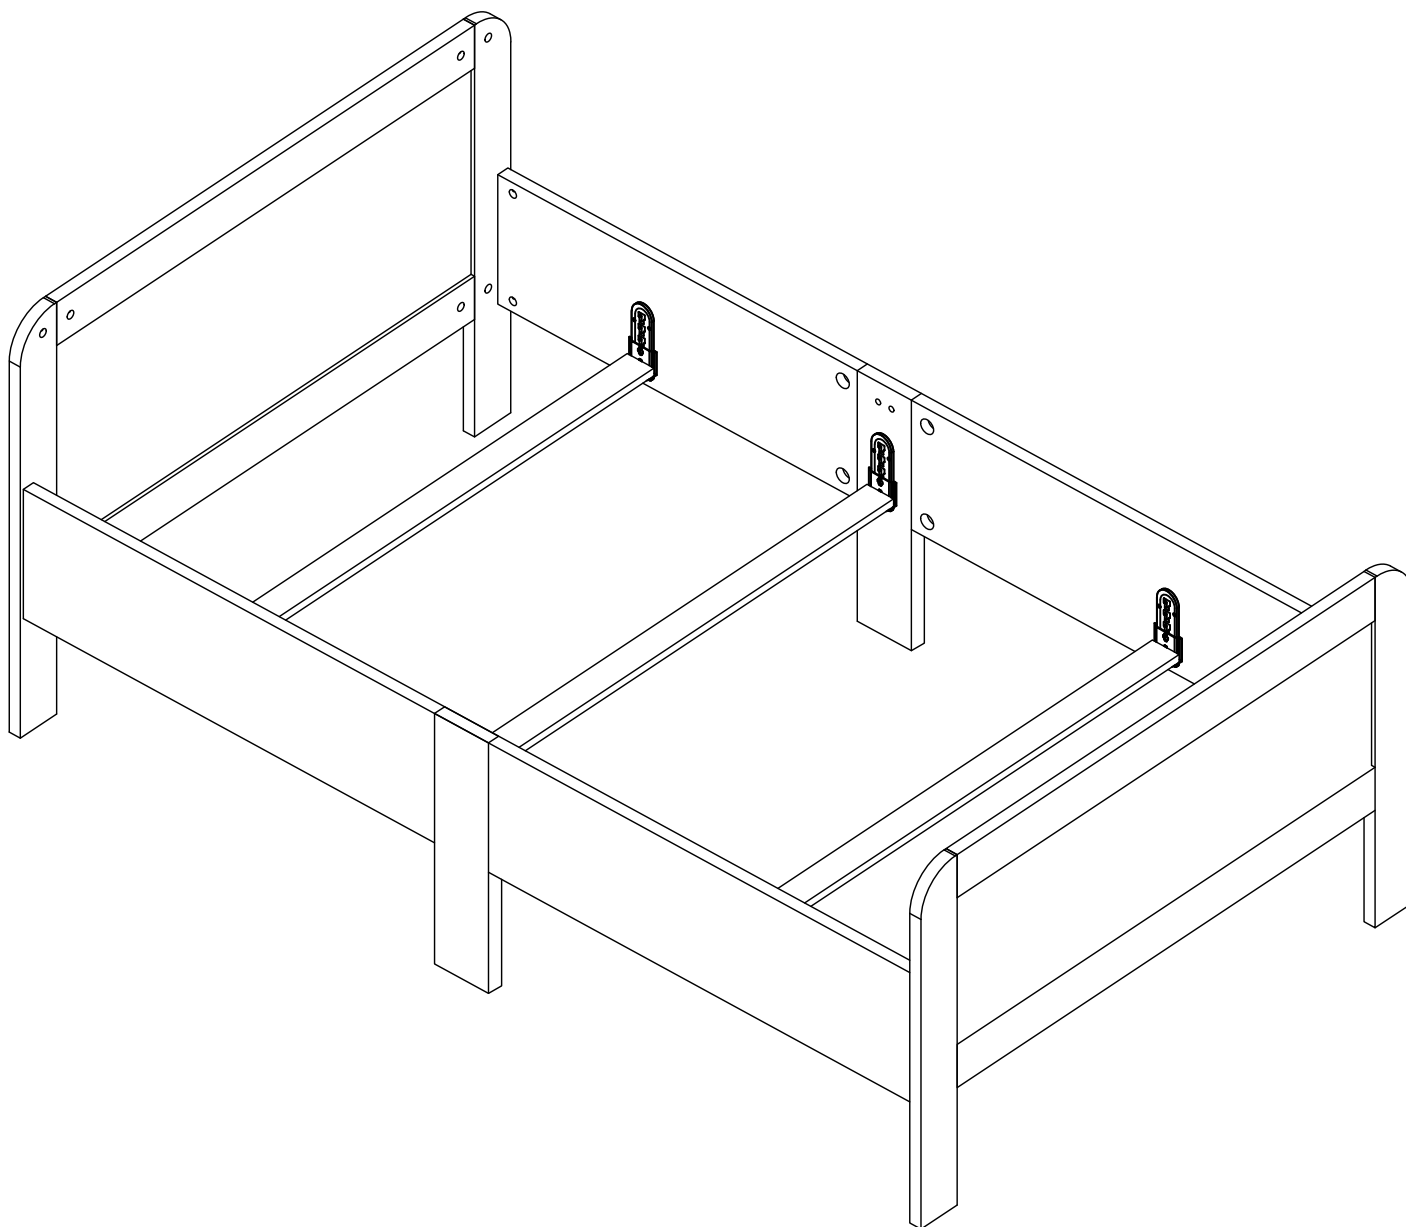






Hardware Box: carton no. 1/2

A		Φ10*30mm	24	I		Φ4*25mm	24
B		Φ10x80mm	8	J		M6	8
C		Φ16x20mm	24	K		21mm	24
D		M10x13mm	24	L			6
E		M8xΦ10x54	8	M		Φ3.5*14mm	12
F		140x46	6	N		45mm	8
G		80mm	8	O		Φ8*30mm	4
H		70x44	6	P			1

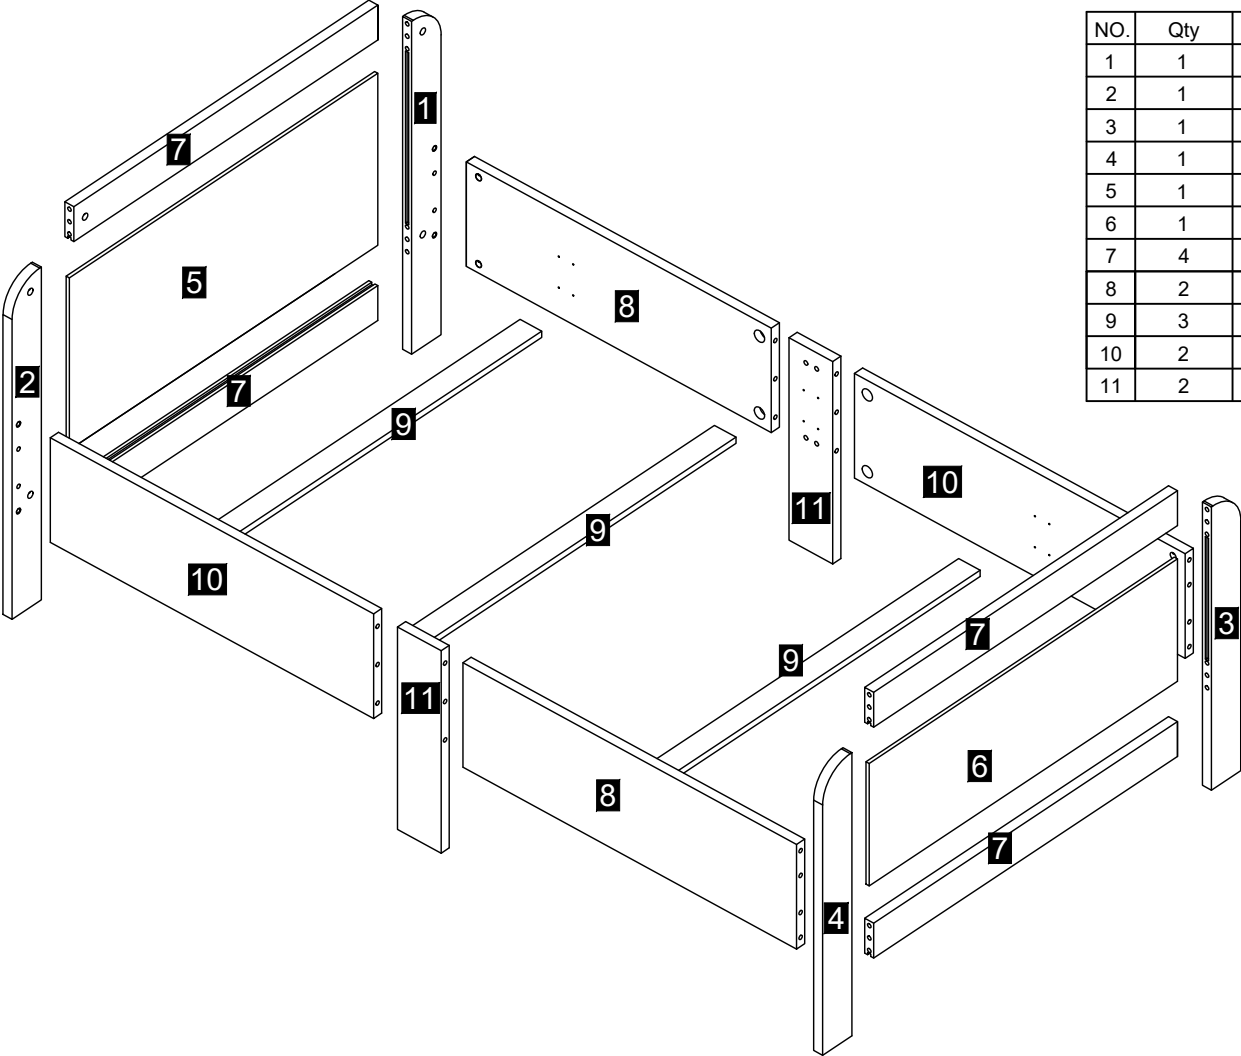

NO.	Qty	Ctn no
1	1	1/2
2	1	1/2
3	1	1/2
4	1	1/2
5	1	2/2
6	1	2/2
7	4	2/2
8	2	1/2
9	3	2/2
10	2	1/2
11	2	1/2

STEP:1





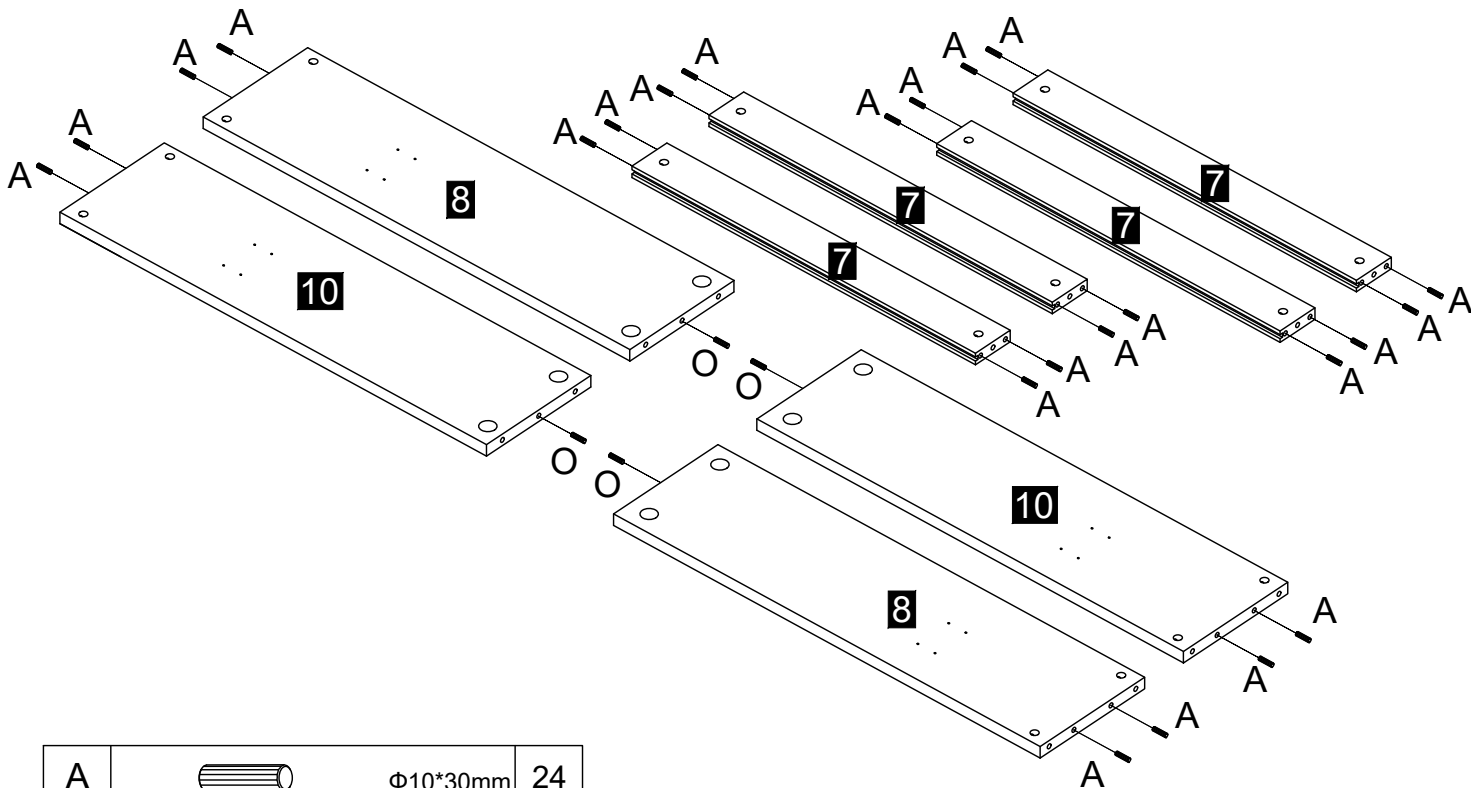


A		Φ10*30mm	24
O		Φ8x30mm	4

STEP:2


Achtung: Ziehen Sie die Schrauben beim ersten Zusammenbau von Kopf- und Fußteil nicht vollständig fest. Ziehen Sie sie erst dann zu 100 % an, wenn alle Holzteile flach und bündig ausgerichtet sind.

Warning: Do not tighten 100% screws when assemble headboard and footboard at first. Tighten 100% after all wooden parts are flat and aligned.

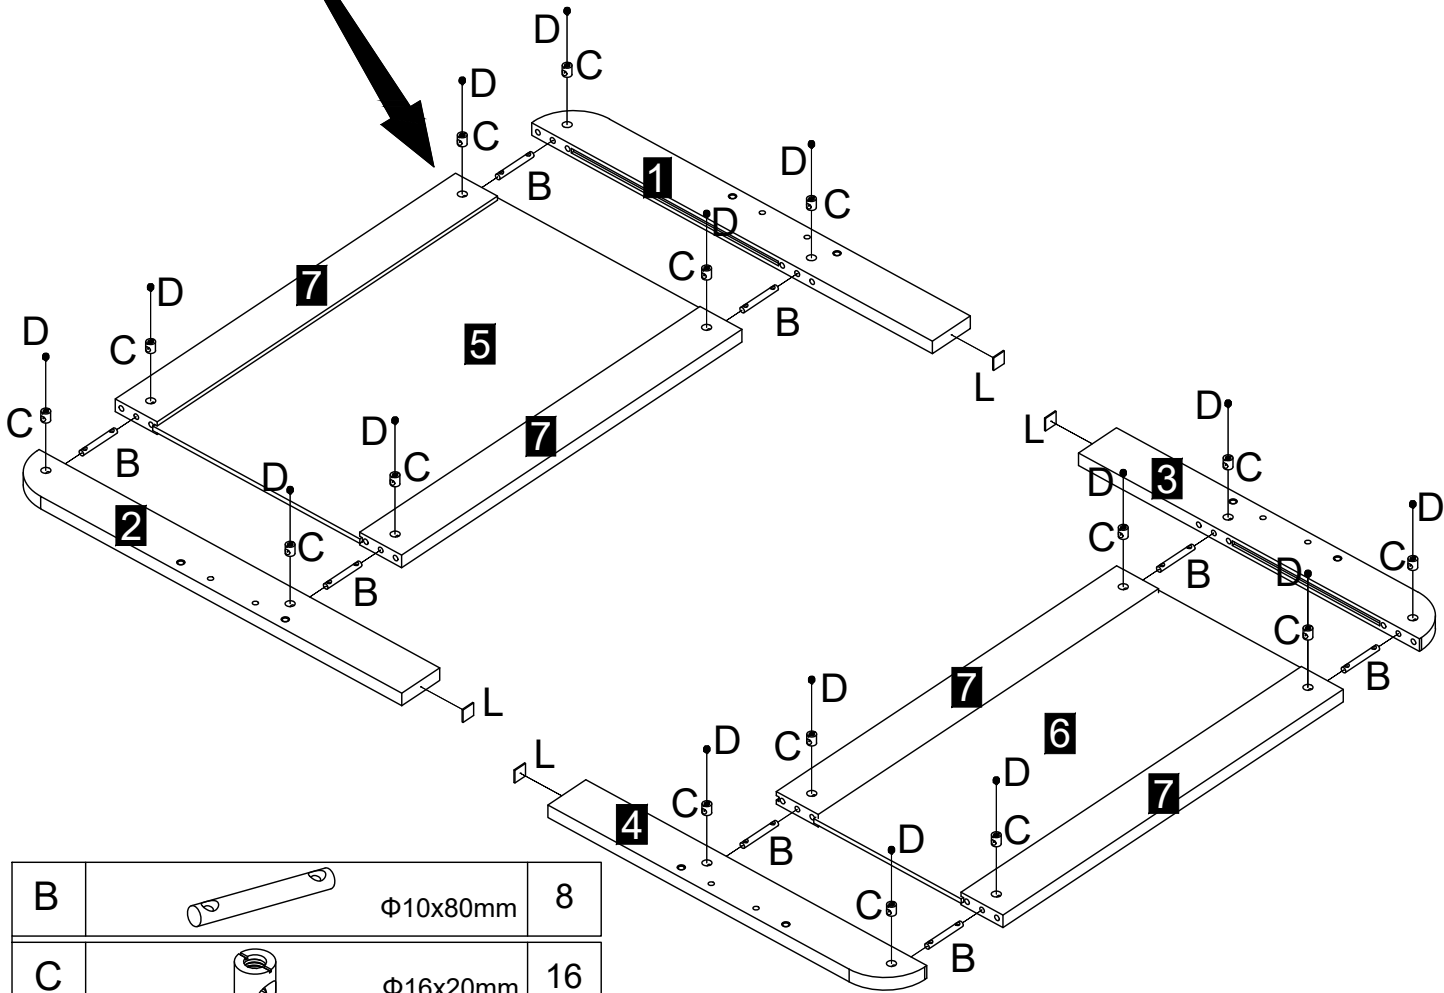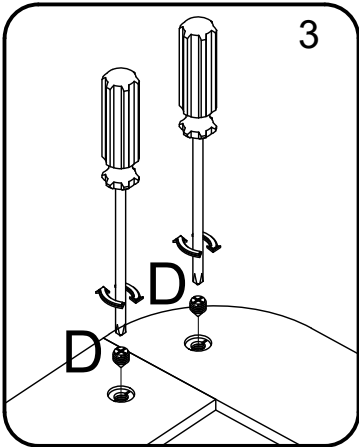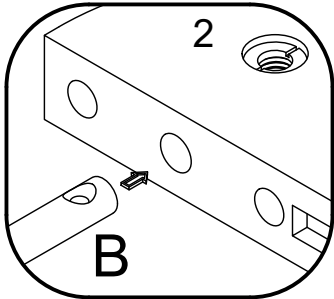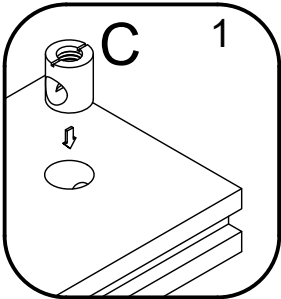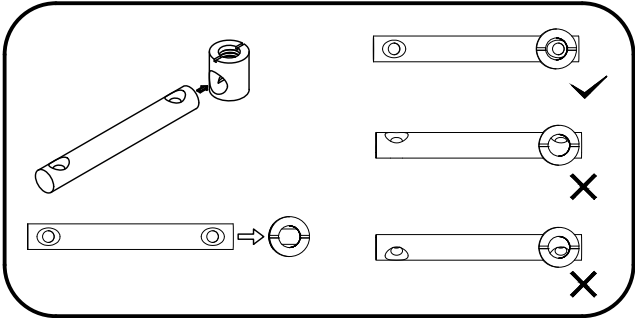


B		Φ10x80mm	8
C		Φ16x20mm	16
D		M10x13mm	16
L			4


STEP:3

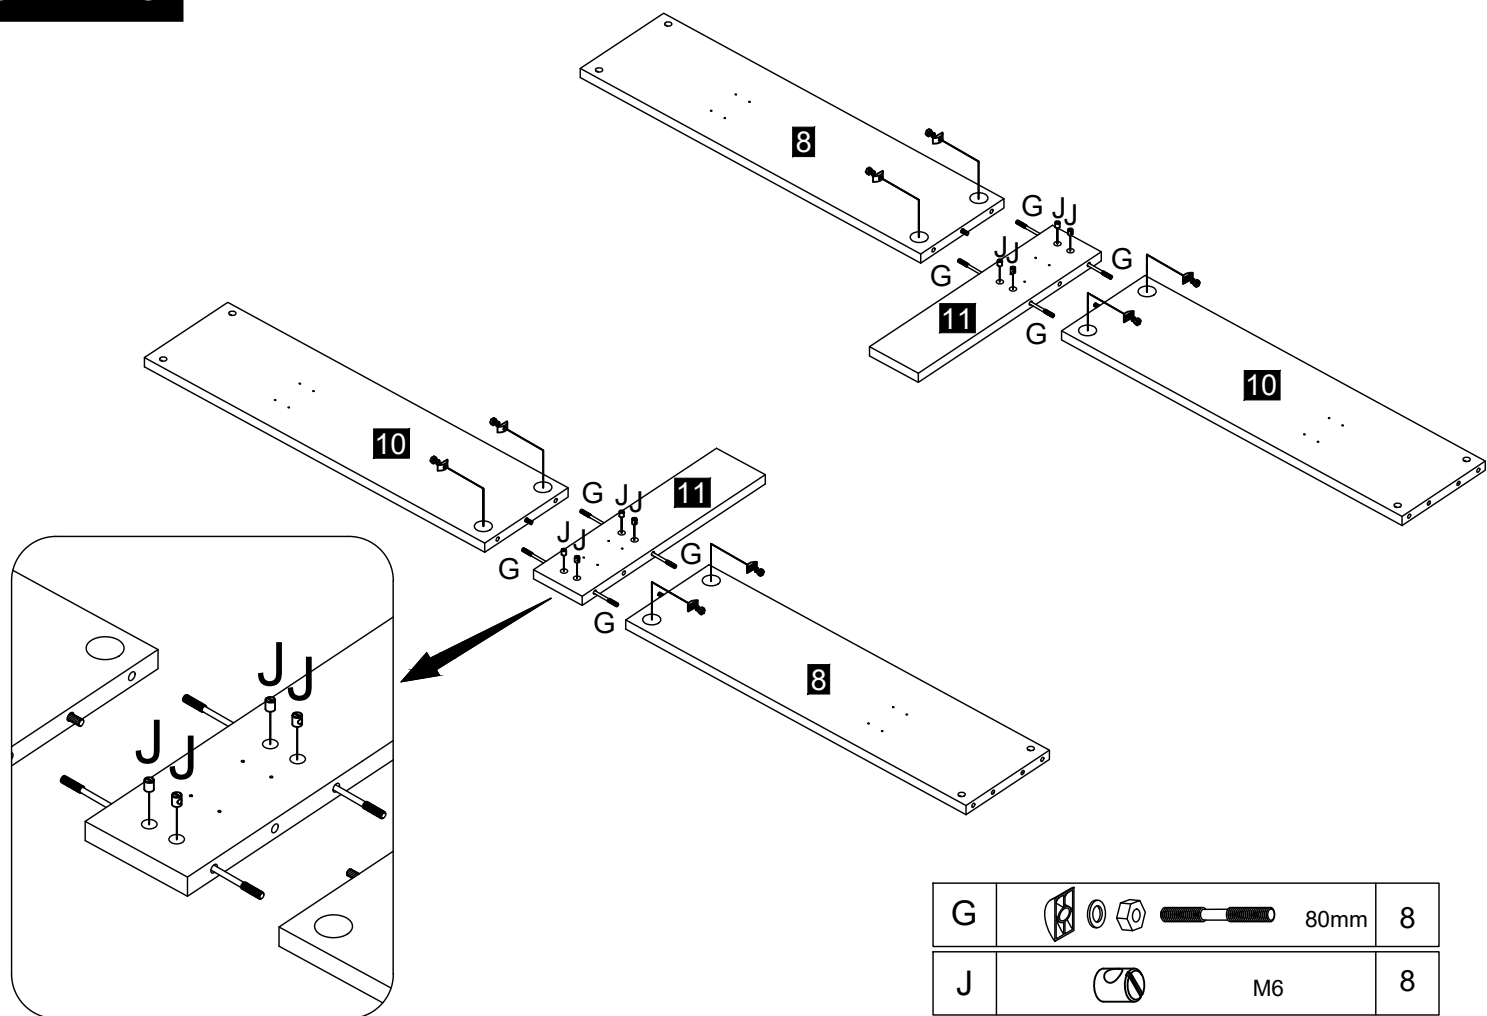


STEP:4

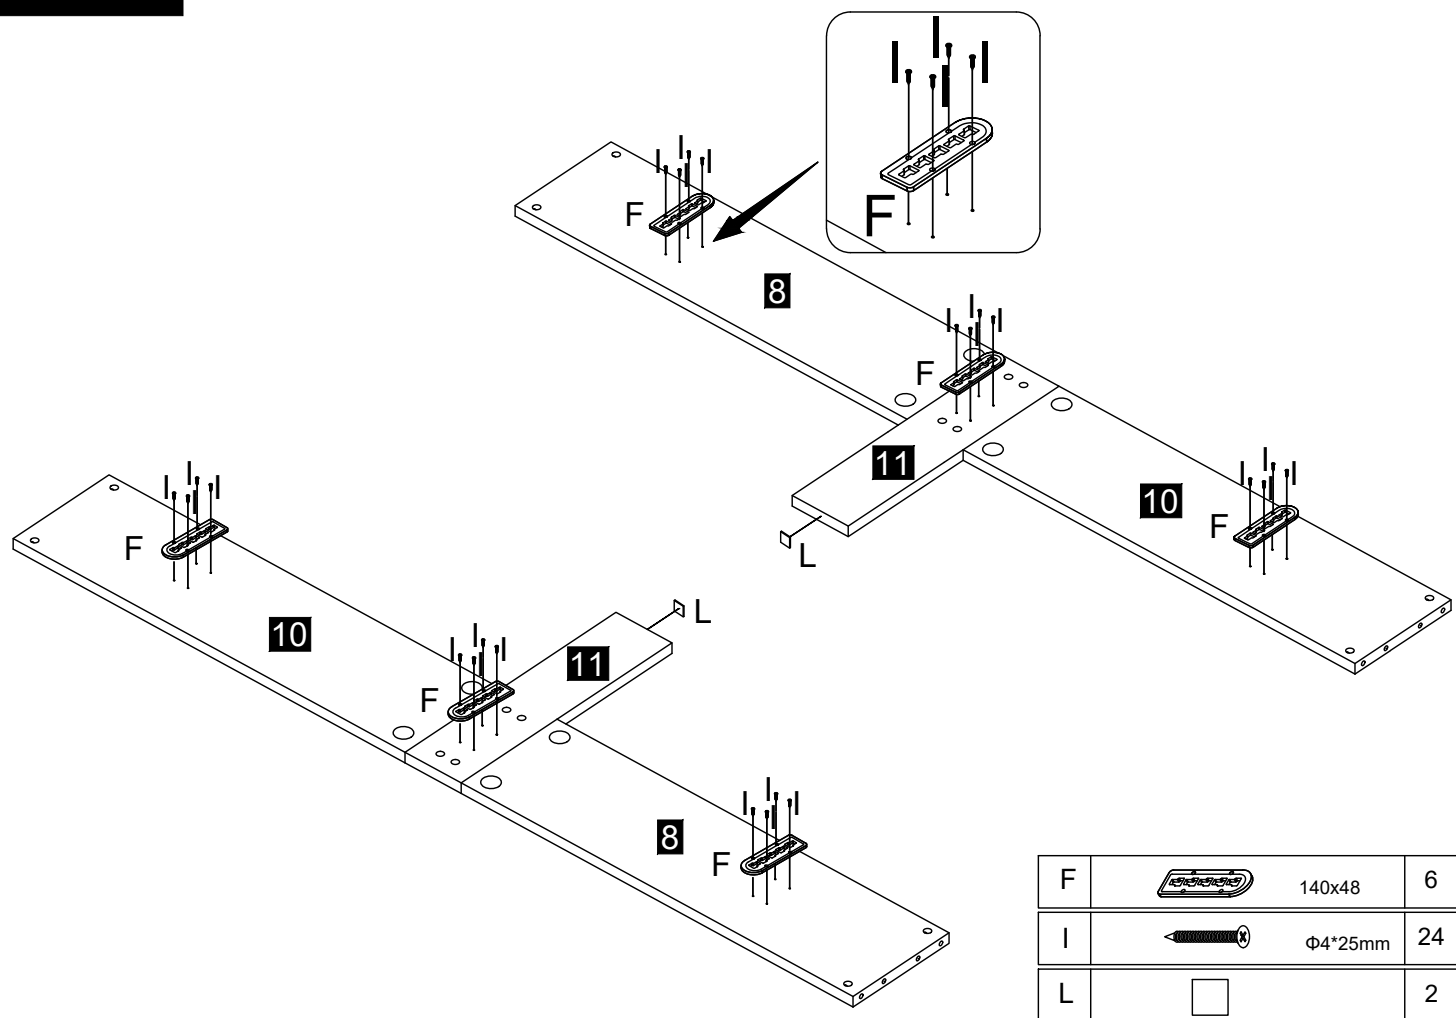


STEP:5

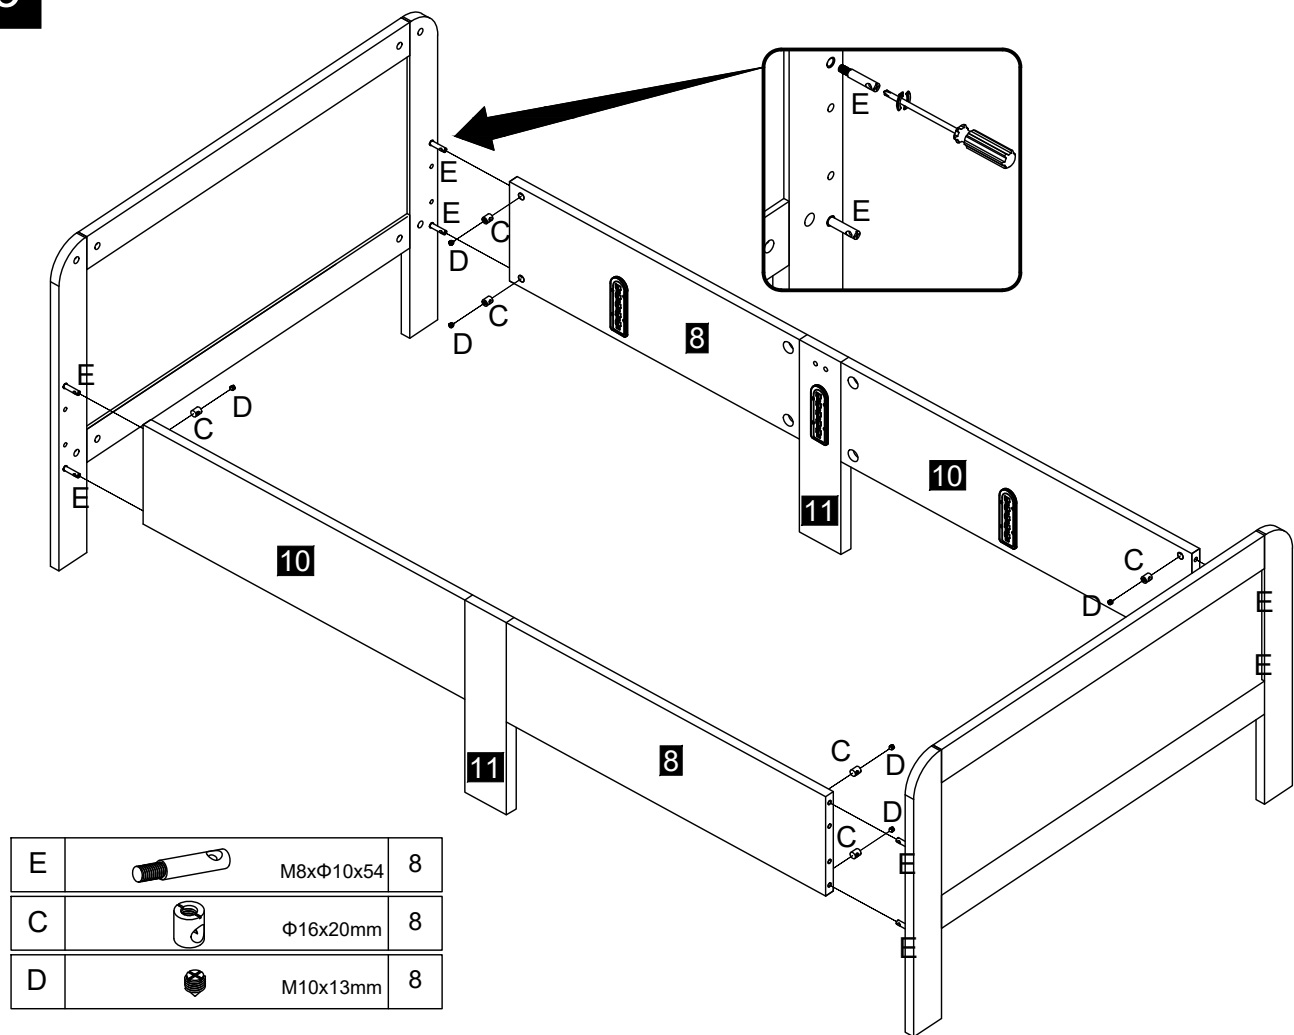


STEP:6







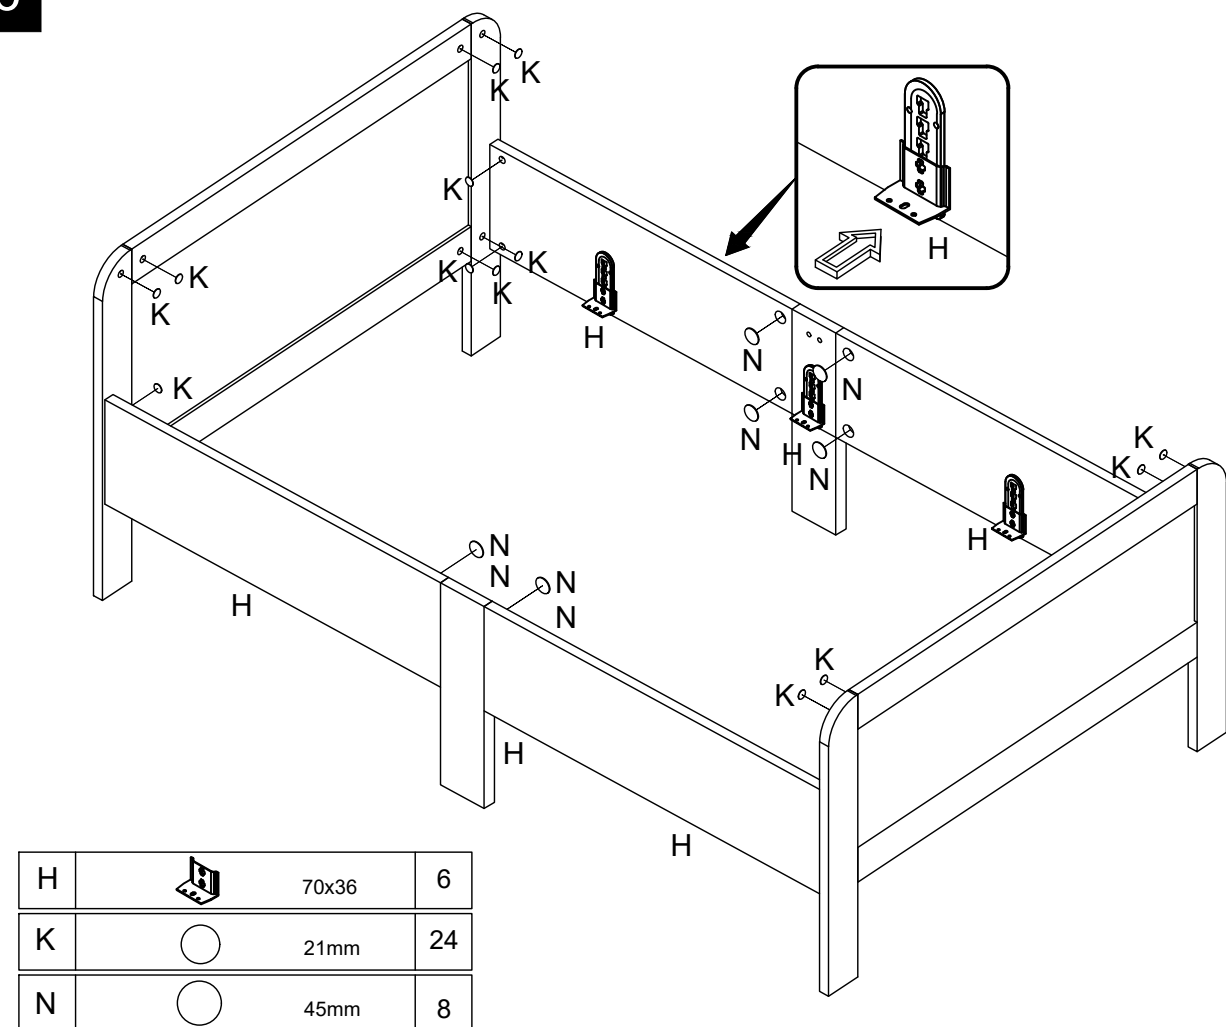



STEP:7

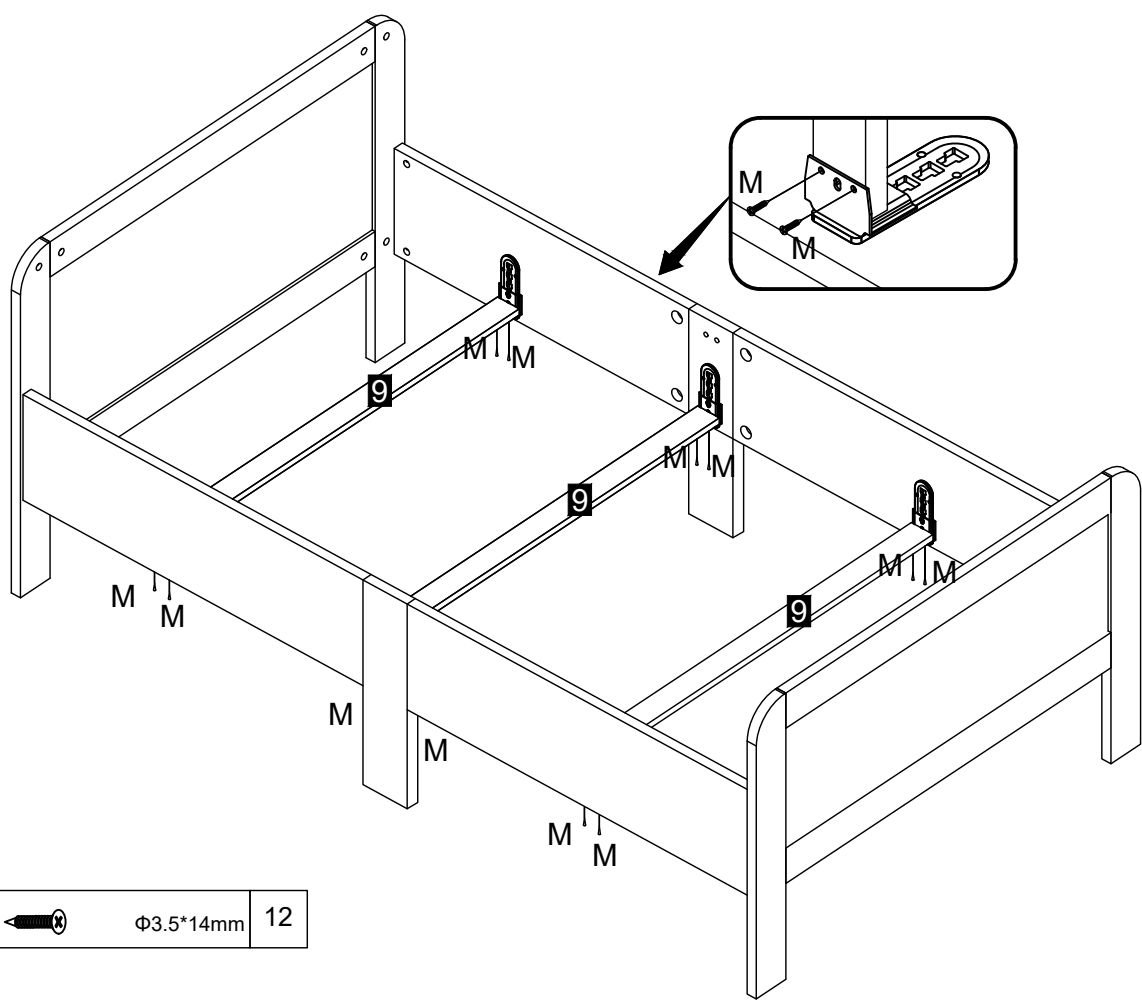


M		Φ3.5*14mm	12
---	---	-----------	----

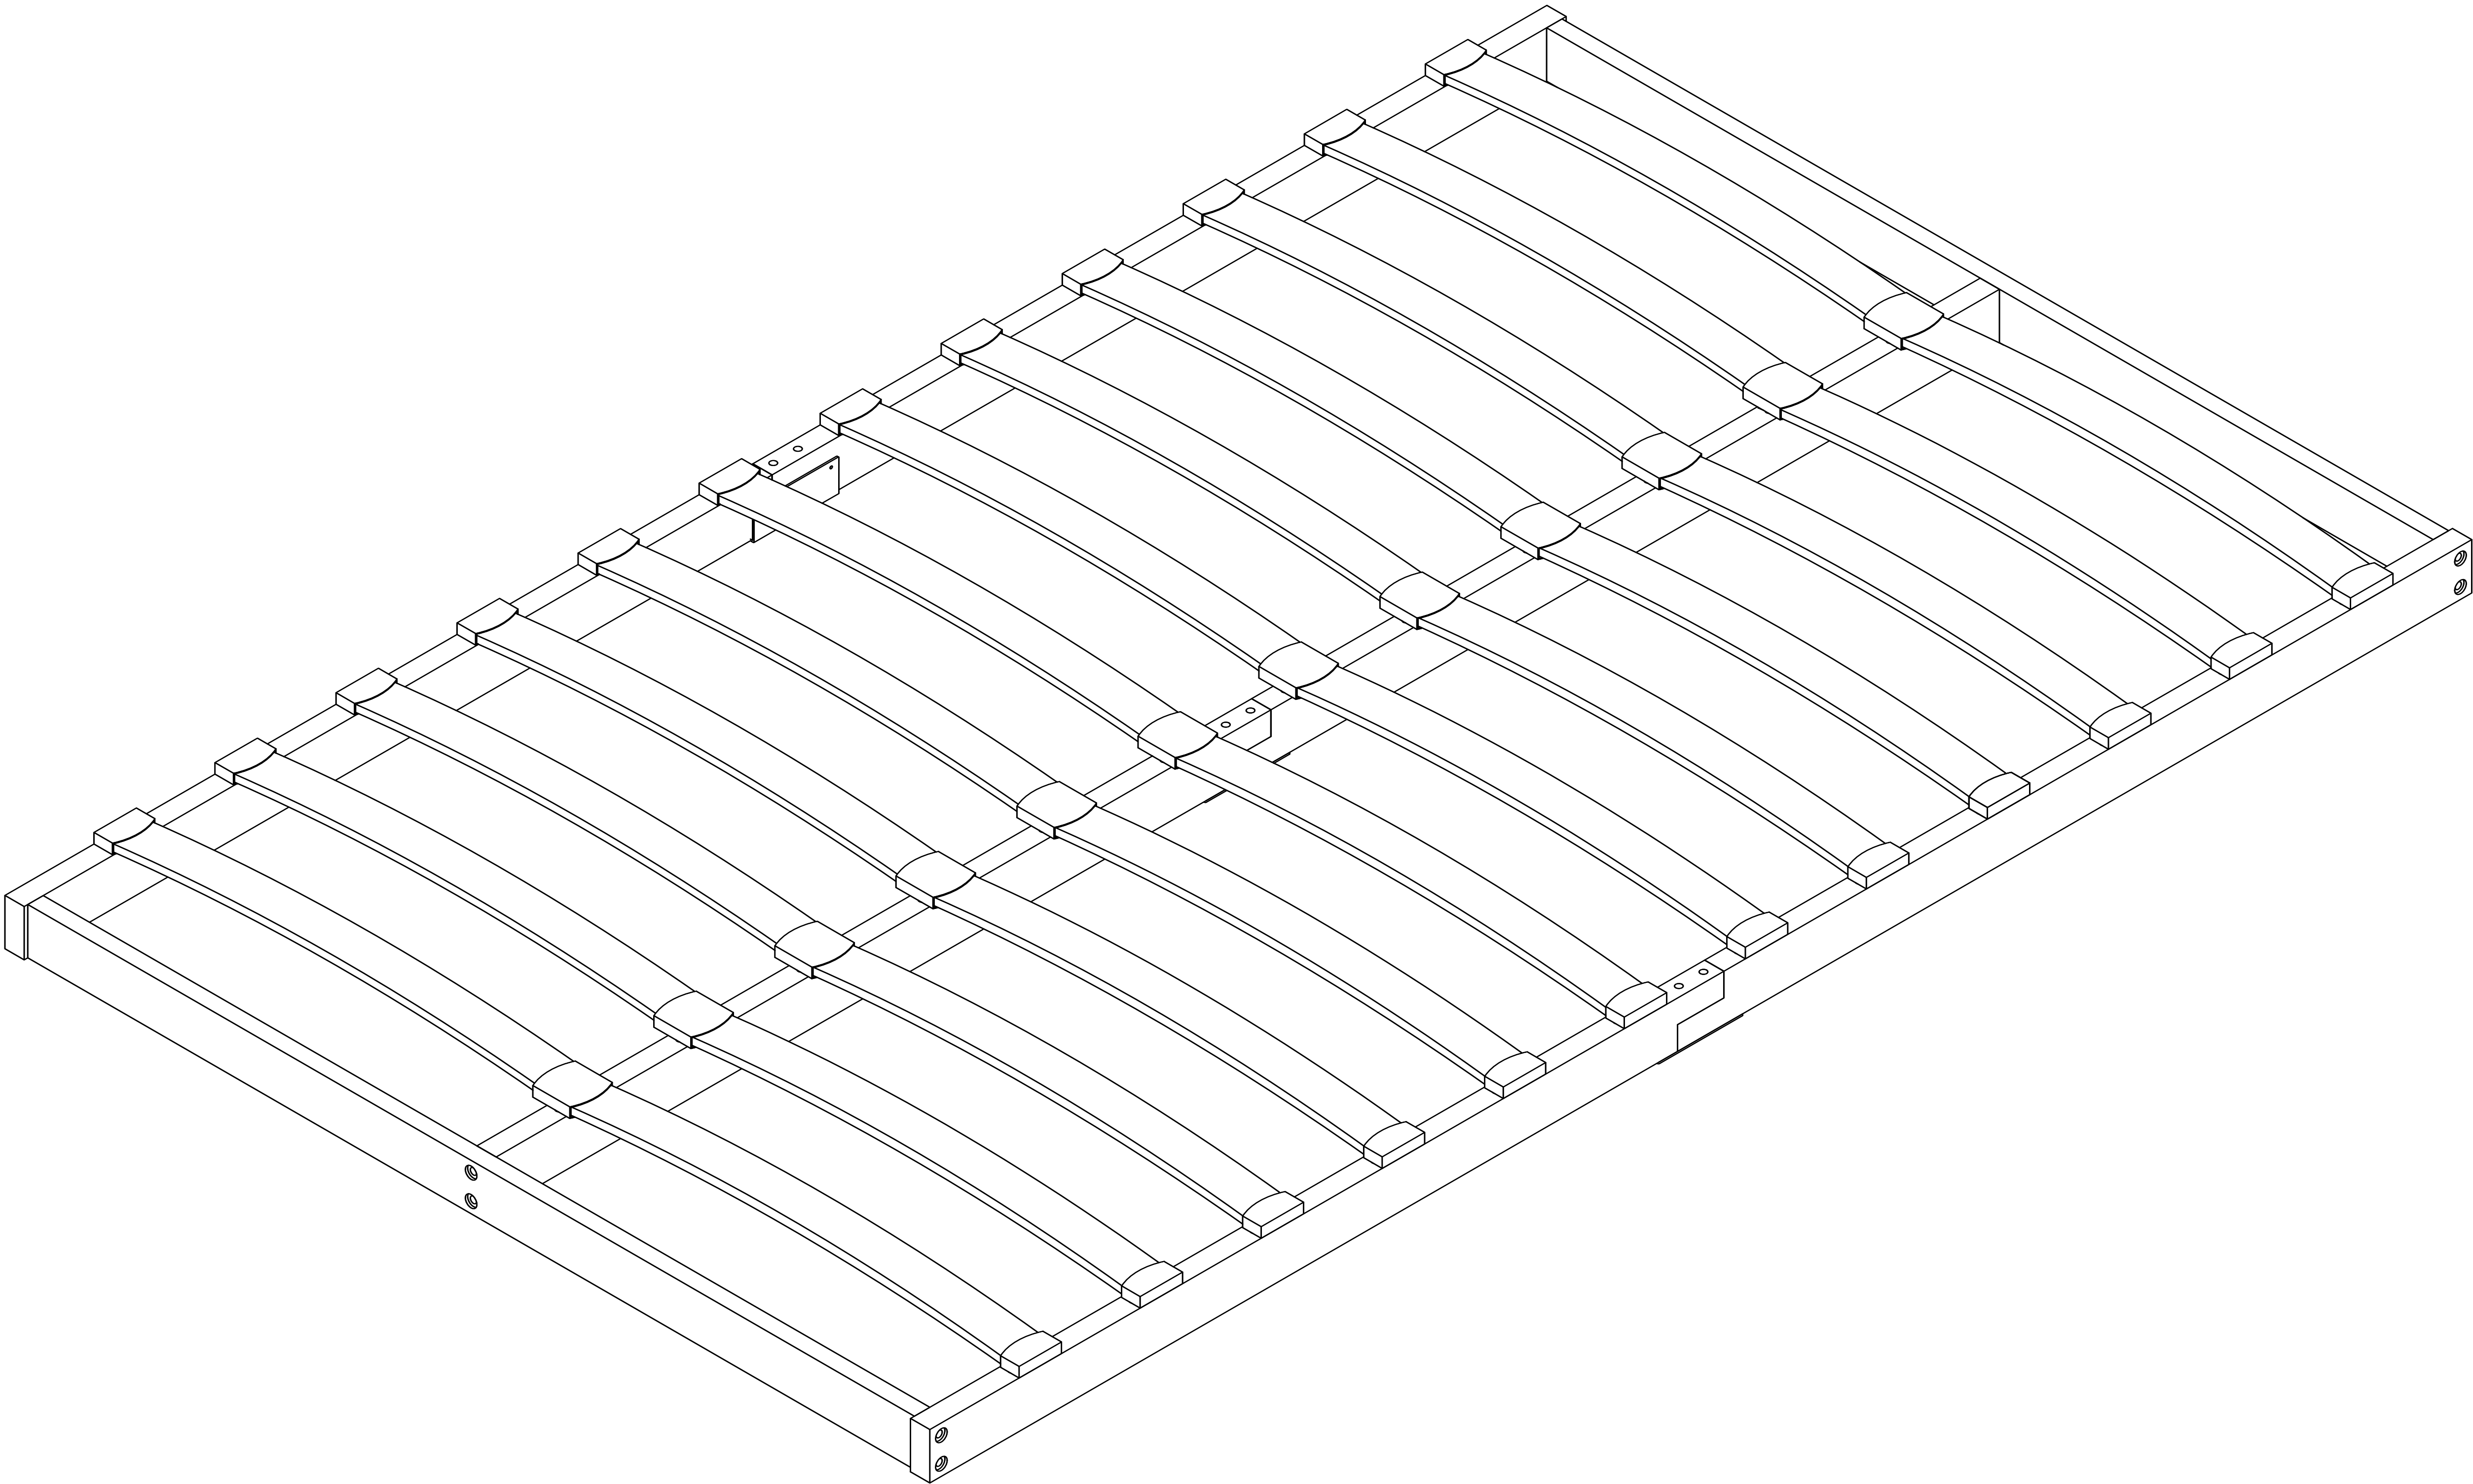


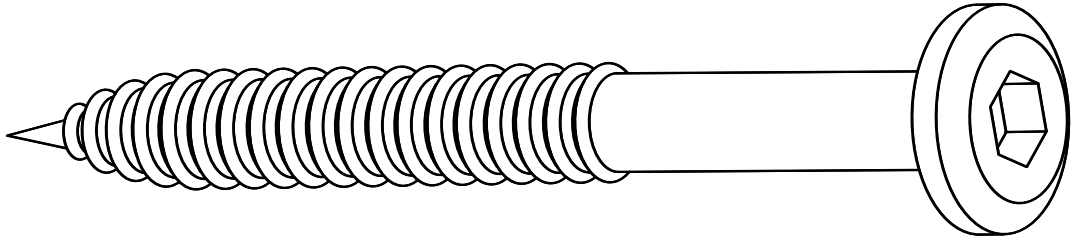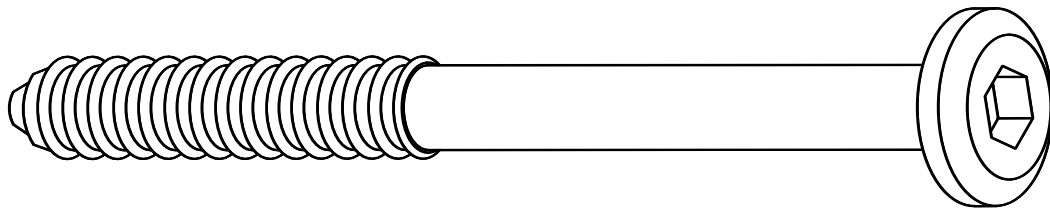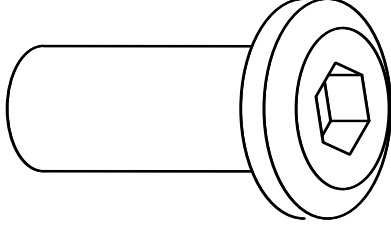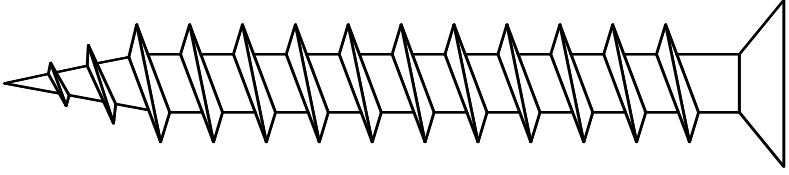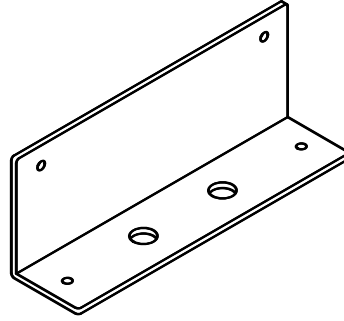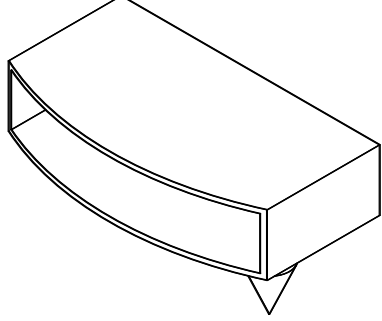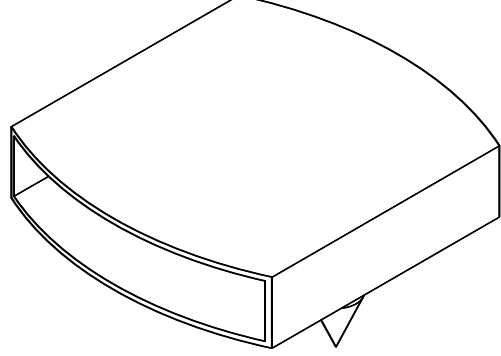A		$\Phi 6*70$	12
B		M6*50	6
C		M6*20	6
D		3.5*16	12
E			3
F			24
G			12

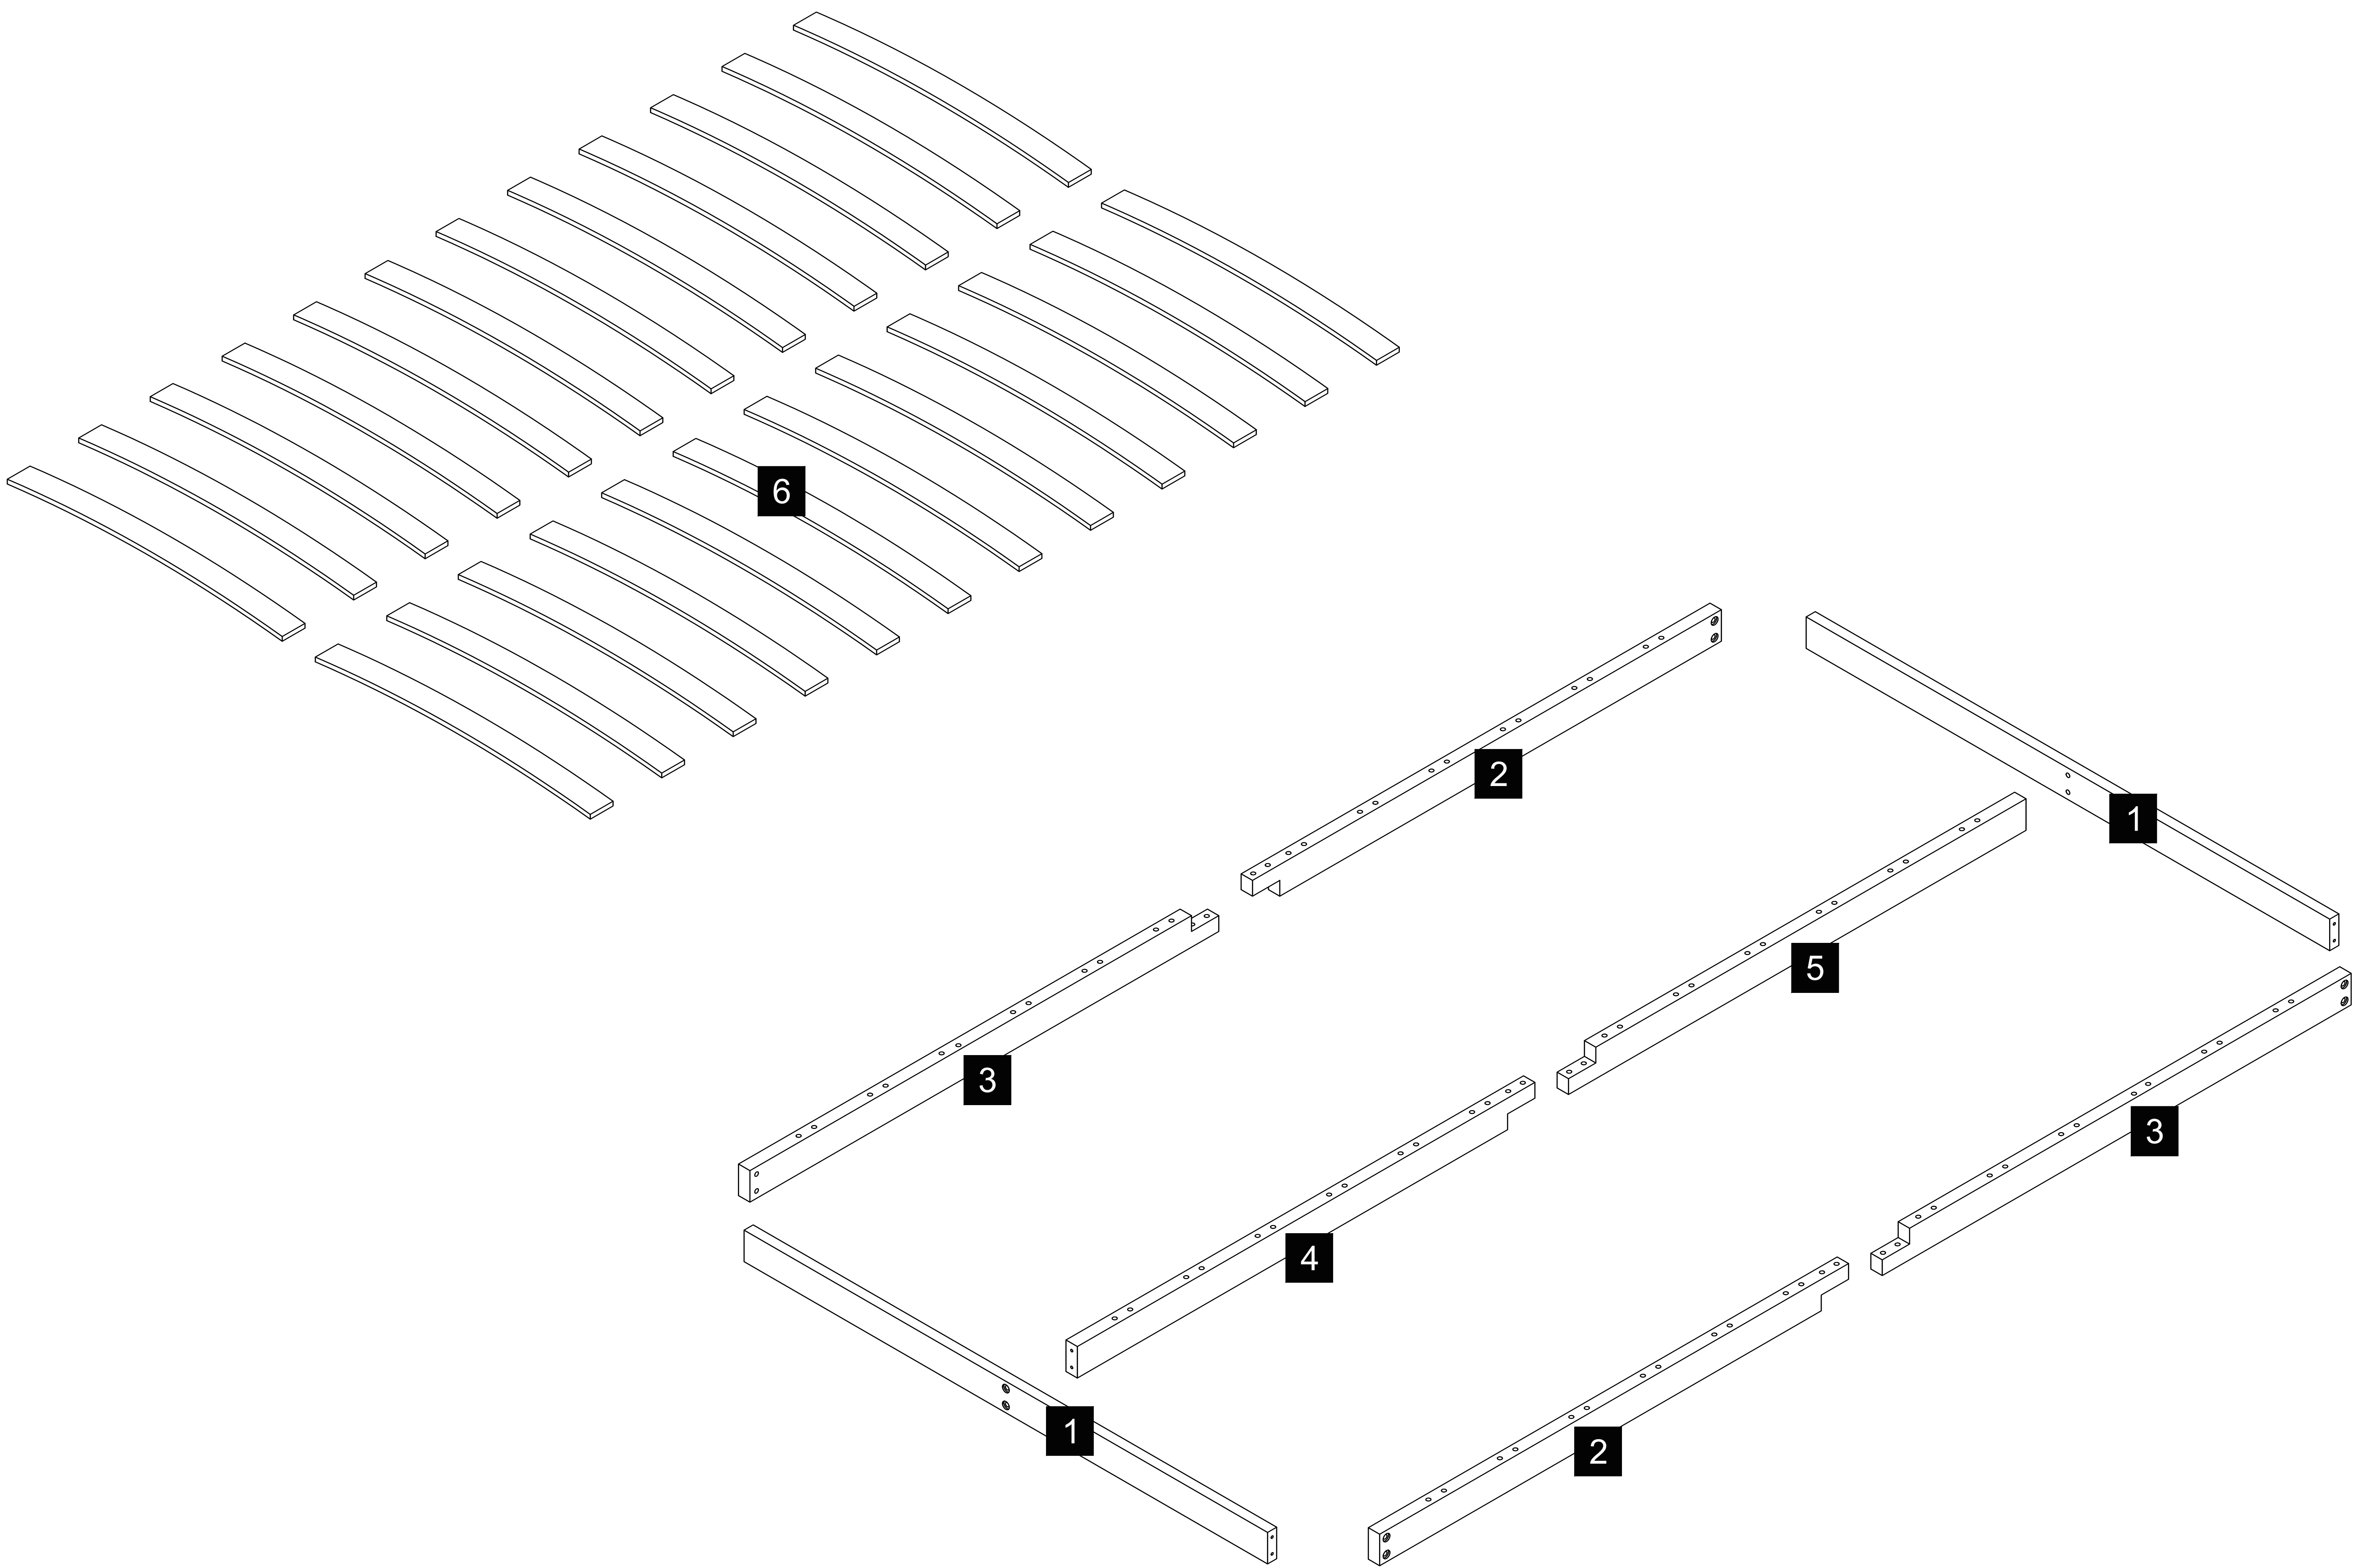


STEP:1

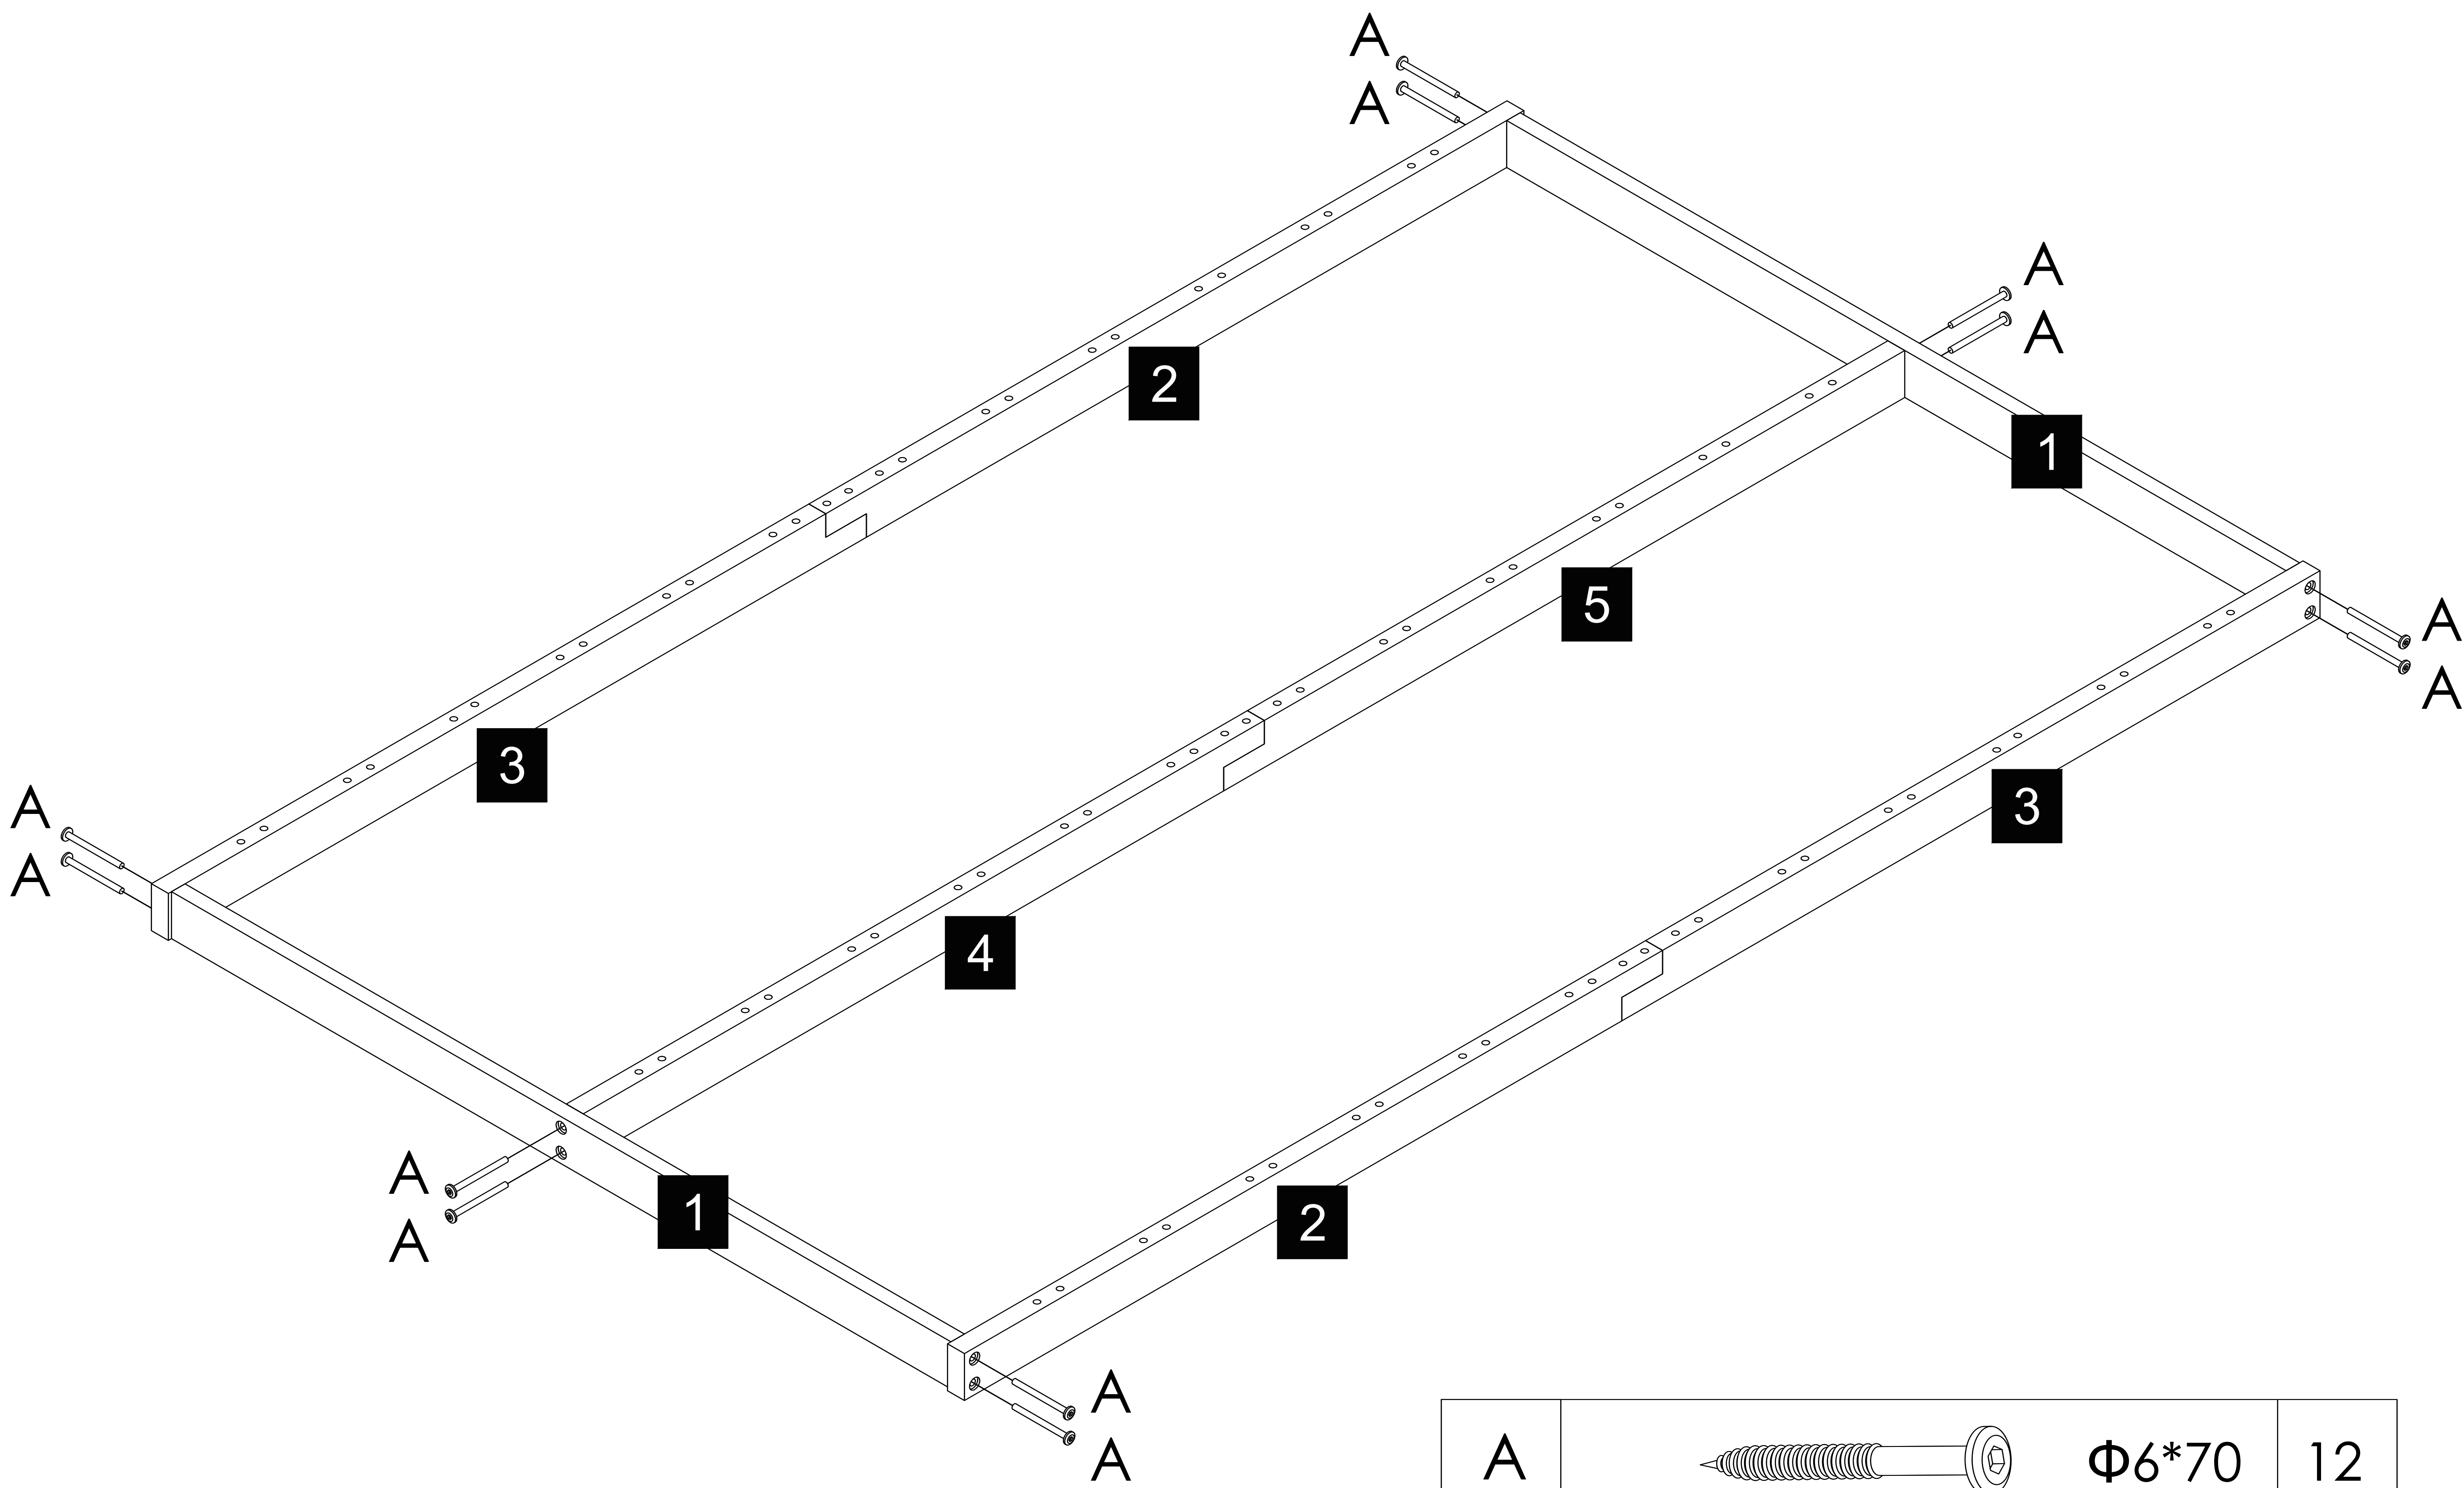

A		Φ6*70	12
---	---	-------	----

STEP:2

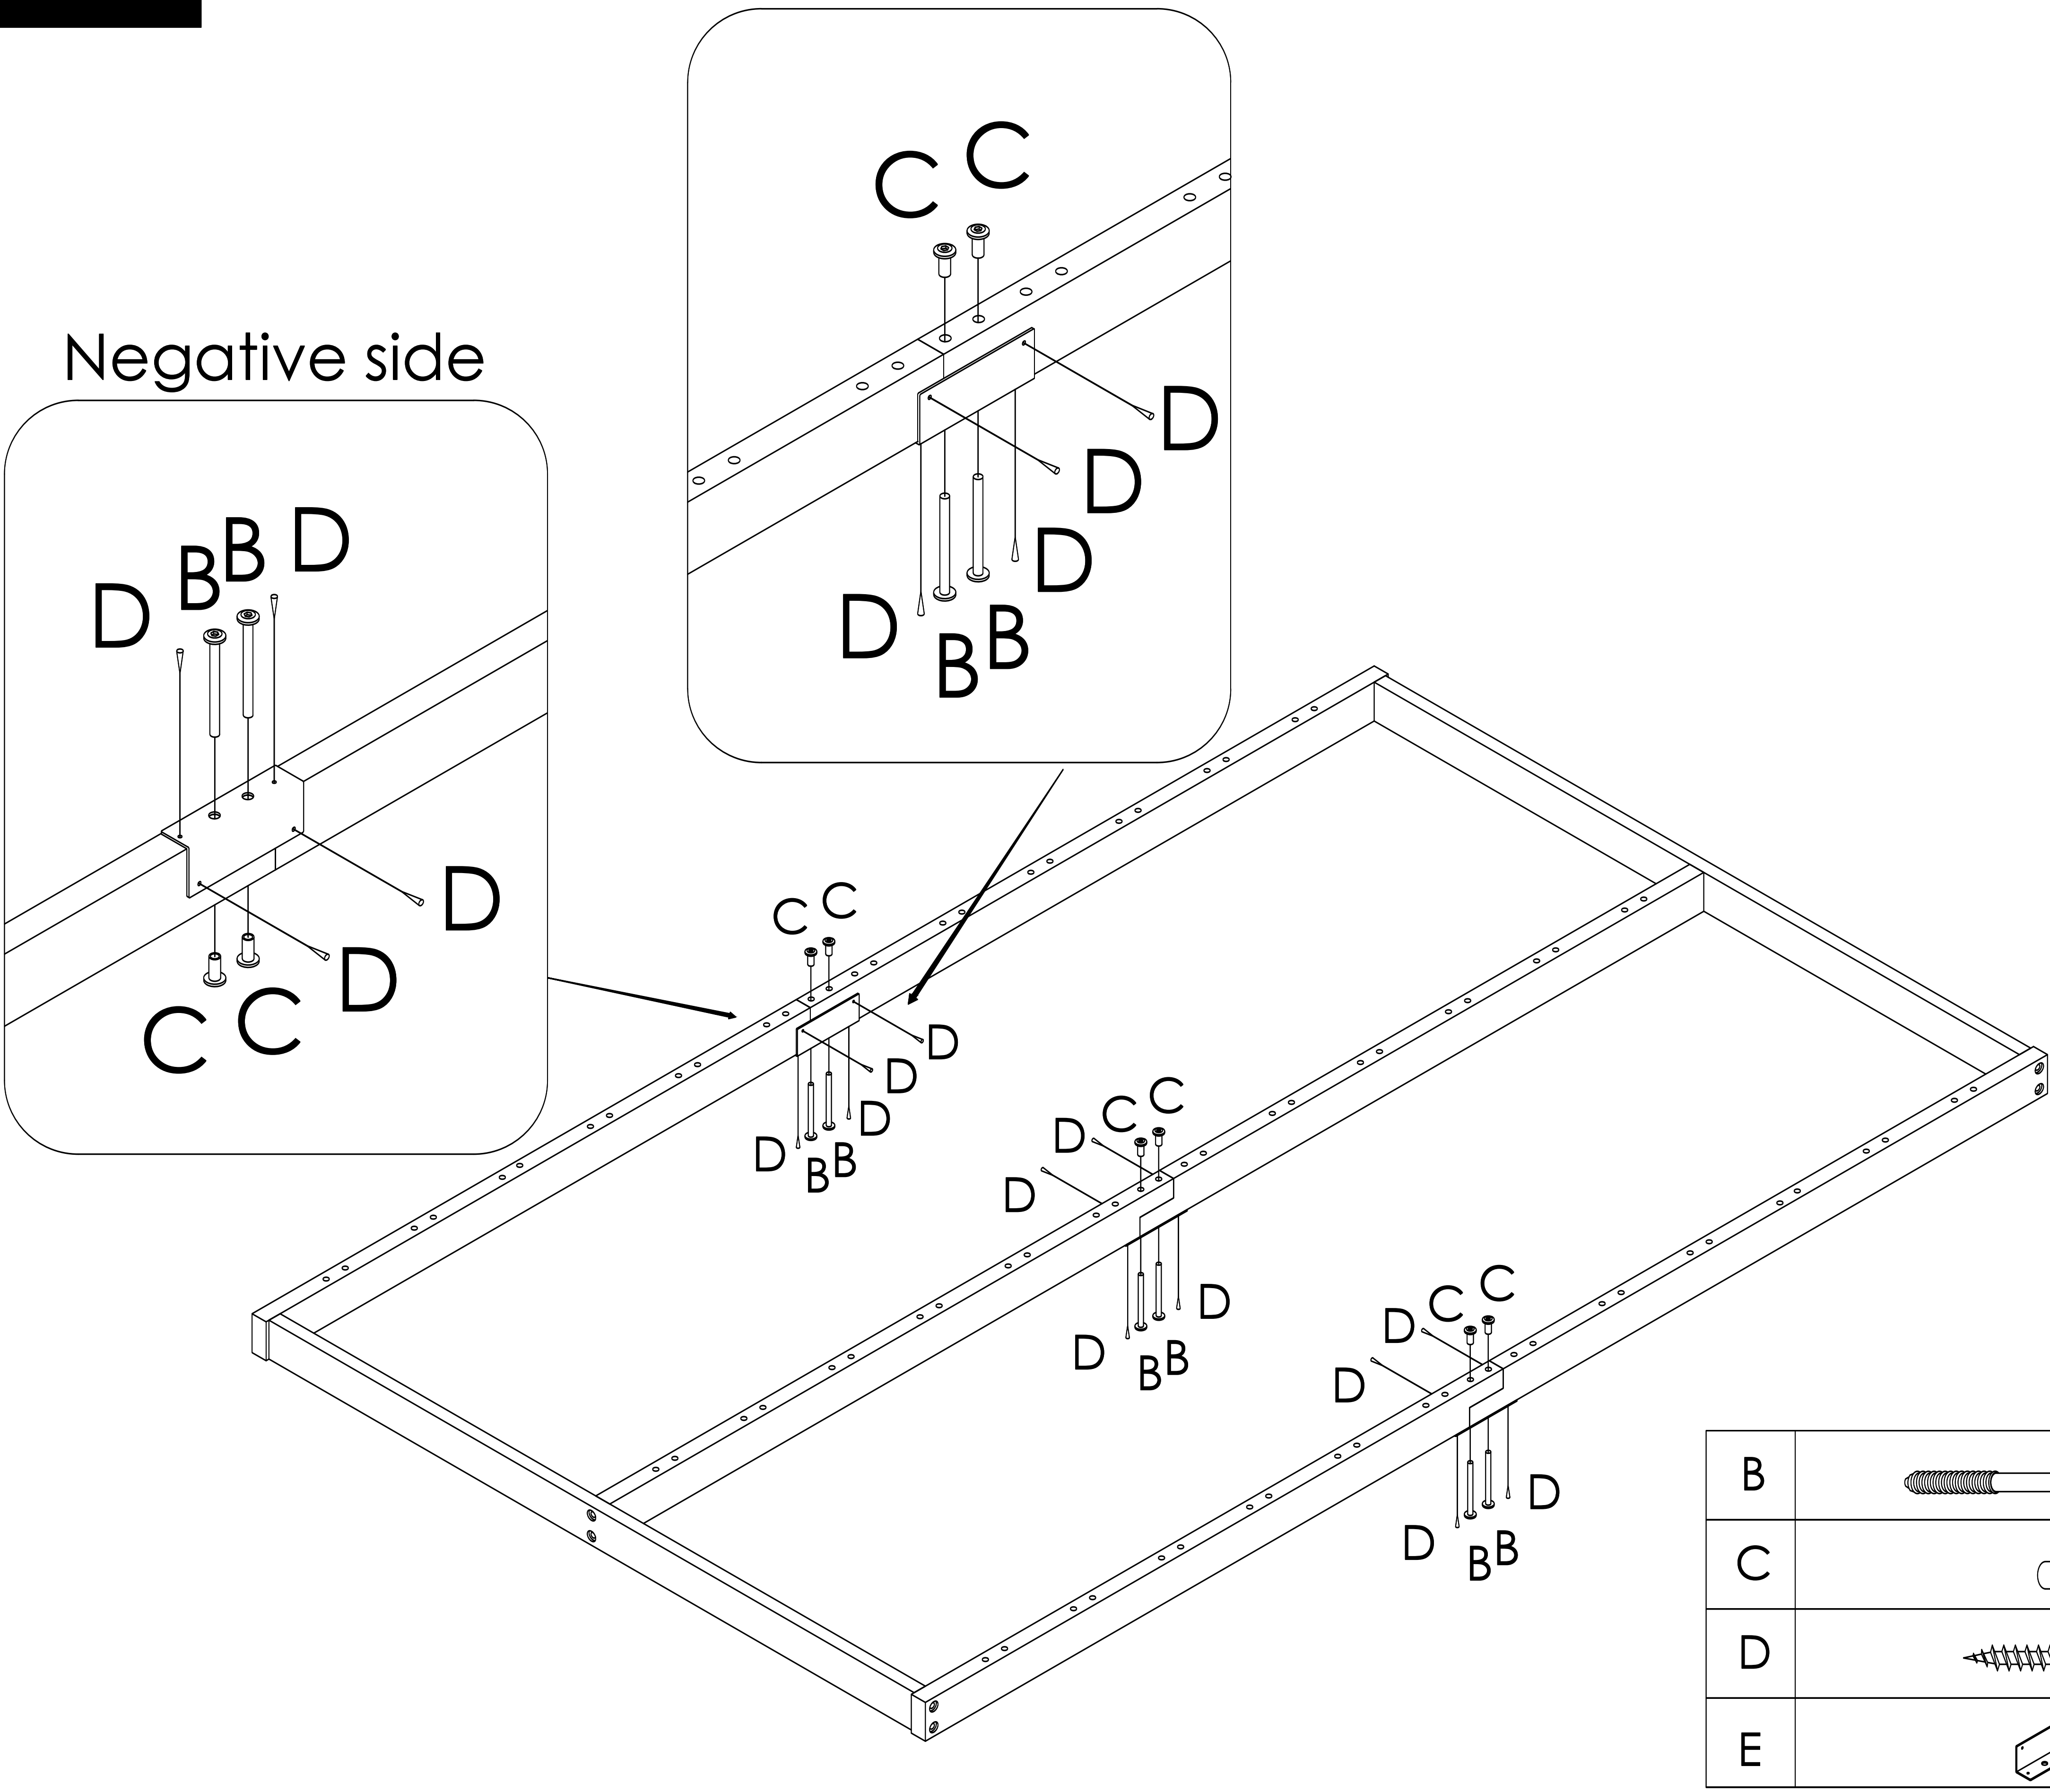

STEP:3

