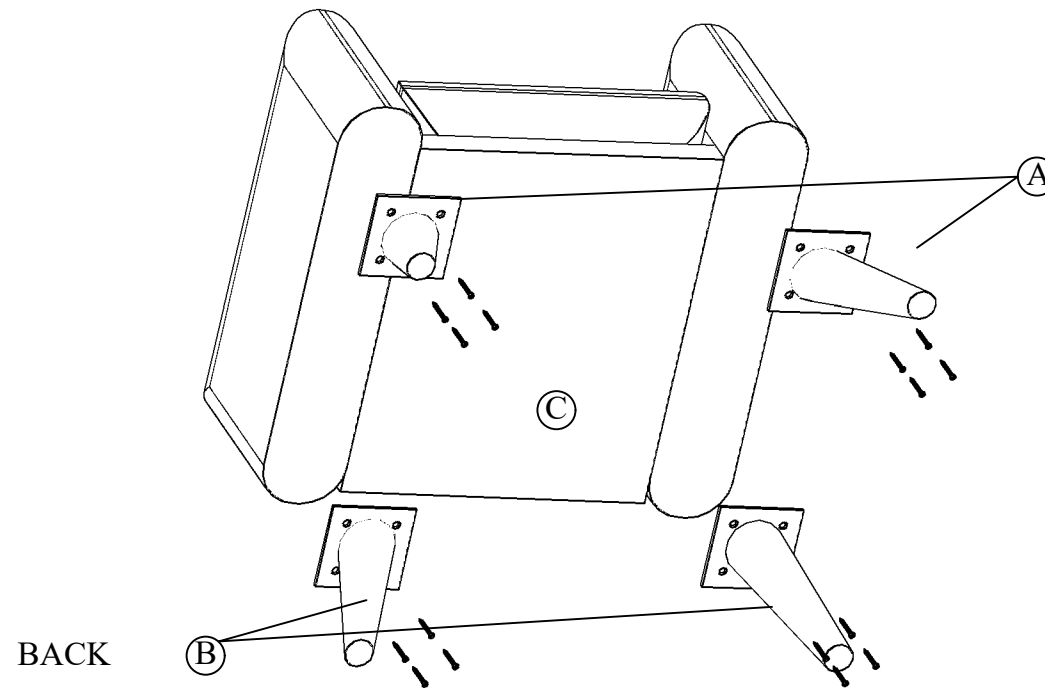
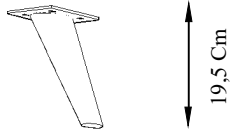




TORI ARMCHAIR FOOT ASSEMBLY INSTRUCTION

FRONT



ACCESSORY			
	(A) FRONT FOOT	(B) BACK FOOT	(C) SCREW 6X50
QUANTITY	2	2	16

ASSEMBLY TIME : 10 MINS