



# BRIN

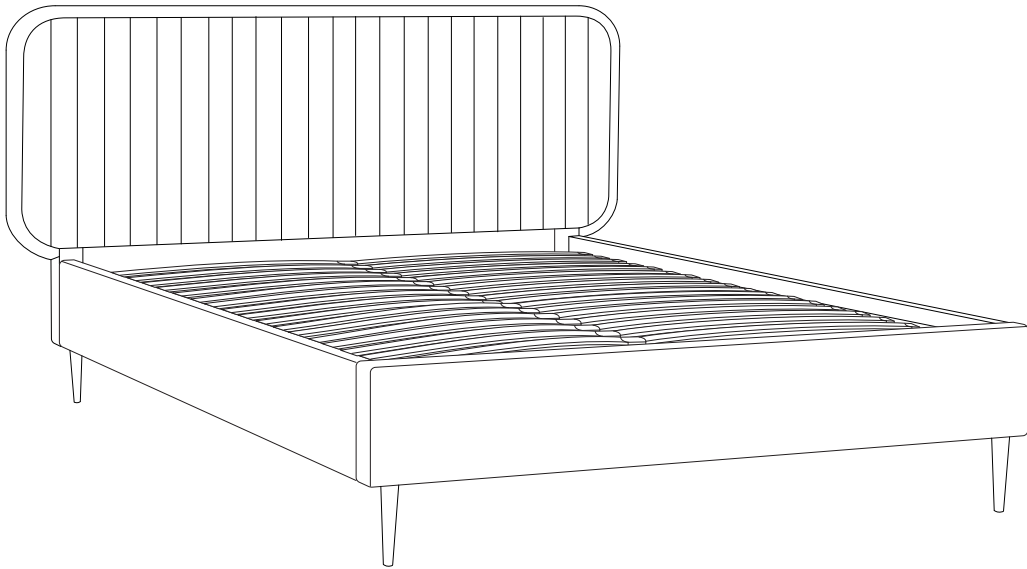

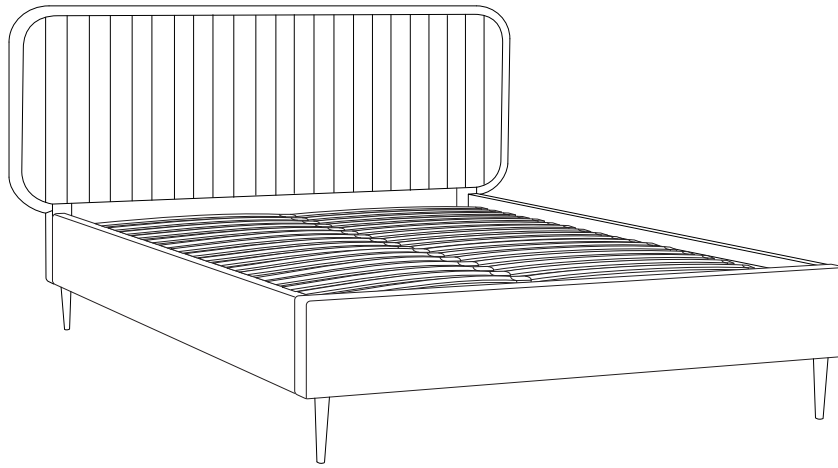


Assembly instructions for the bed frame, including tool requirements, time, and personnel.

**Tools:** An icon shows an Allen key and a wrench inside a circle, and a power drill with a diagonal line through it, indicating that a power drill is not required.





**Warning:** A warning triangle with an exclamation mark is shown next to the tool icons.

**Time:** A clock icon is shown next to the text "30'", indicating the estimated assembly time.



**Personnel:** An icon of a person is shown next to the text "2", indicating that two people are required for assembly.

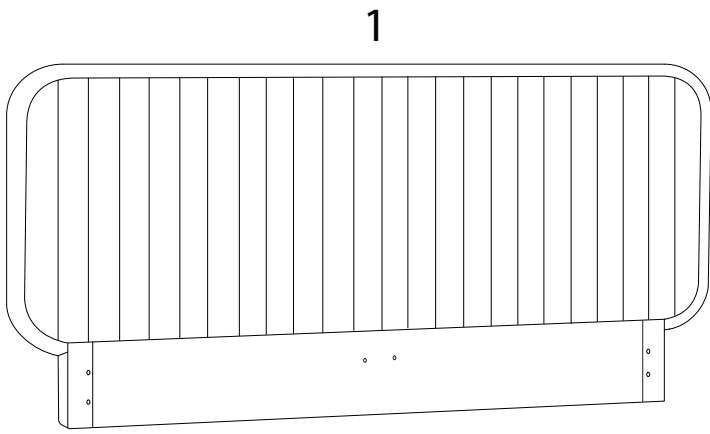

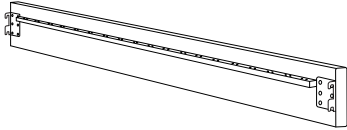


6 x 38

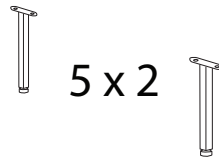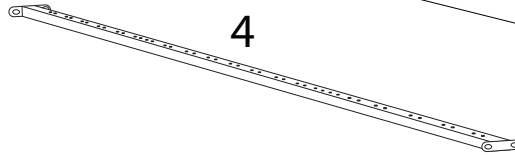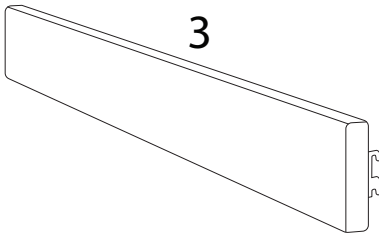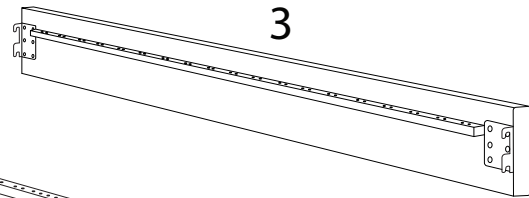


2

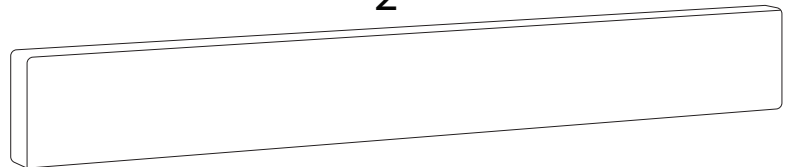

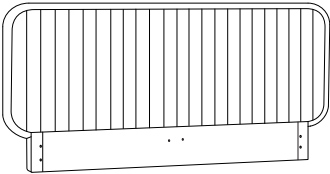
<p>1</p>  <p>x 1</p>	<p>2</p>  <p>x 1</p>	<p>3</p>  <p>x 2</p>
---	---	---

4

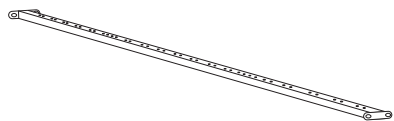

x 1

5




x 2

6




x 38

7



x 38

8




x 19

9




x 4

A




x 12

B




x 4

C

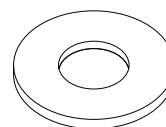


x 8

D




x 8

E




x 4

F




x 1

G





x 1







!


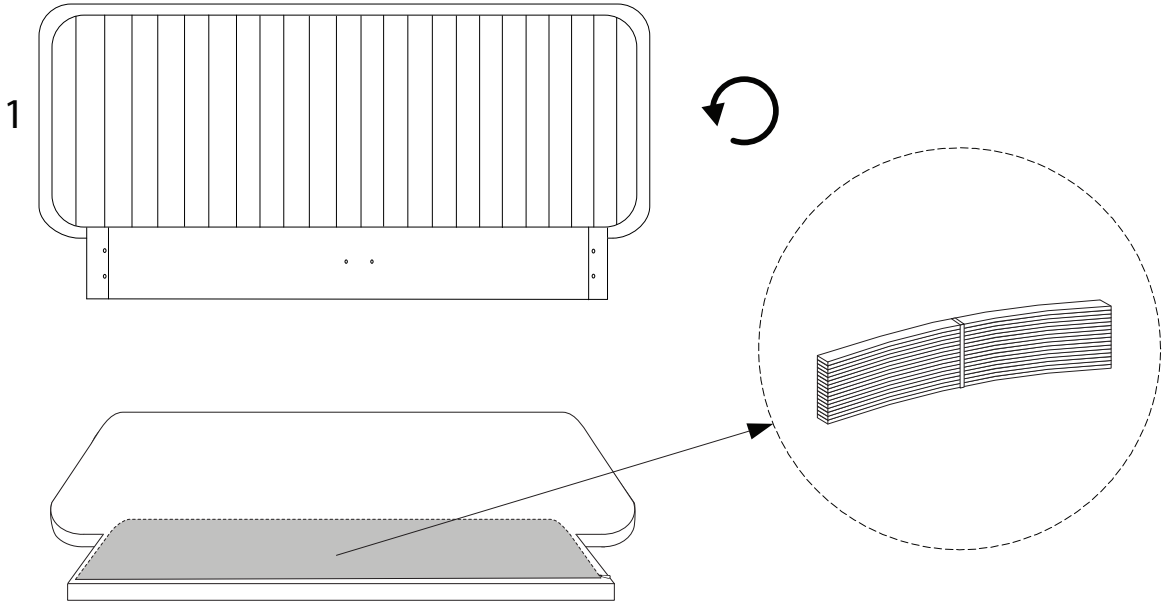


1

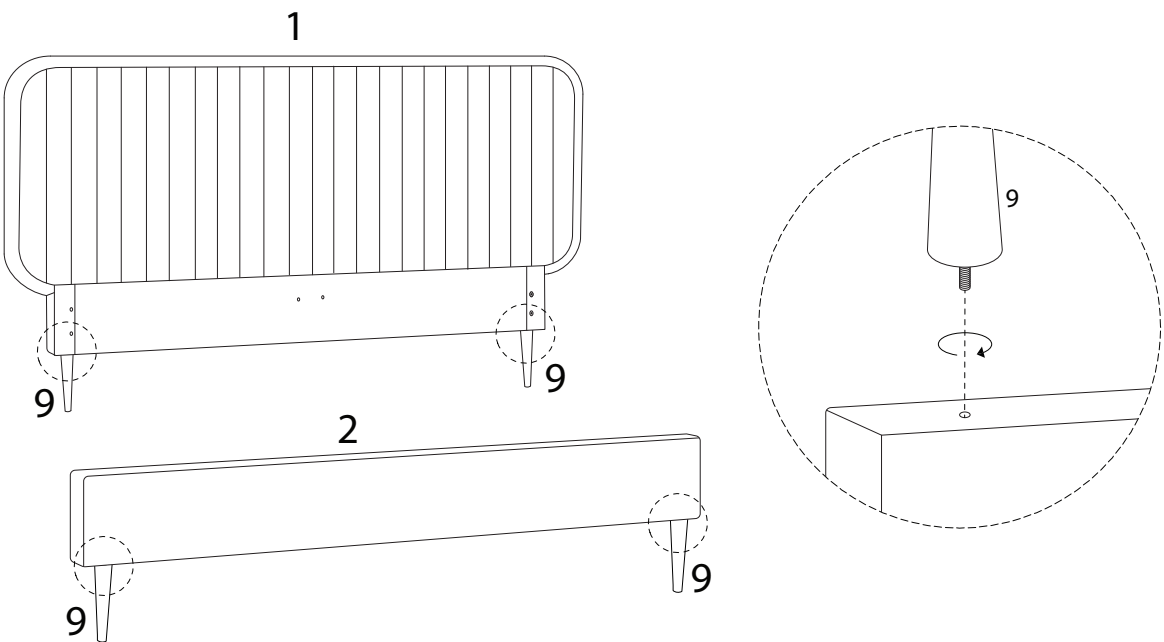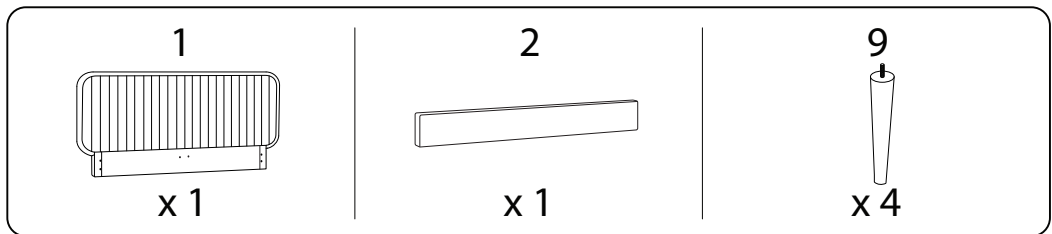








2
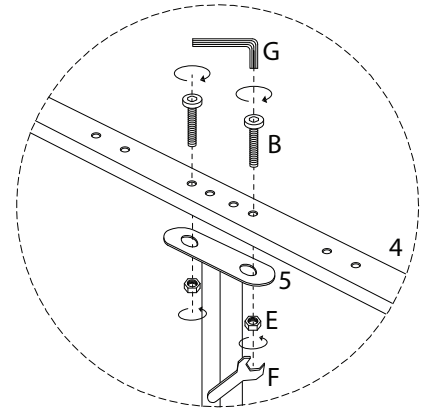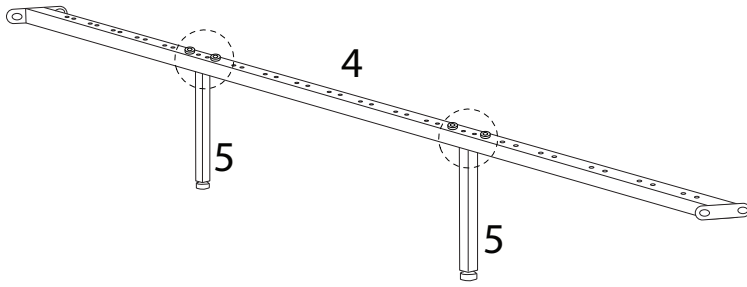
<b>4</b>  x 1	<b>5</b>  x 2	<b>B</b>  M8 x 35 x 4	<b>E</b>  x 4	<b>F</b>  x 1	<b>G</b>  x 1
--	--	---	---	--	--




3

<b>3</b>  x 2	<b>A</b>  M8 x 30 x 8	<b>C</b>  x 8	<b>D</b>  x 8	<b>G</b>  x 1
--	---	--	--	--

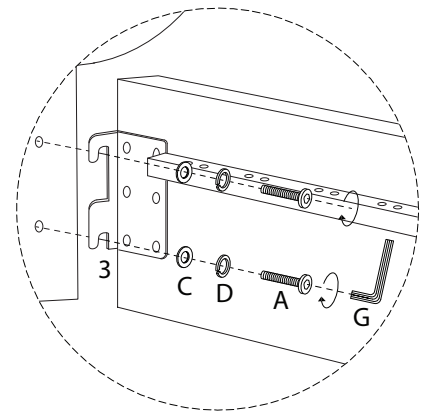
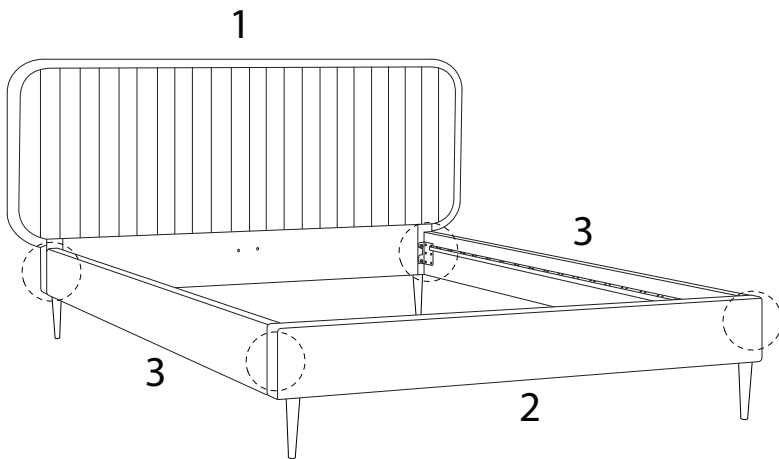


4

A



G

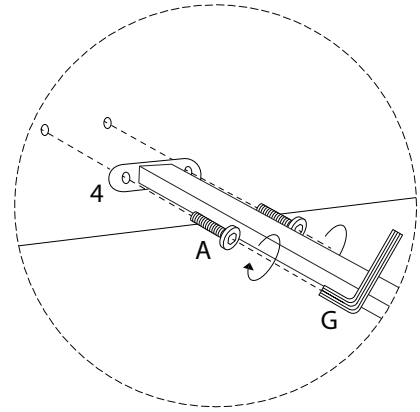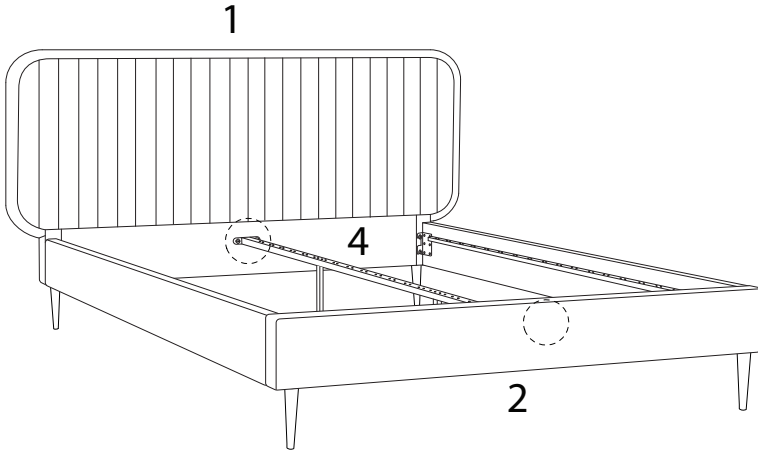

5 x 19

6



x 2

7




x 1



8



x 2

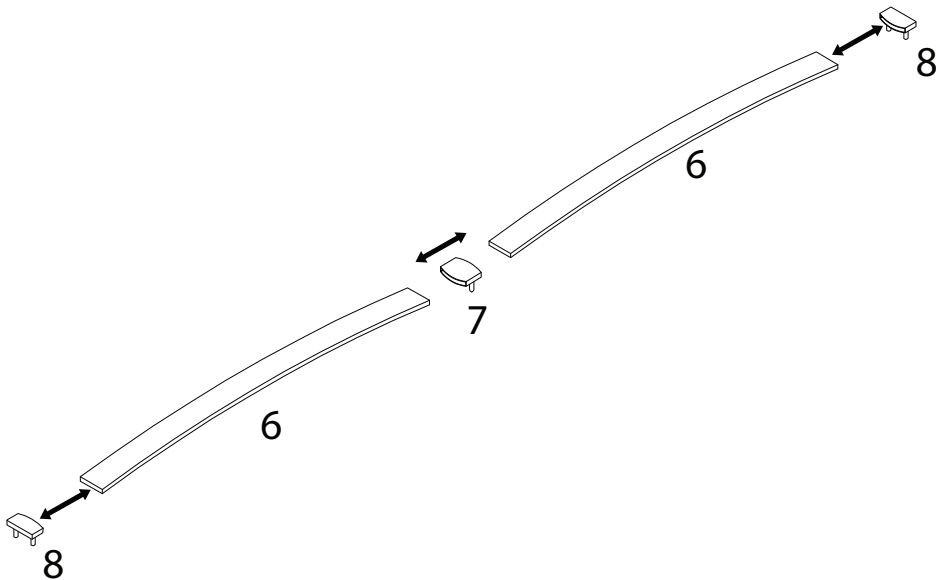

!

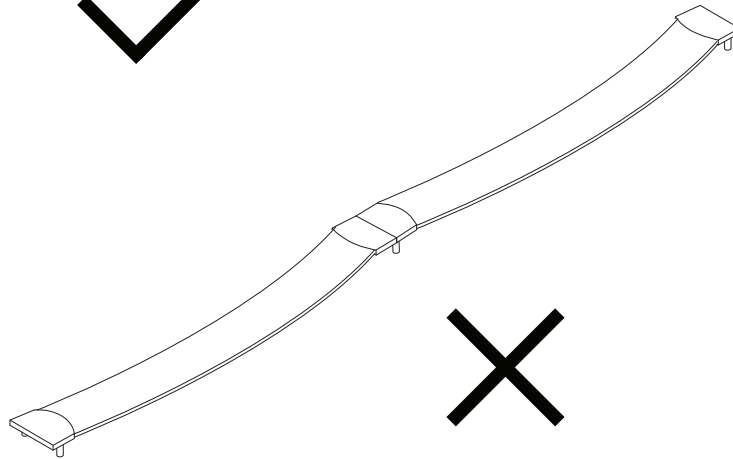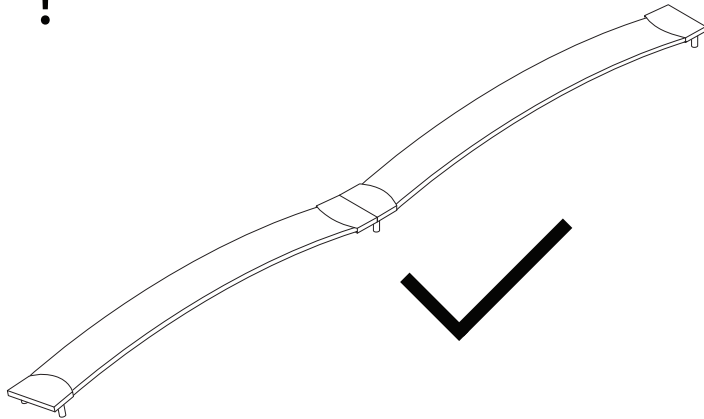

6

