









Assembly Instruction

Montageanleitung










130691/130692/130693/130694
130695/130696/130697/130698

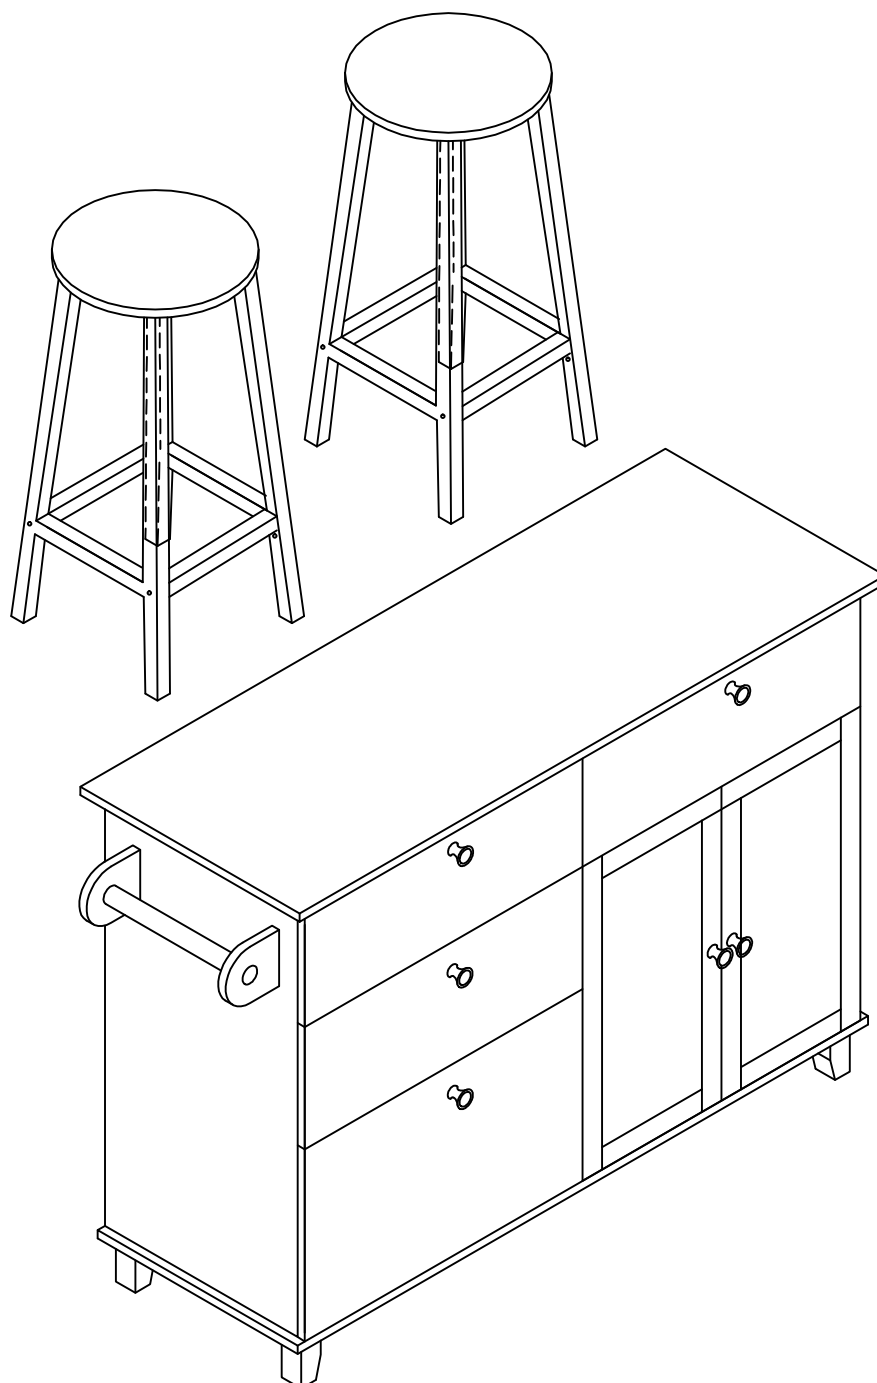


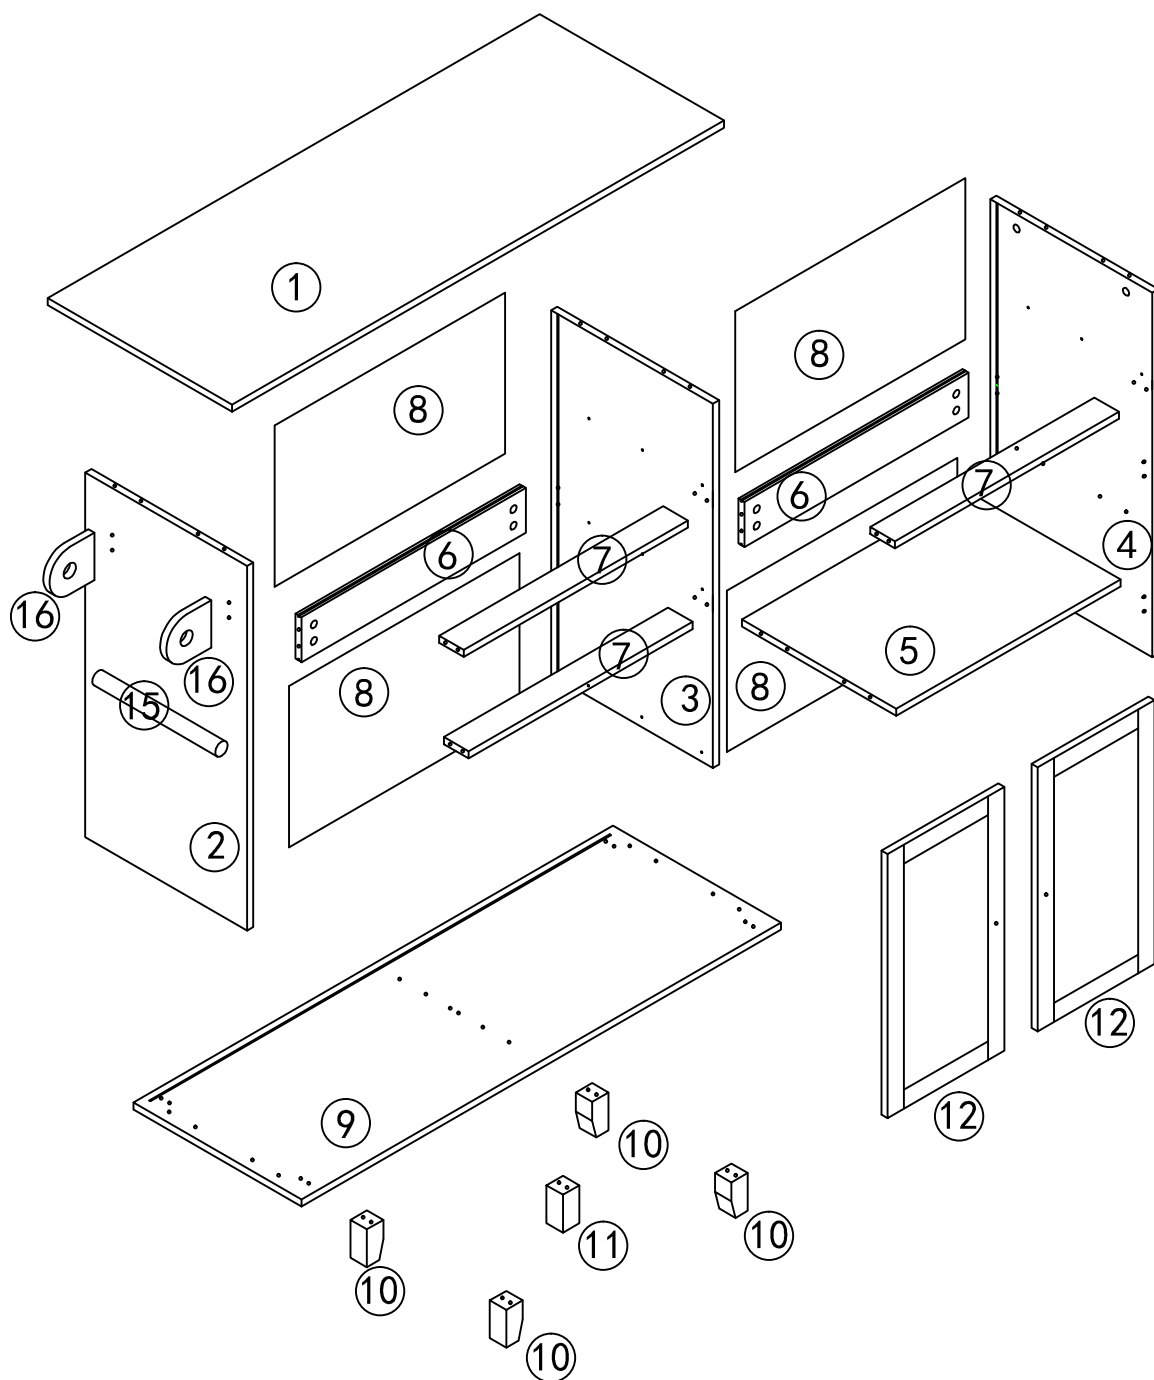


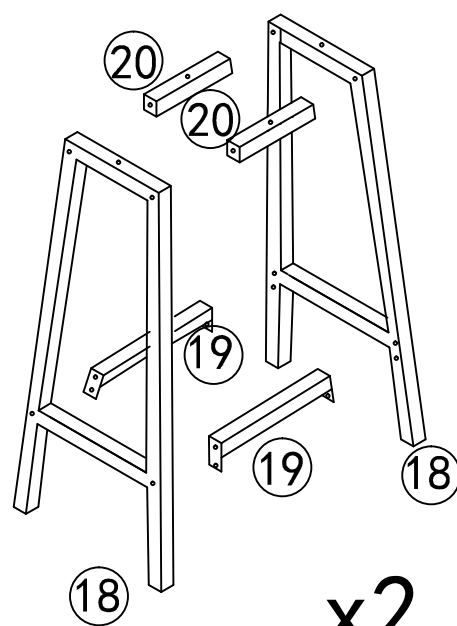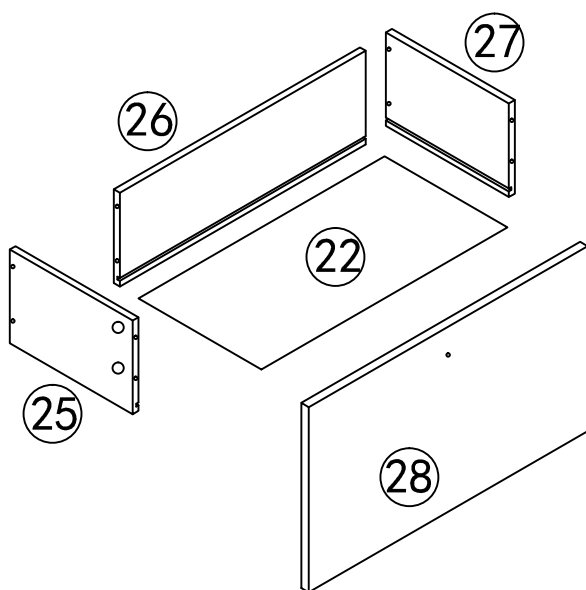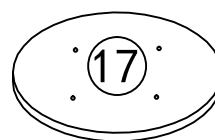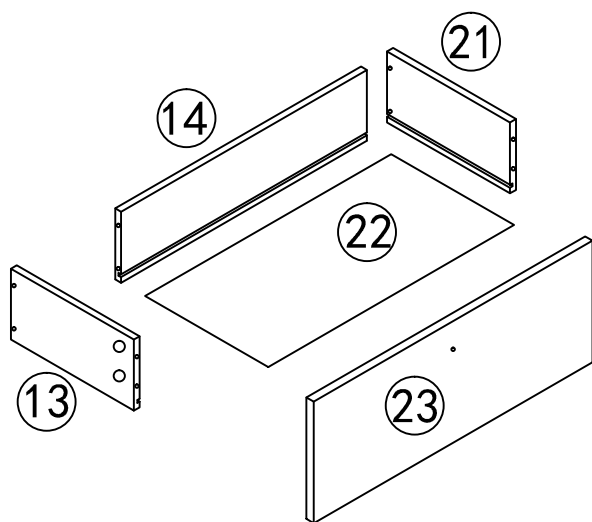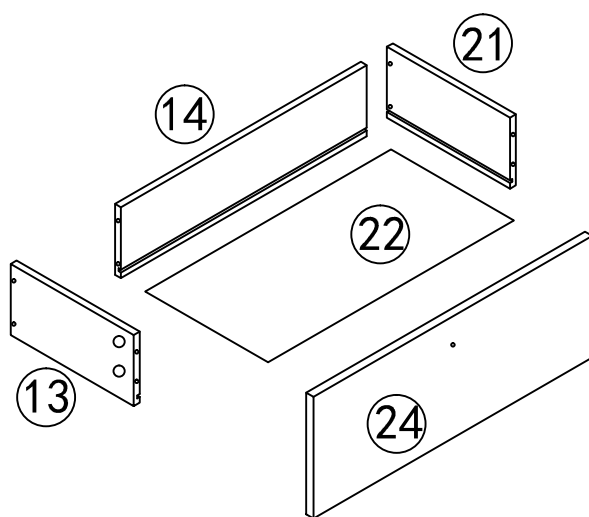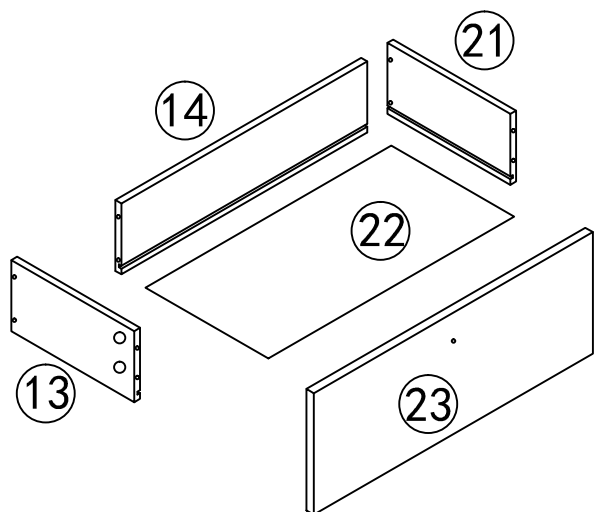



x2

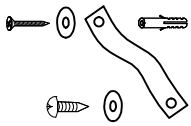		 ø6x30mm
A x34	B x40	C x20
	 ø4x40mm	
D x3	E x22	F x2
	 ø4x14mm	
G x2	H x18	I x6
 ø4x20mm	 ø4x30mm	 ø3x12mm
J x6	K x16	L x40
	 ø3x14mm	 ø6x12mm
M x16	N x16	O x8
 ø6x35mm		 ø6x50mm
P x8	Q x1	R x1
 ø6x40mm		
S x16	T x1	CL x4
		
DL x4	DR x4	CR x4
		
U x1	V x2	



1

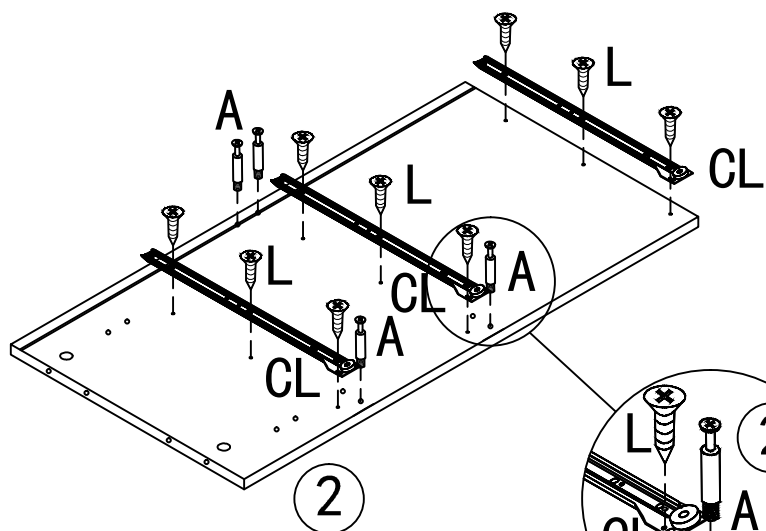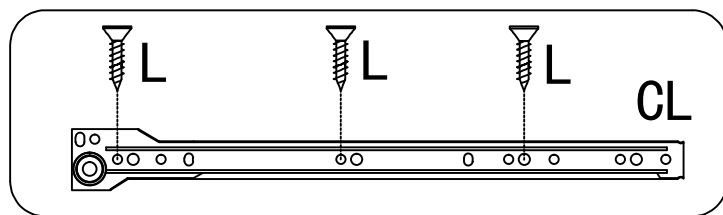



2

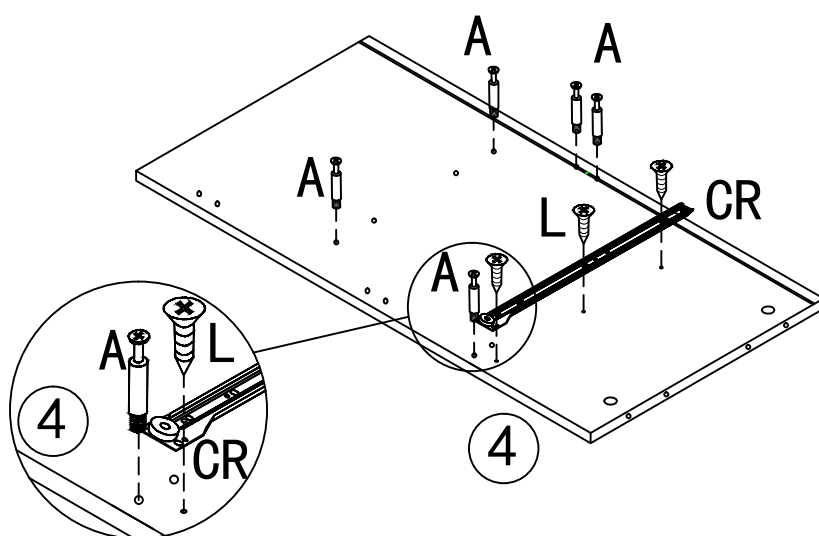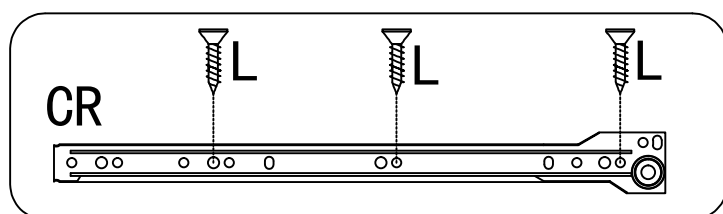

3

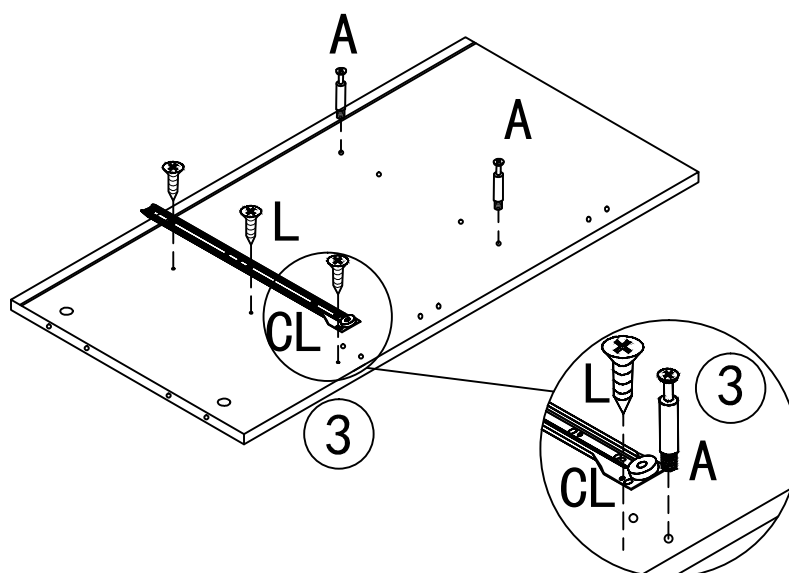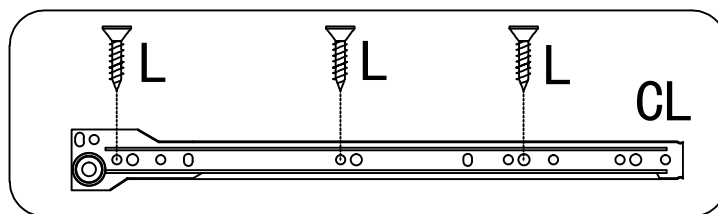

4

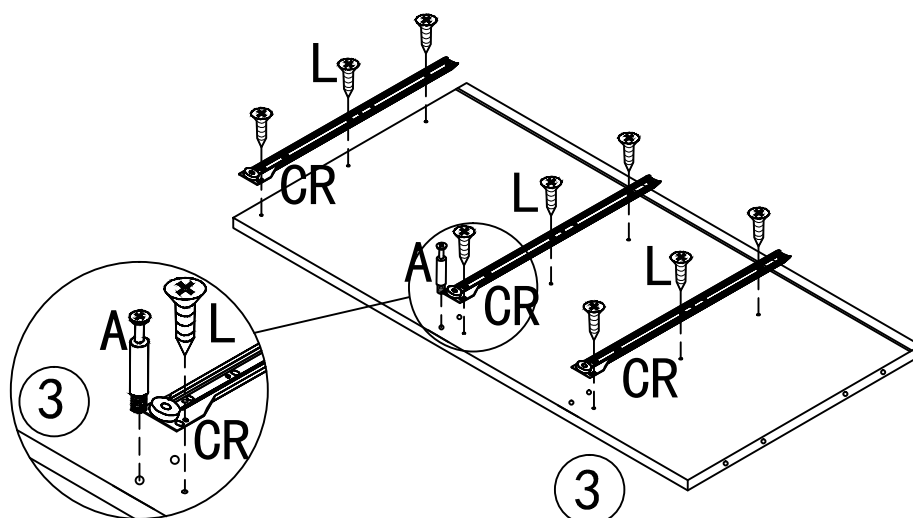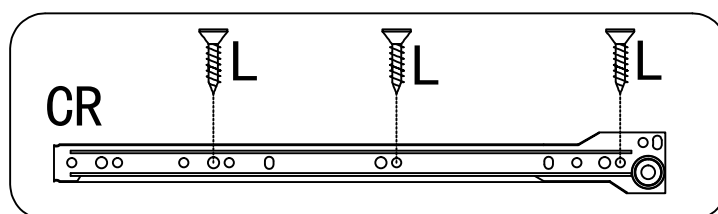


Step 1: Insert the longer side of the hardware "D" through Plate #3.

Schritt 1: Führen Sie die längere Seite des Beschlags "D" durch die Platte Nr. 3.


Step 2: Secure it to "B"

Schritt 2: Befestigen Sie es an "B".


5

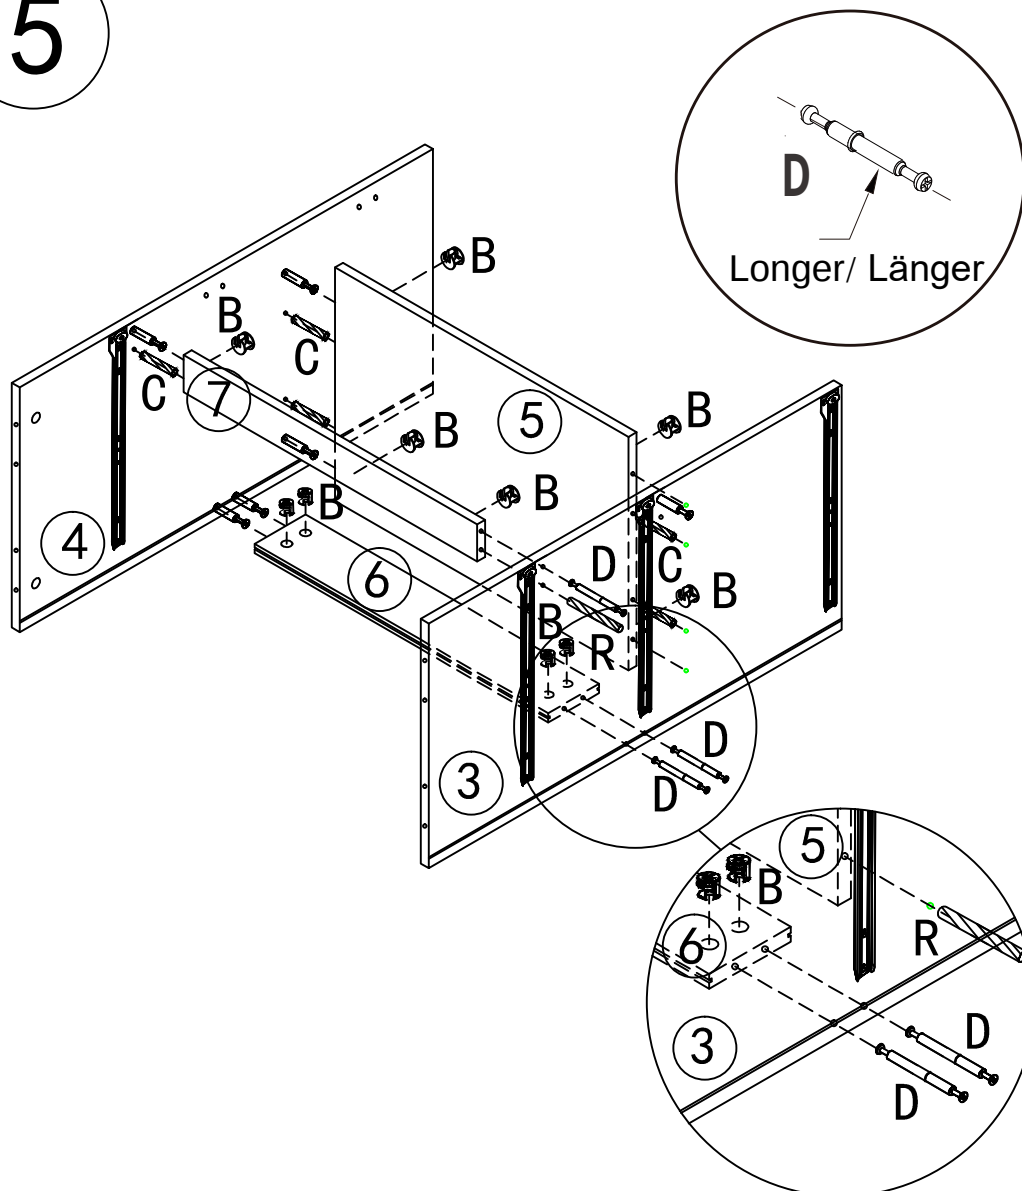


6

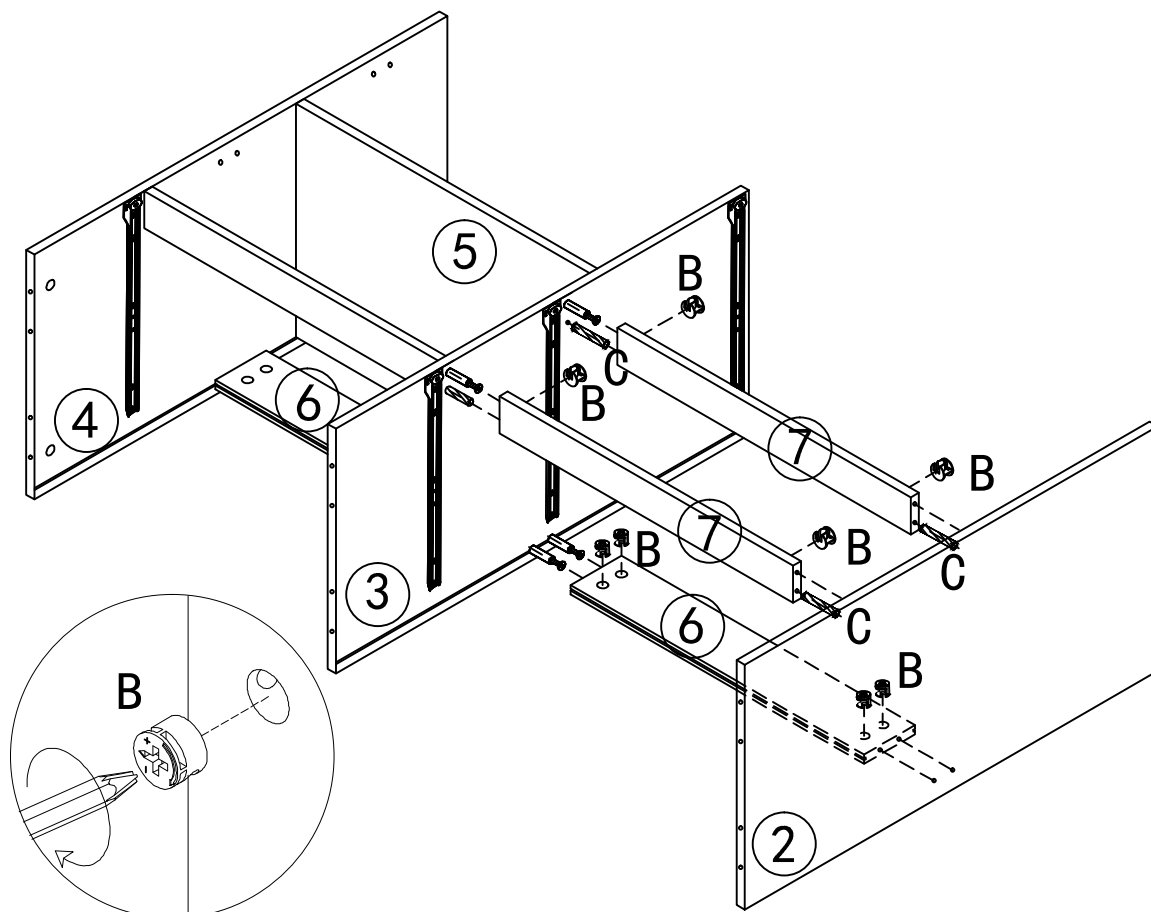


7

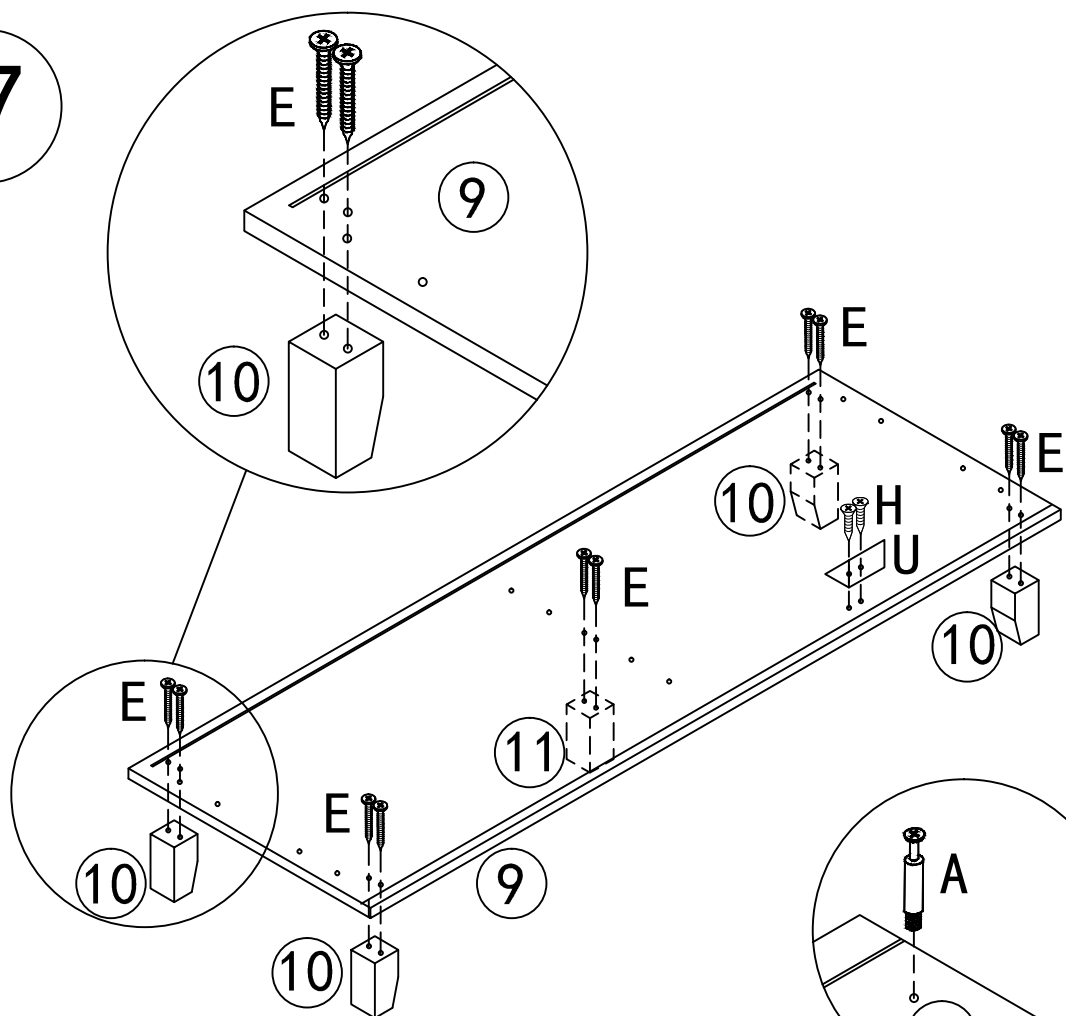



8

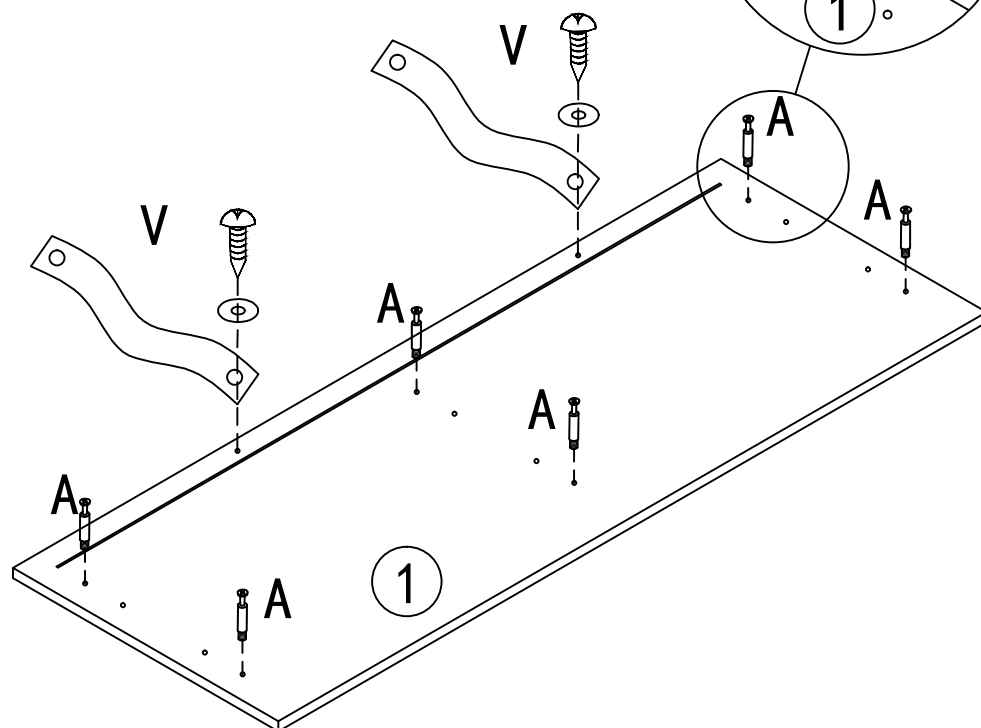


9

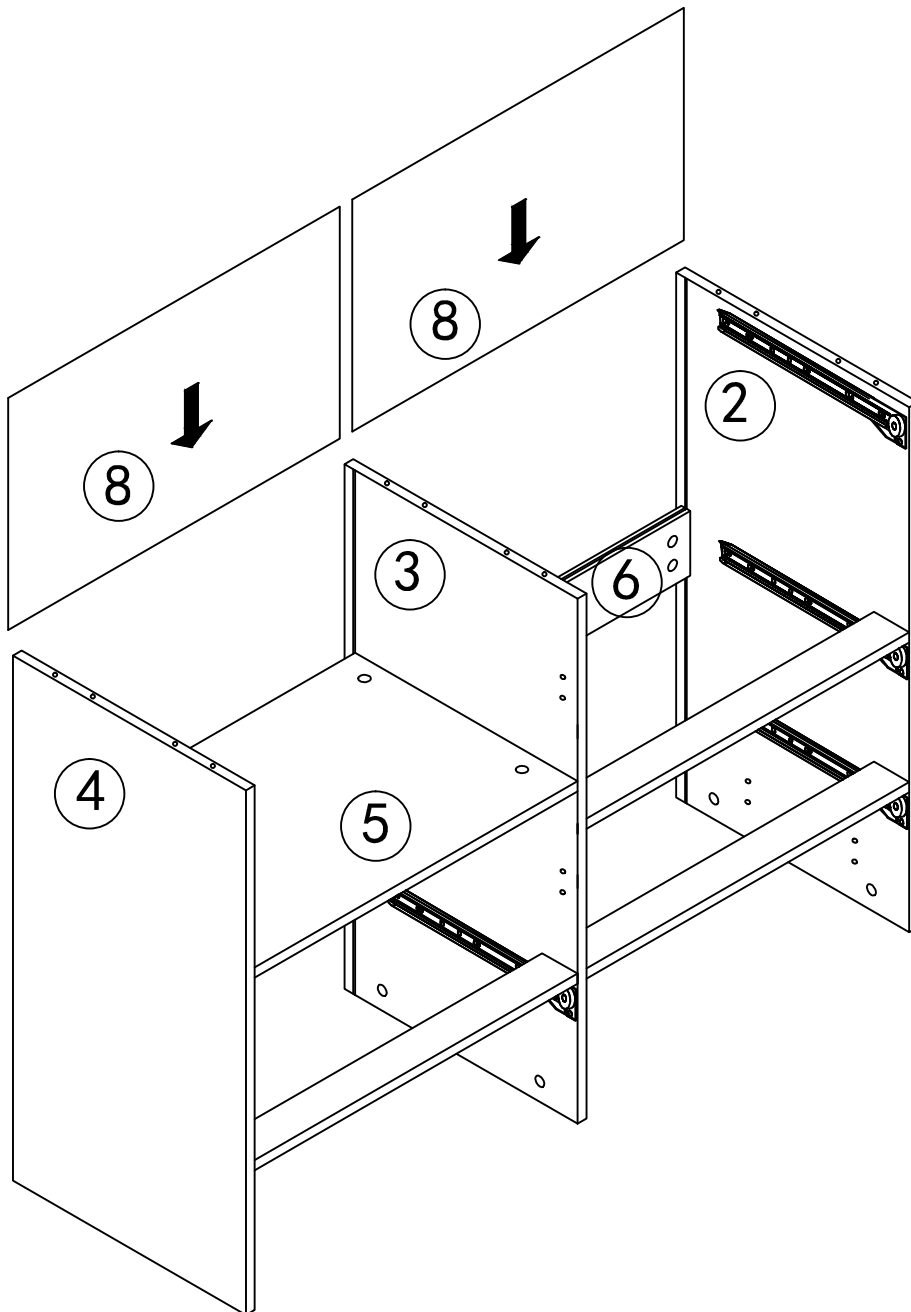


10

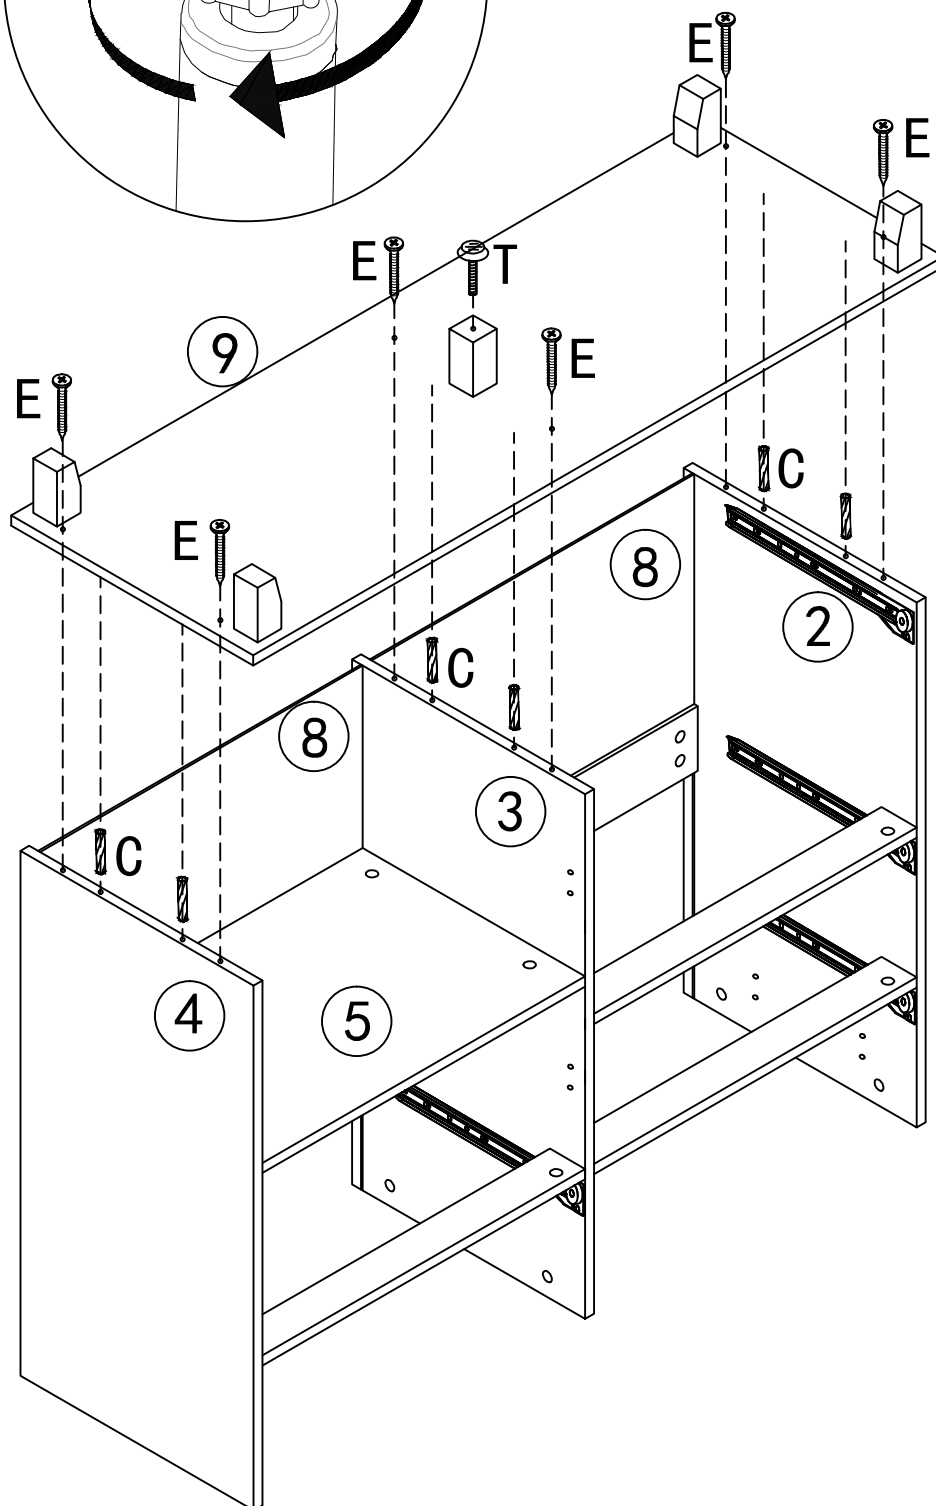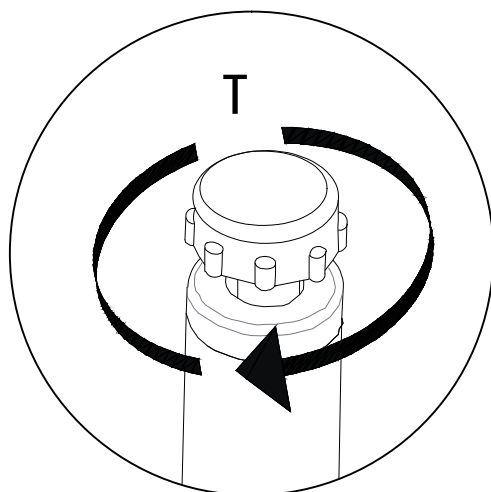


11

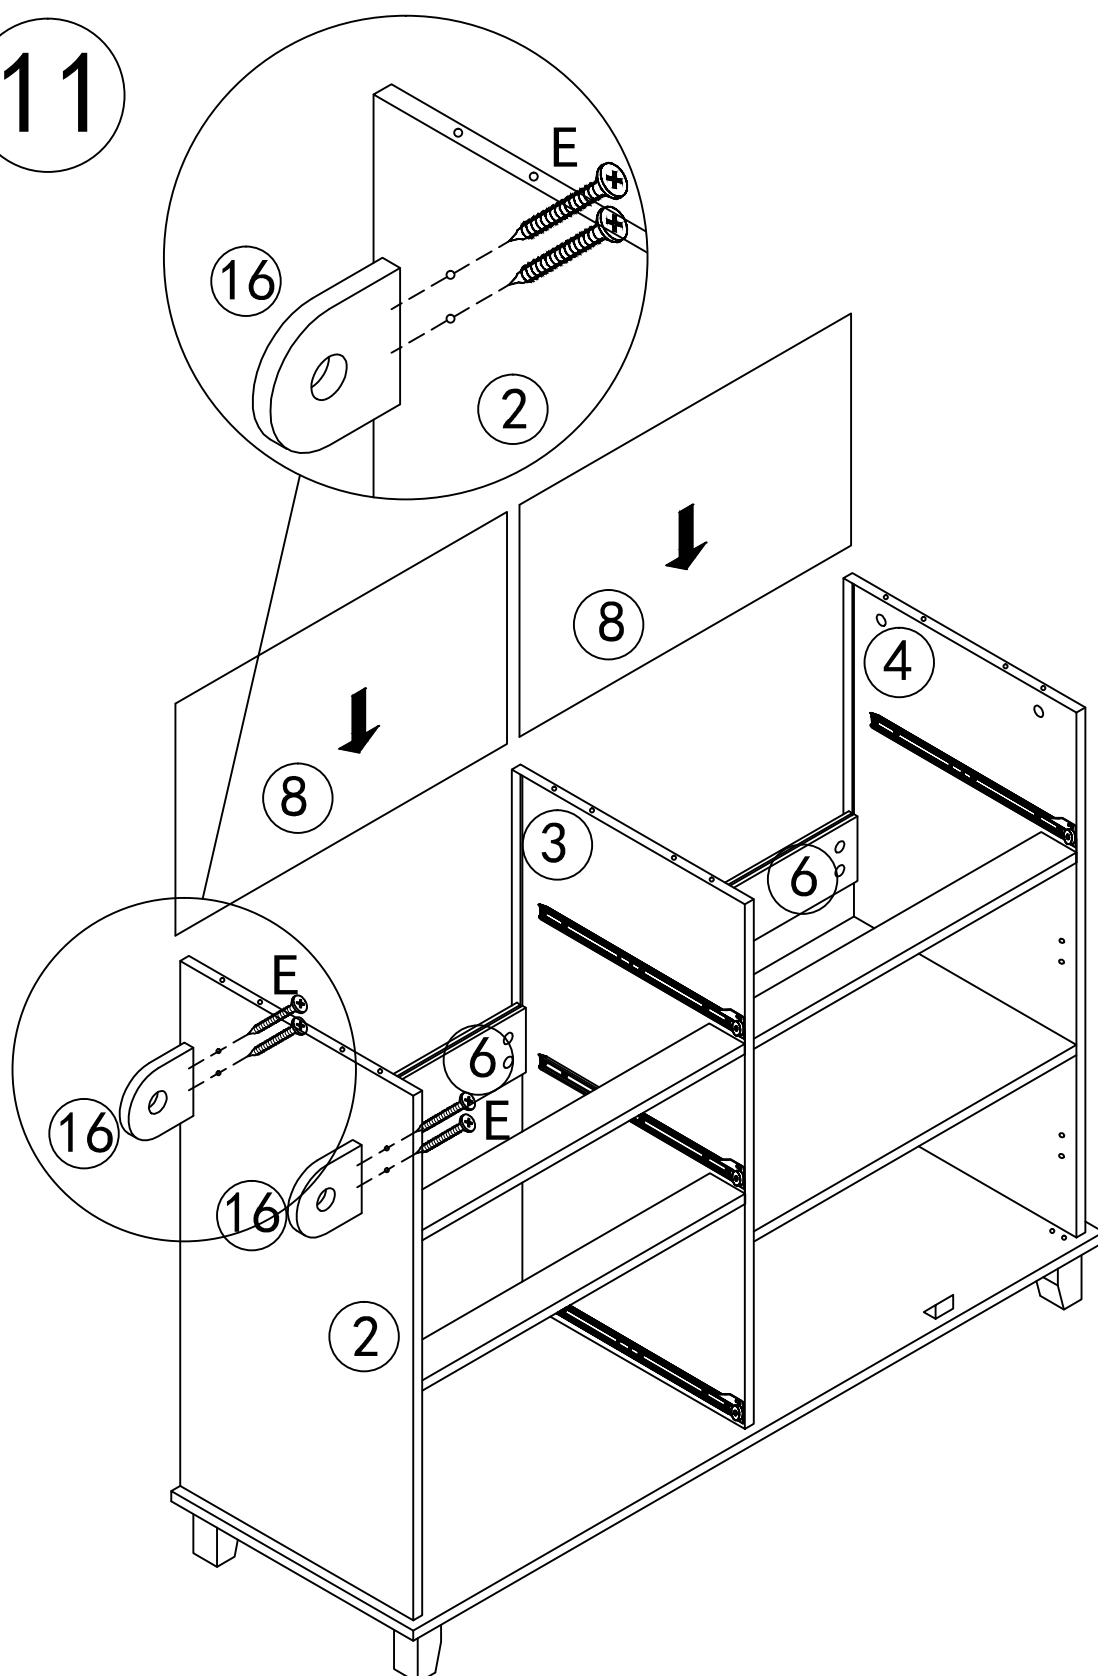


12

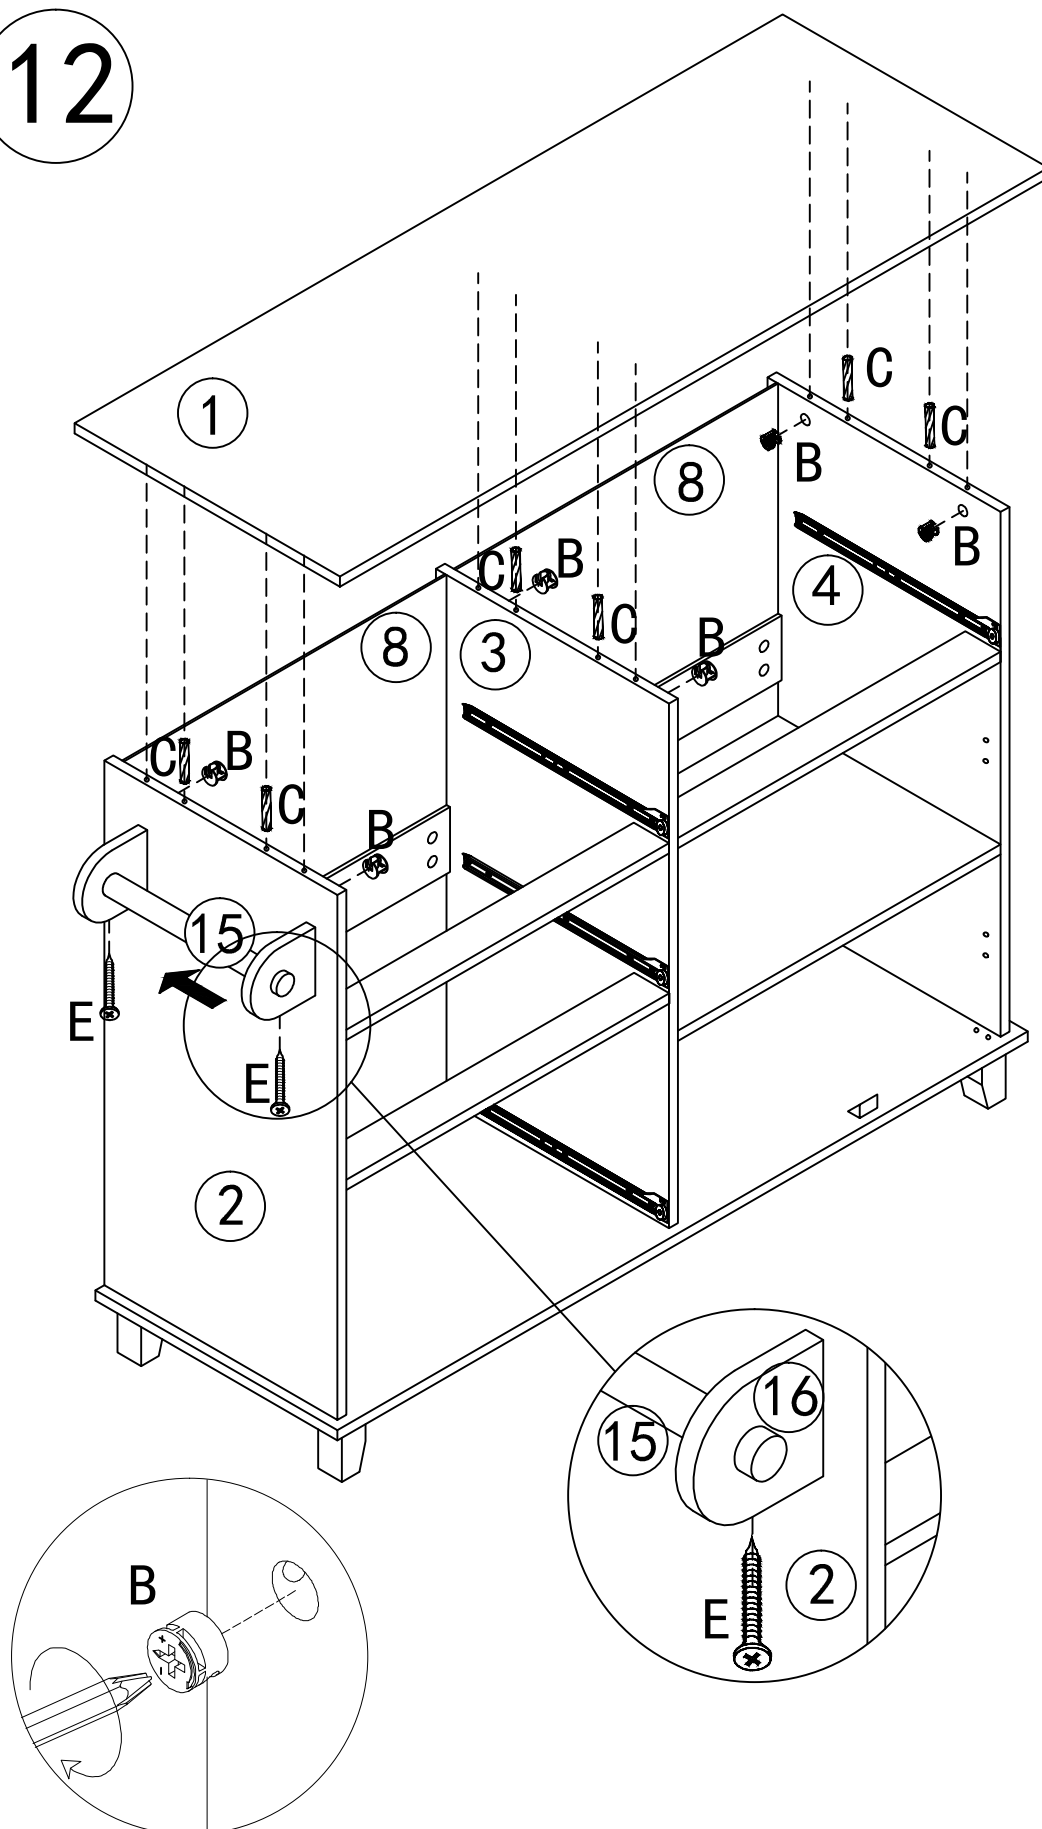


13

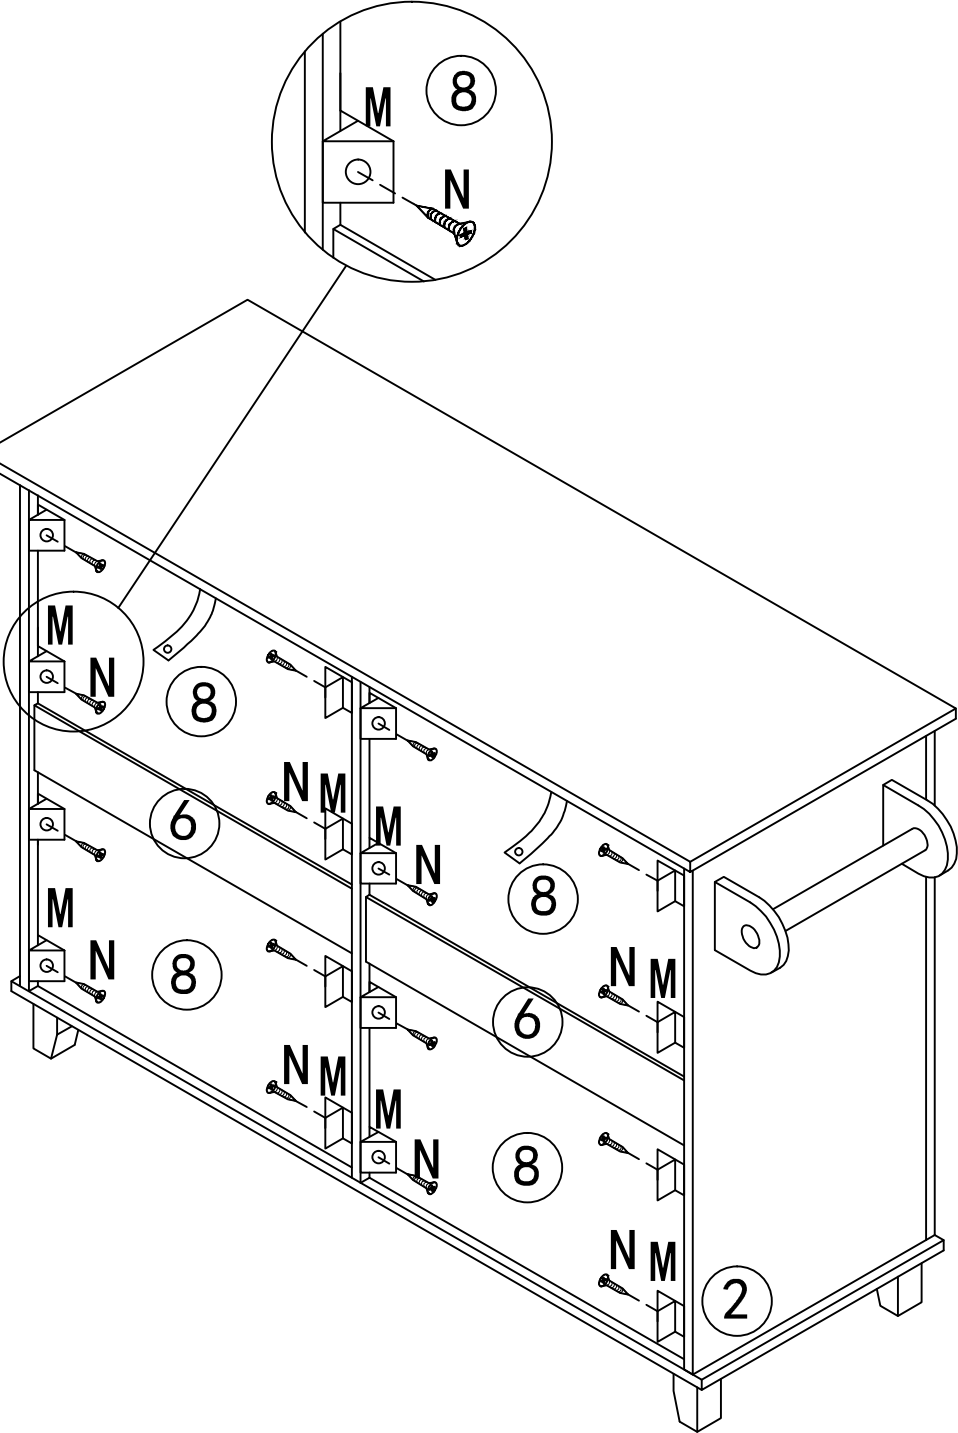


14

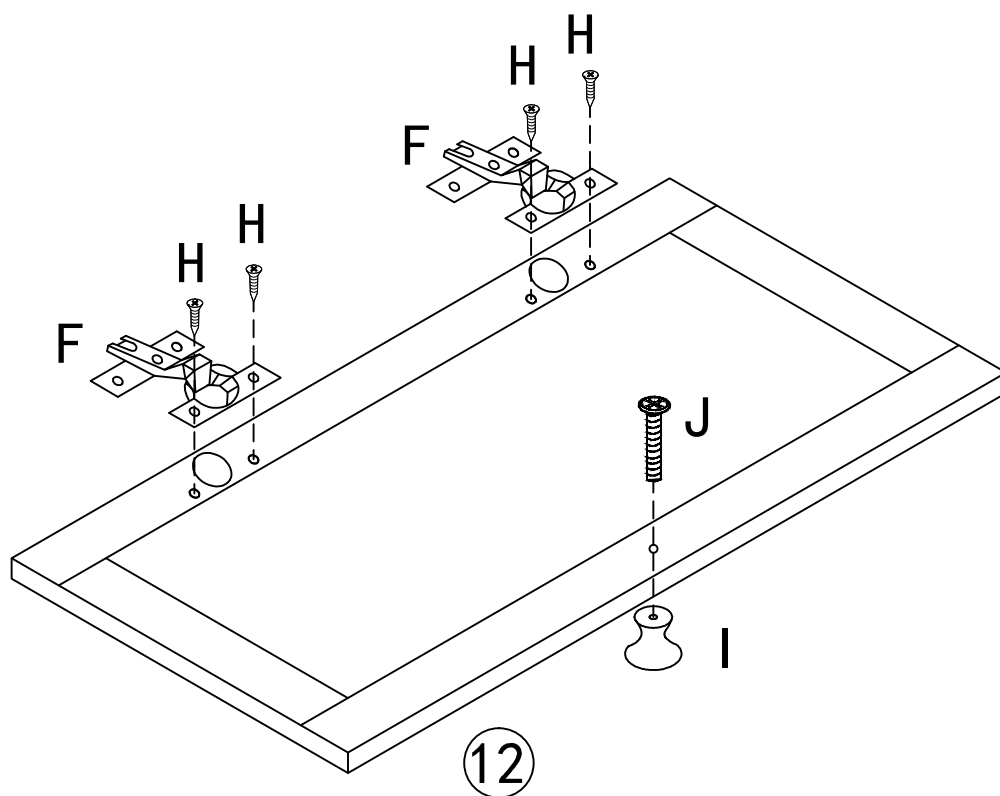

15

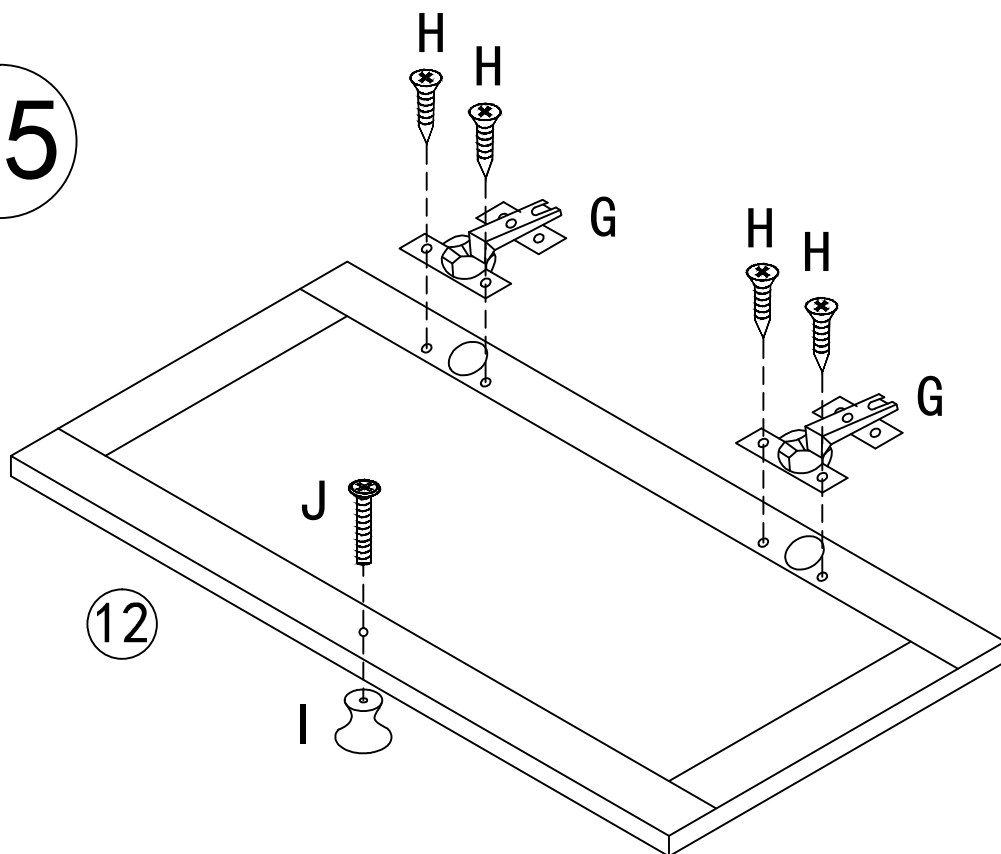


16

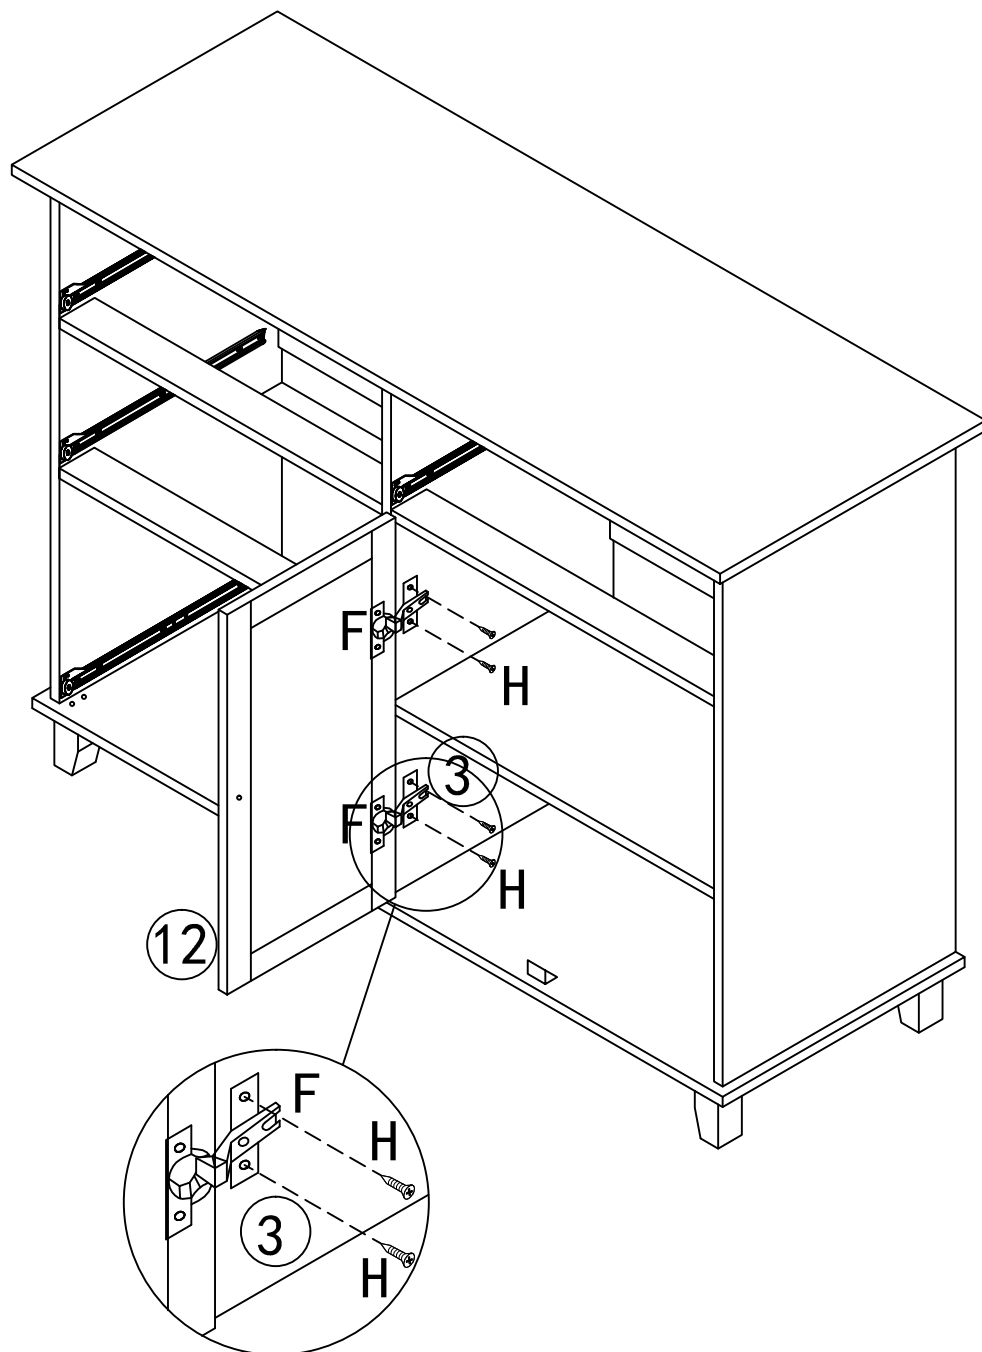



The left door of plate# 12 requires Hinge F.
Für die linke Tür der Platte Nr. 12 ist Scharnier F erforderlich.

17

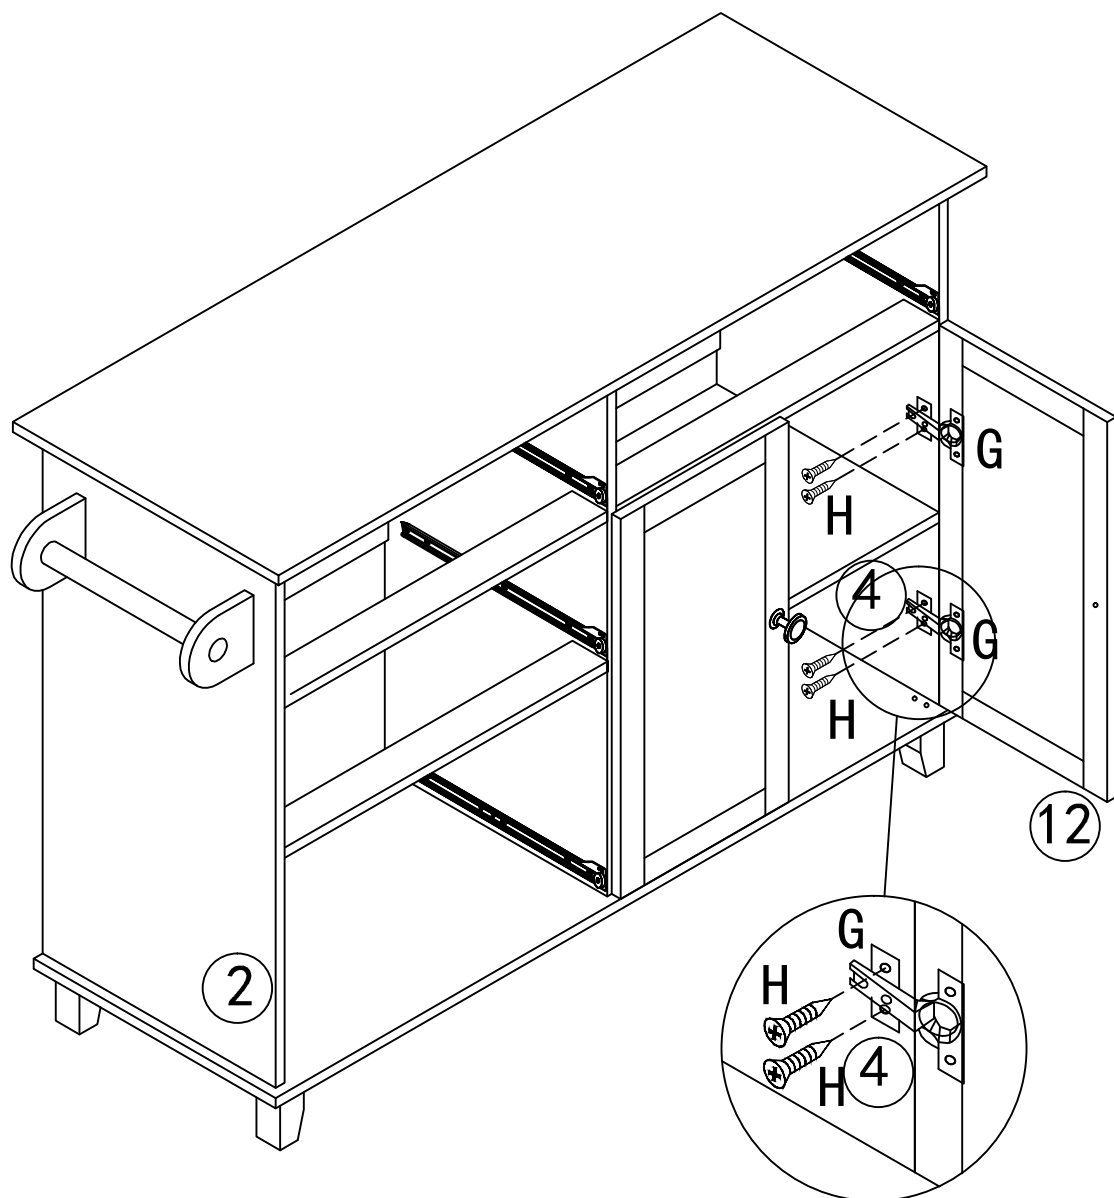


The Right door of plate#12 requires Hinge G.
Für die rechte Tür der Platte Nr. 12 ist Scharnier G erforderlich.



18

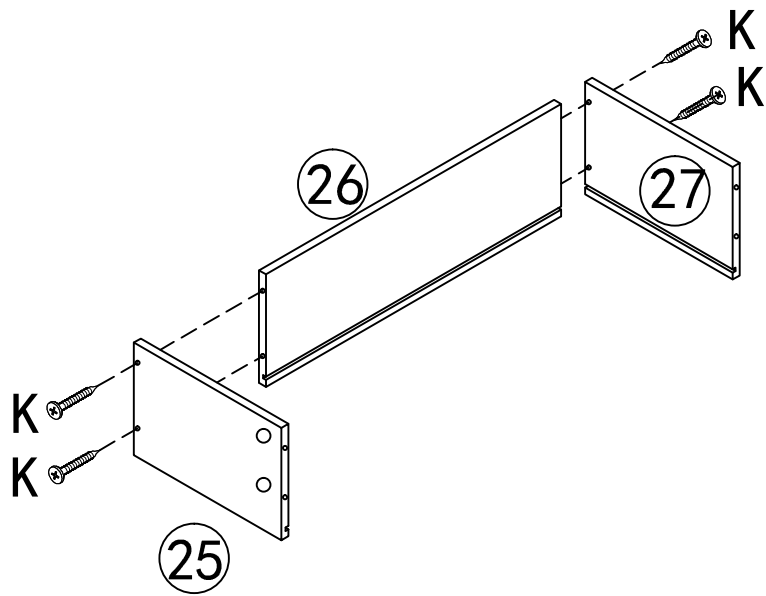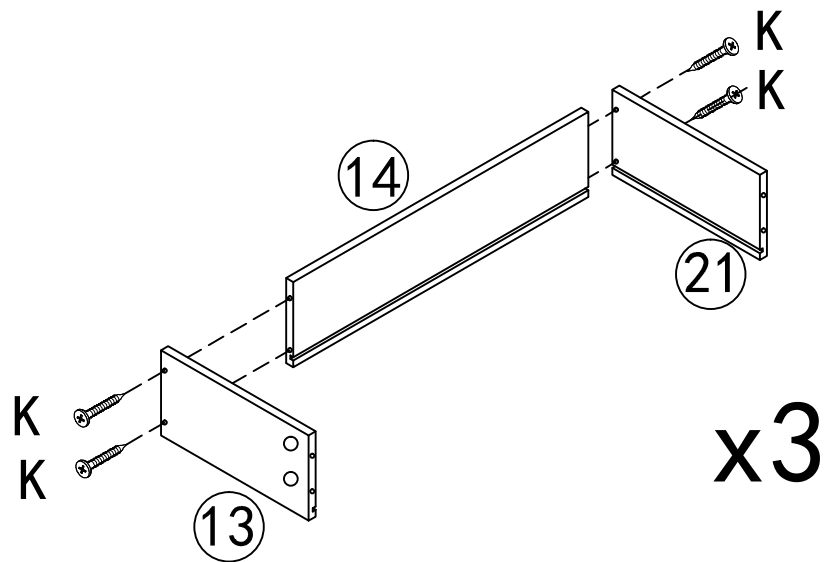





19

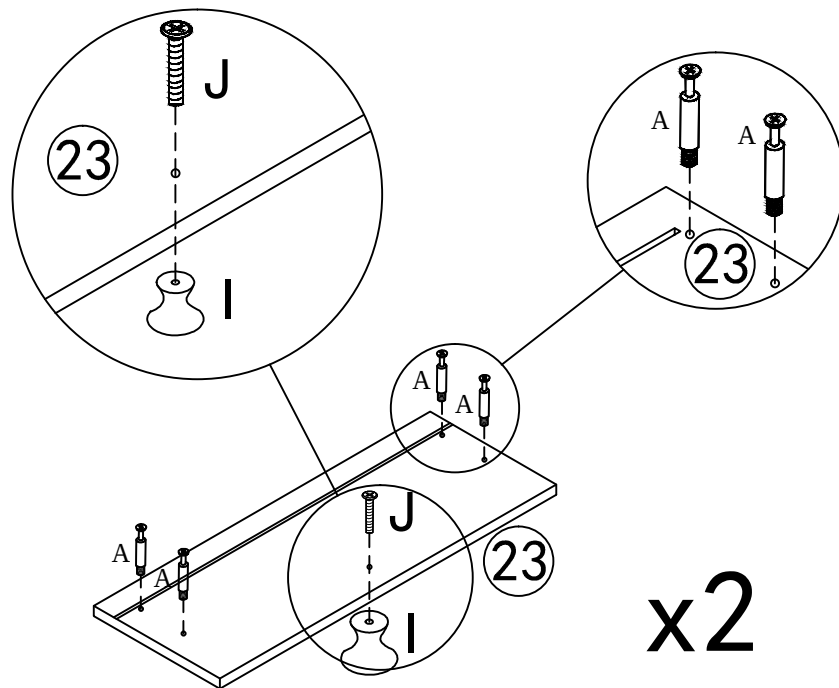


x2

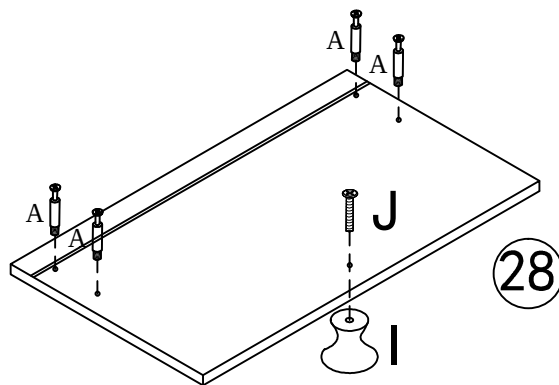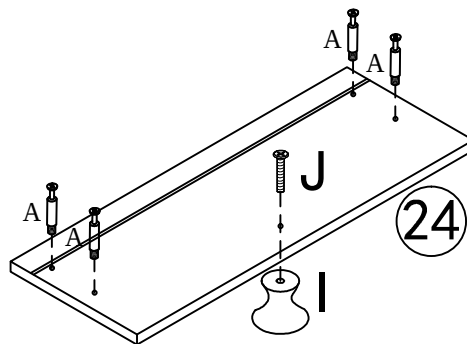






20

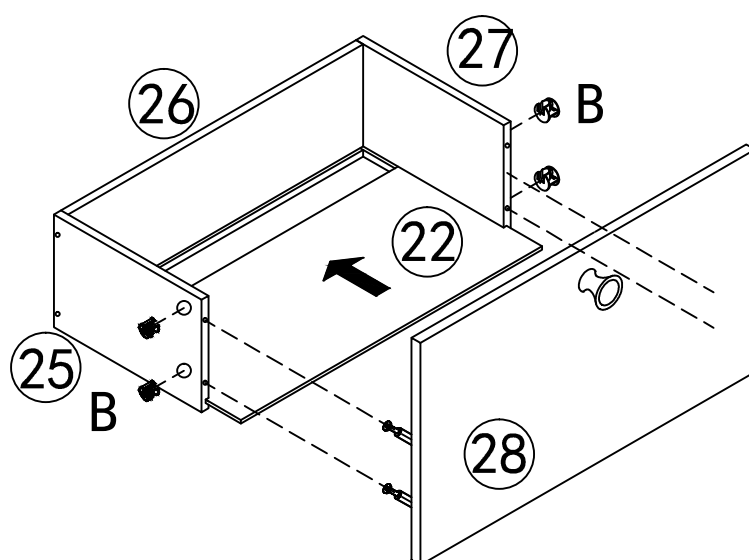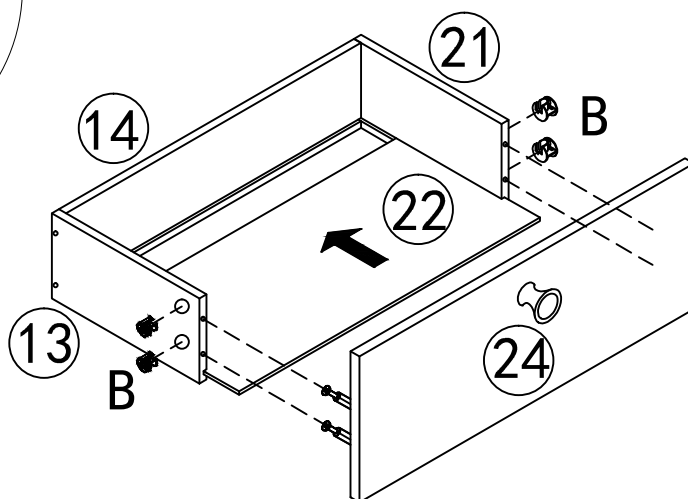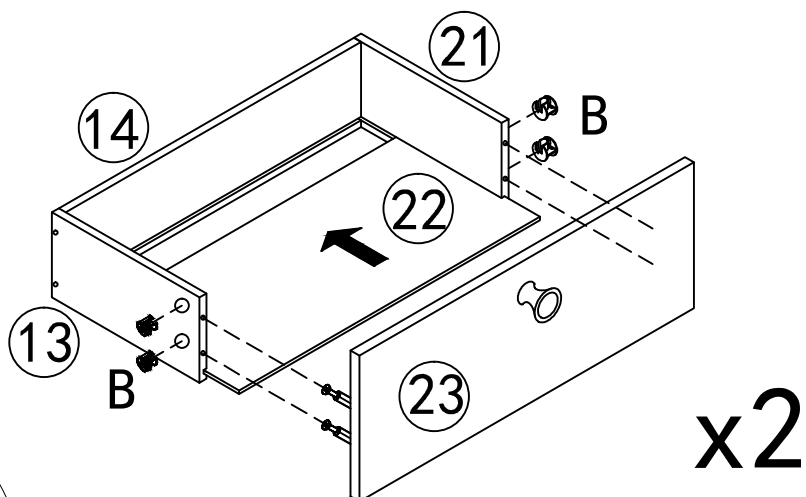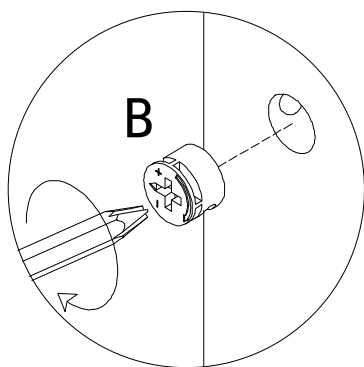


21

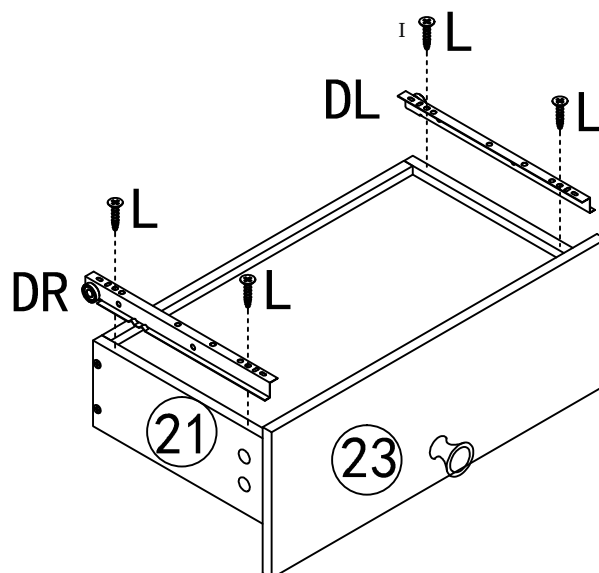



x2

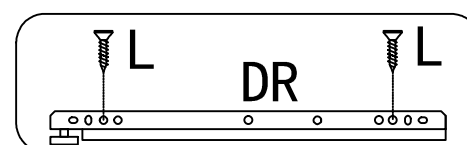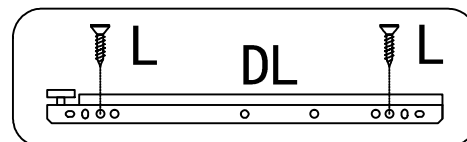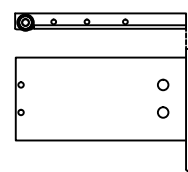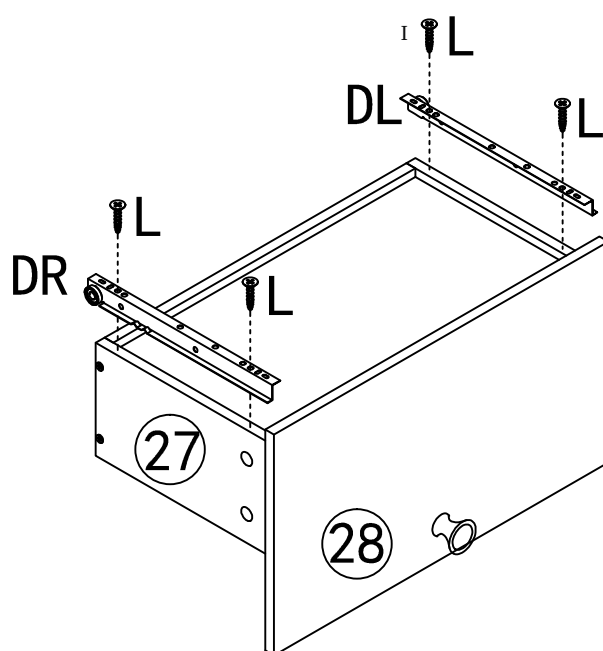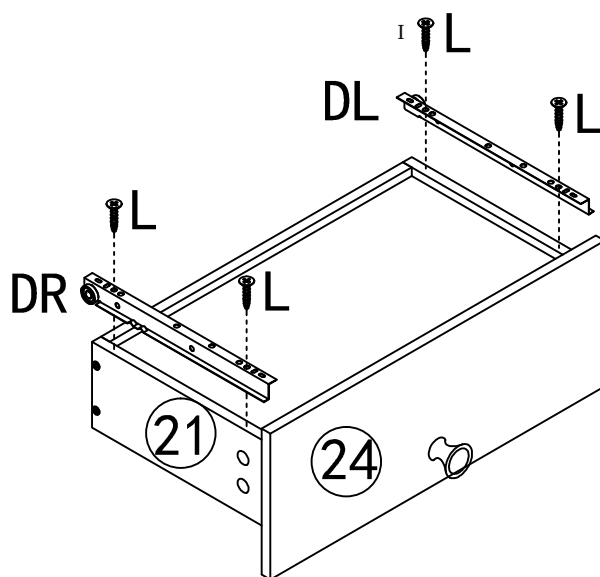

22

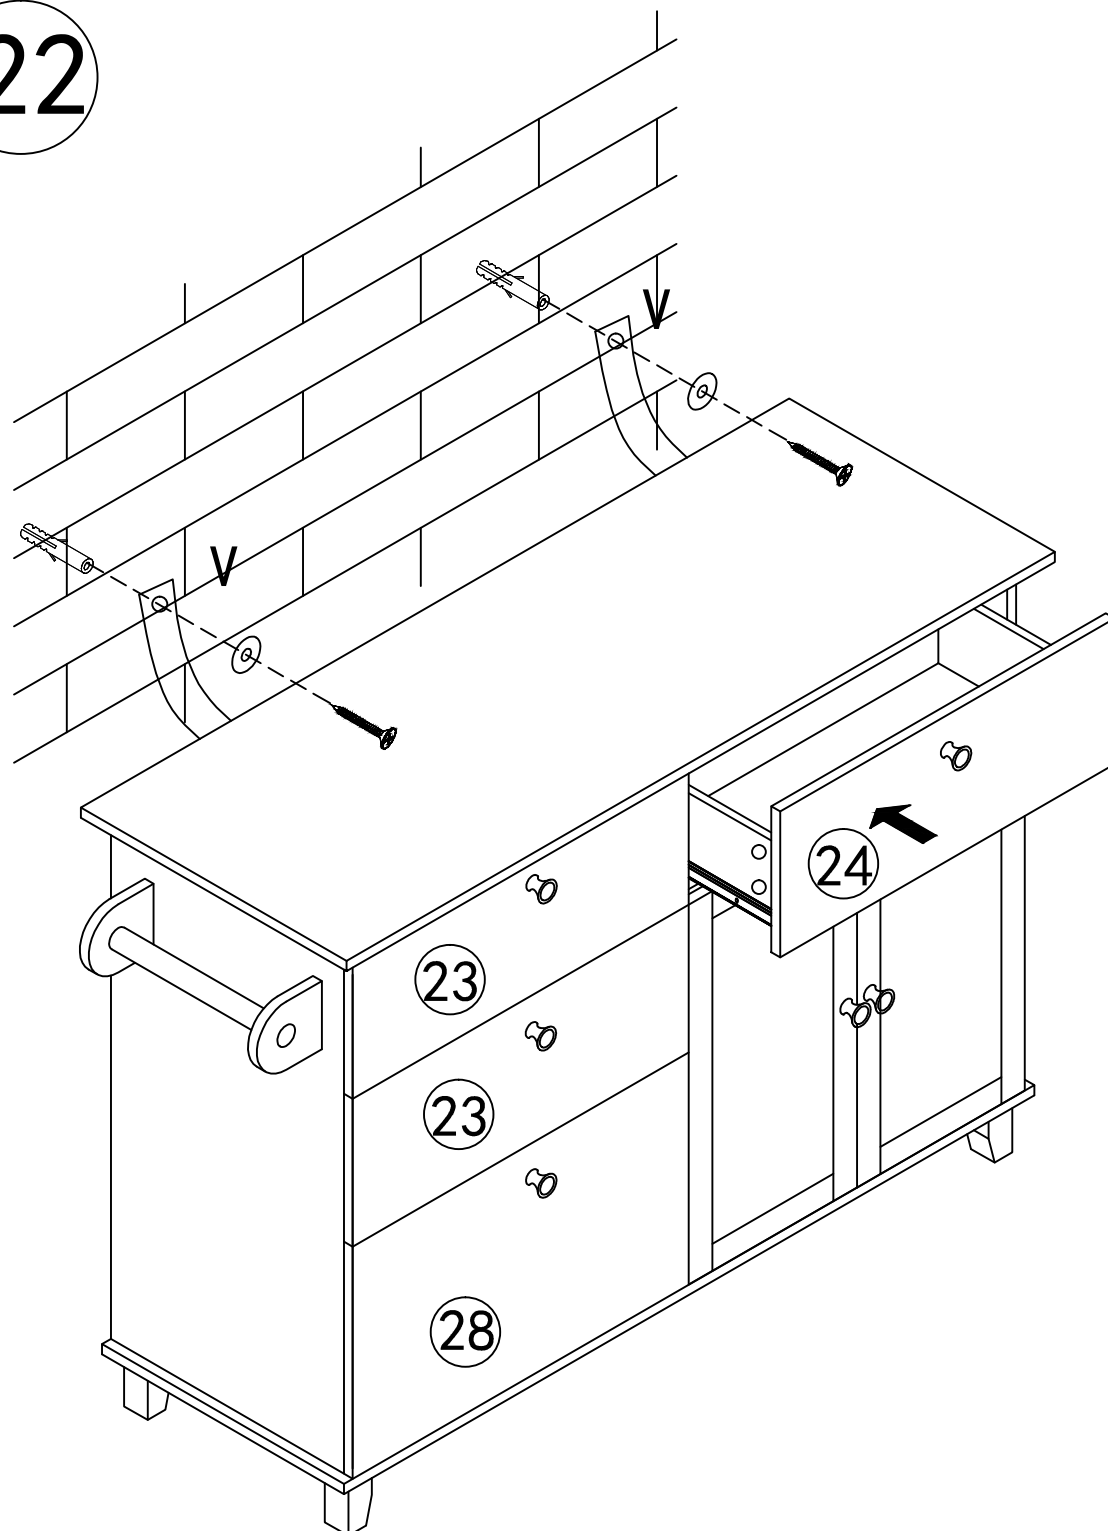


23

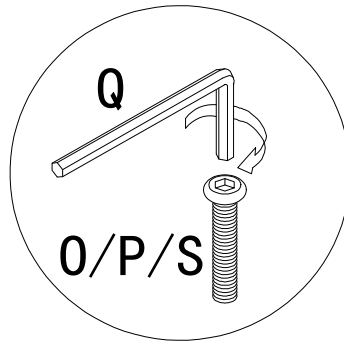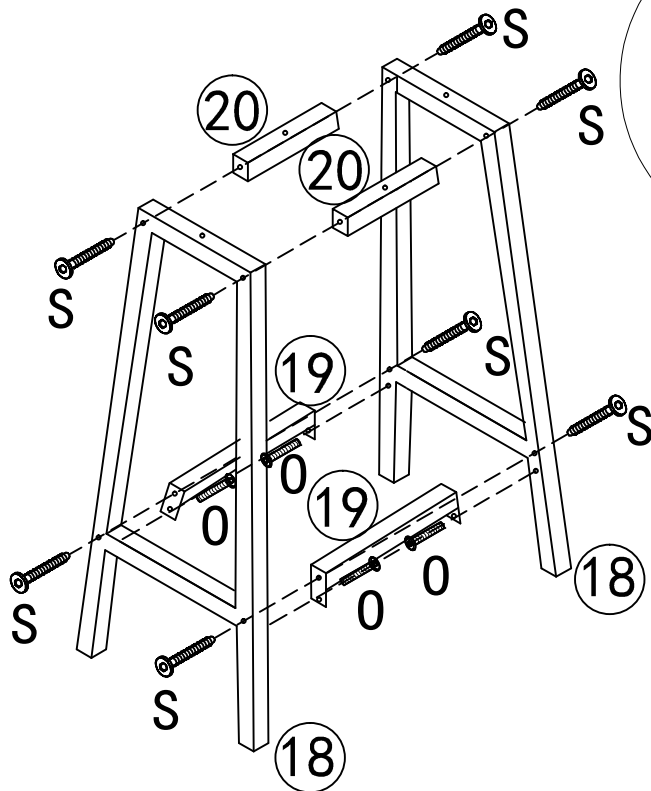

x2

24

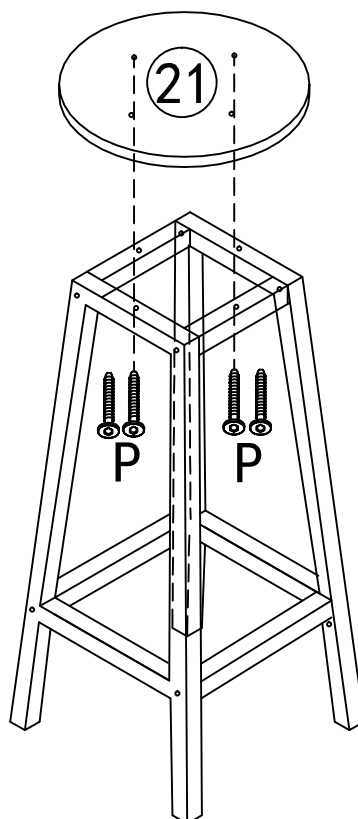

x2